



**RNAV STANDARD DEPARTURE CHART - INSTRUMENT  
(SID) - ICAO**

**PRAHA/RUZYŇĚ  
RNAV SID RWY 06**

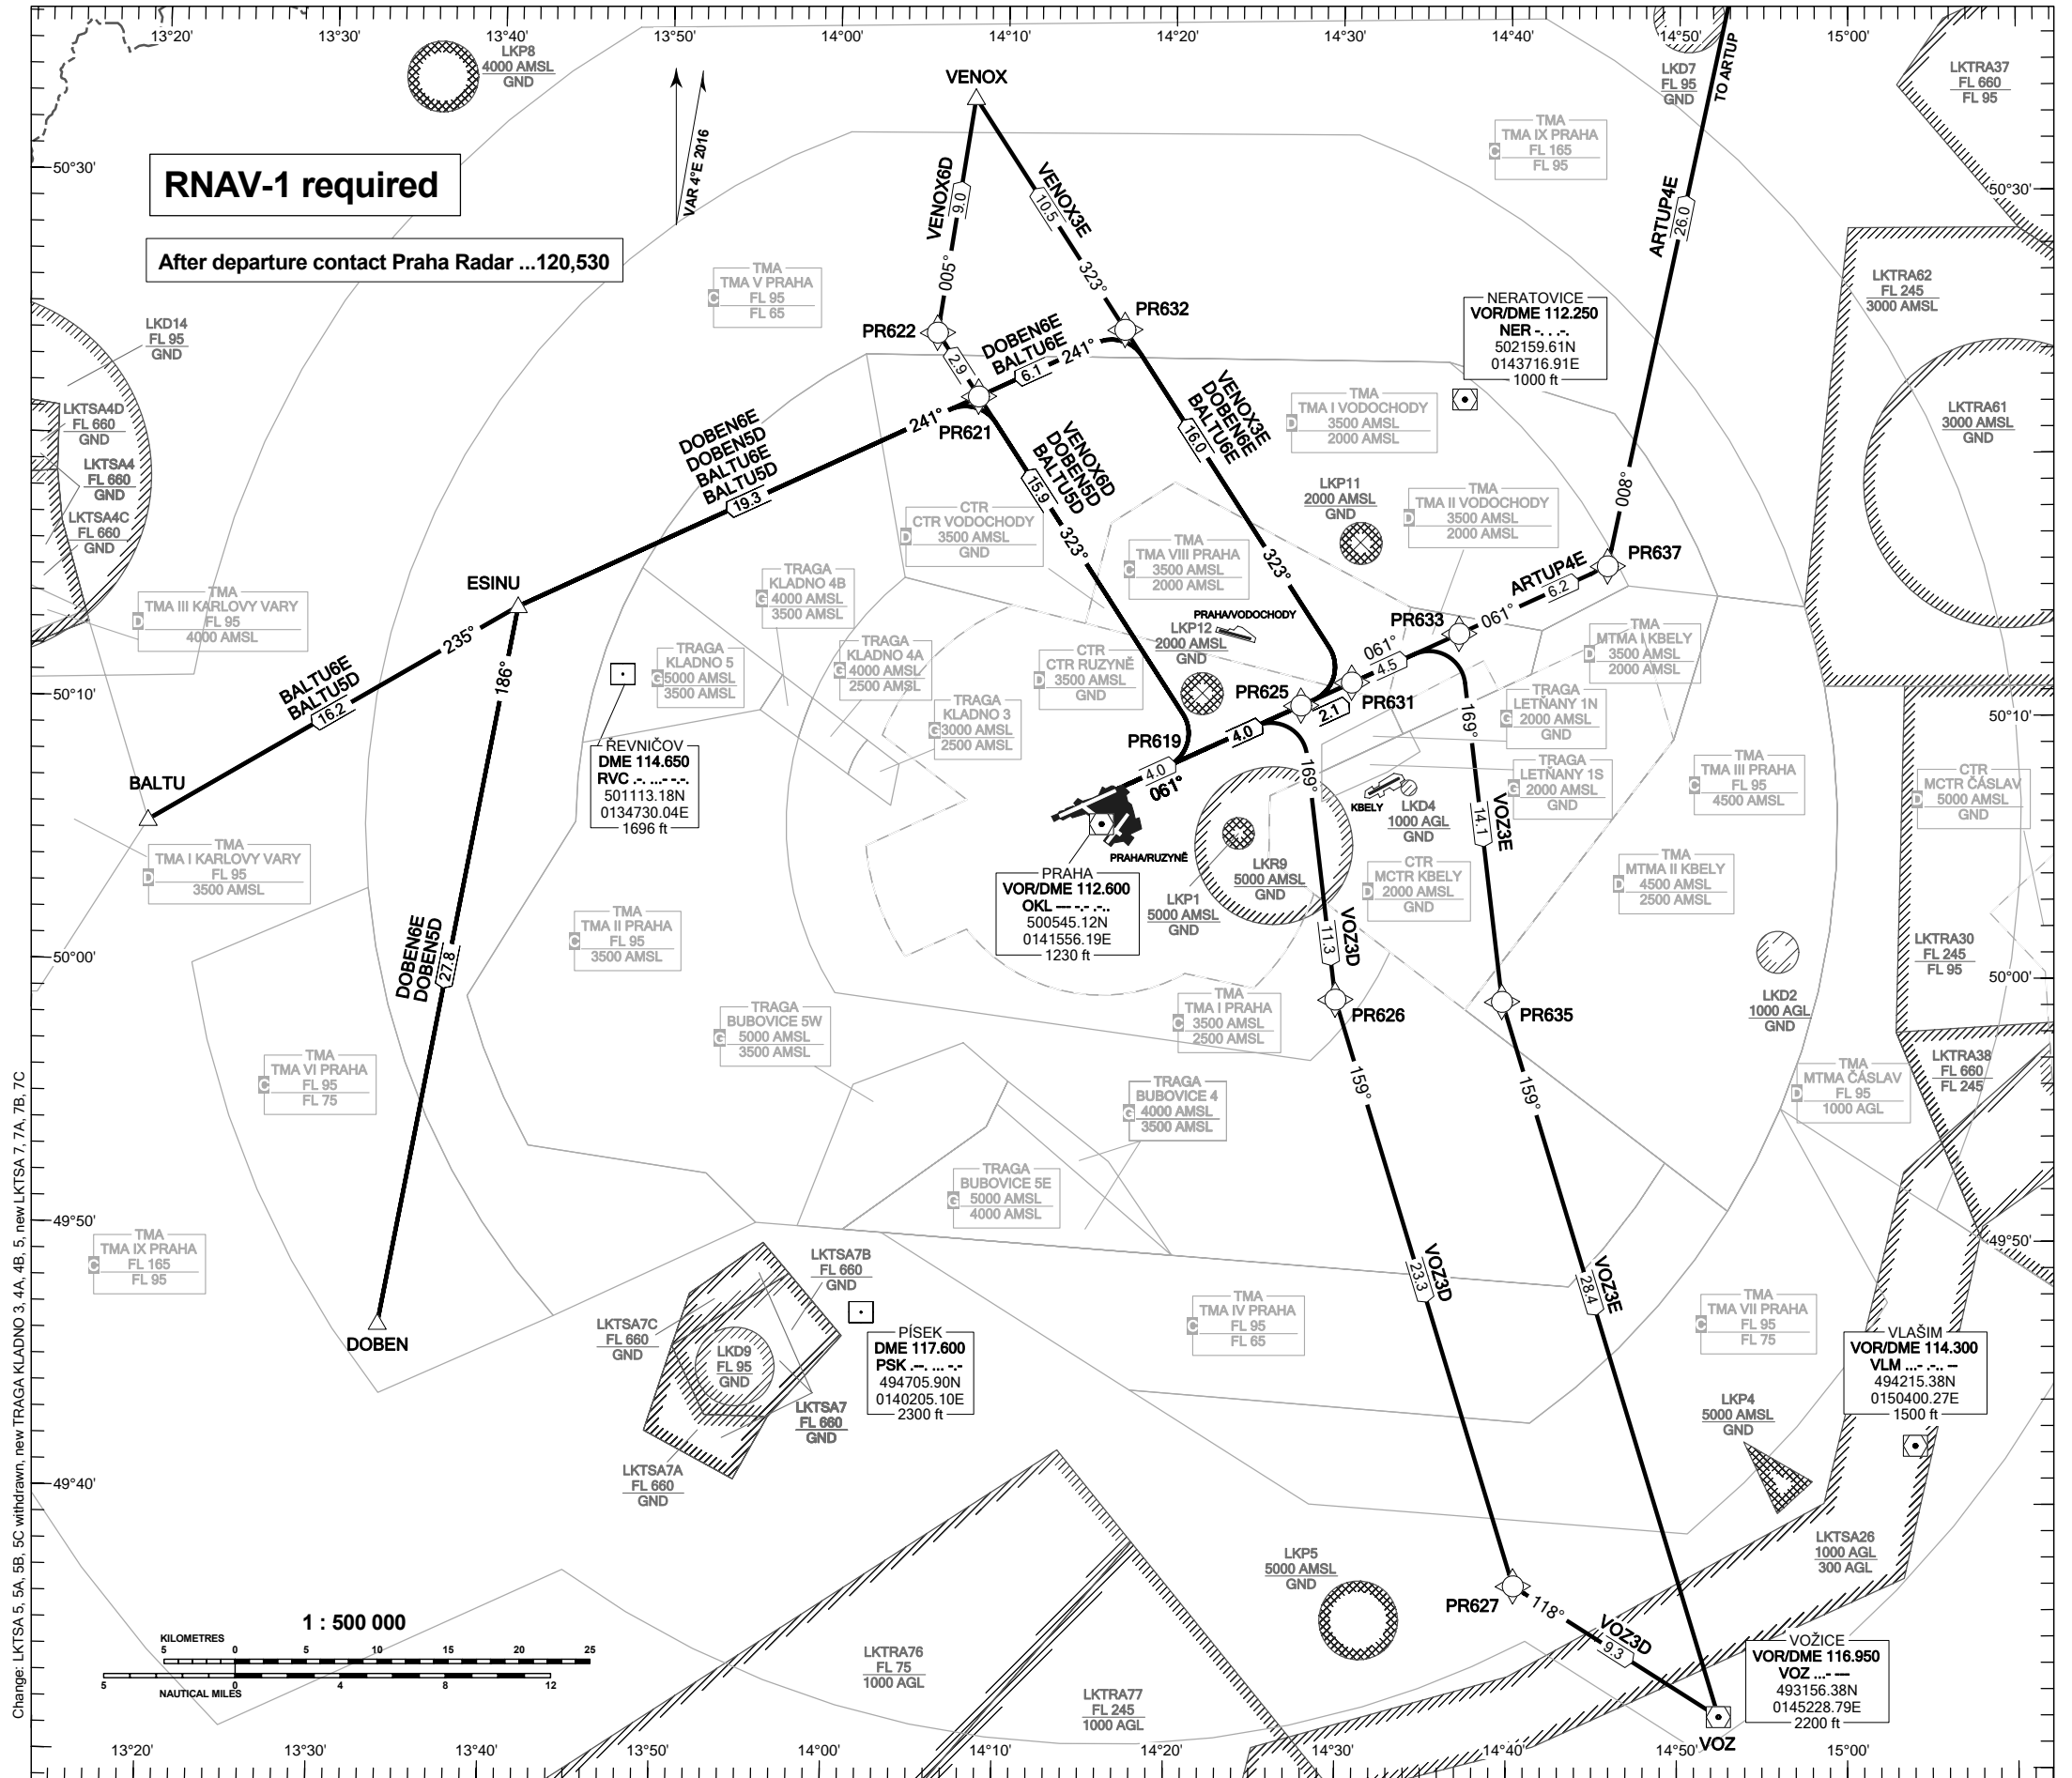

**RNAV-1 required**  
After departure contact Praha Radar ...120,530

PRAHA APPROACH / RADAR	120.530
RUZYŇĚ APPROACH / RADAR	119.010
RUZYŇĚ RADAR / INFORMATION	118.310
SUPPLEMENTARY FREQ APP	136.080
RUZYŇĚ DELIVERY	120.060
RUZYŇĚ TOWER	134.560
SUPPLEMENTARY FREQ TWR	118.110
RUZYŇĚ GROUND	121.910
RUZYŇĚ ATIS	122.160
EMERGENCY FREQ	121.500

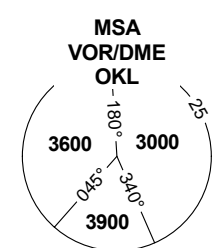

**TRANSITION ALTITUDE**  
5000

BEARINGS, TRACKS AND  
RADIALS ARE MAGNETIC  
ALTITUDES AND ELEVATIONS  
ARE IN FEET  
DISTANCES ARE IN NM

**DEPARTURE SPEED LIMIT  
BELOW FL 100**

JETS	MAX IAS 250 KT
PROPS	MAX IAS 180 KT

see AIP AD 2-LKPR-33, 2.22.4.3.5