


**RNAV STANDARD DEPARTURE CHART -  
INSTRUMENT (SID) - ICAO**

**PRAHA/RUZYŇĚ  
RNAV SID RWY 12**

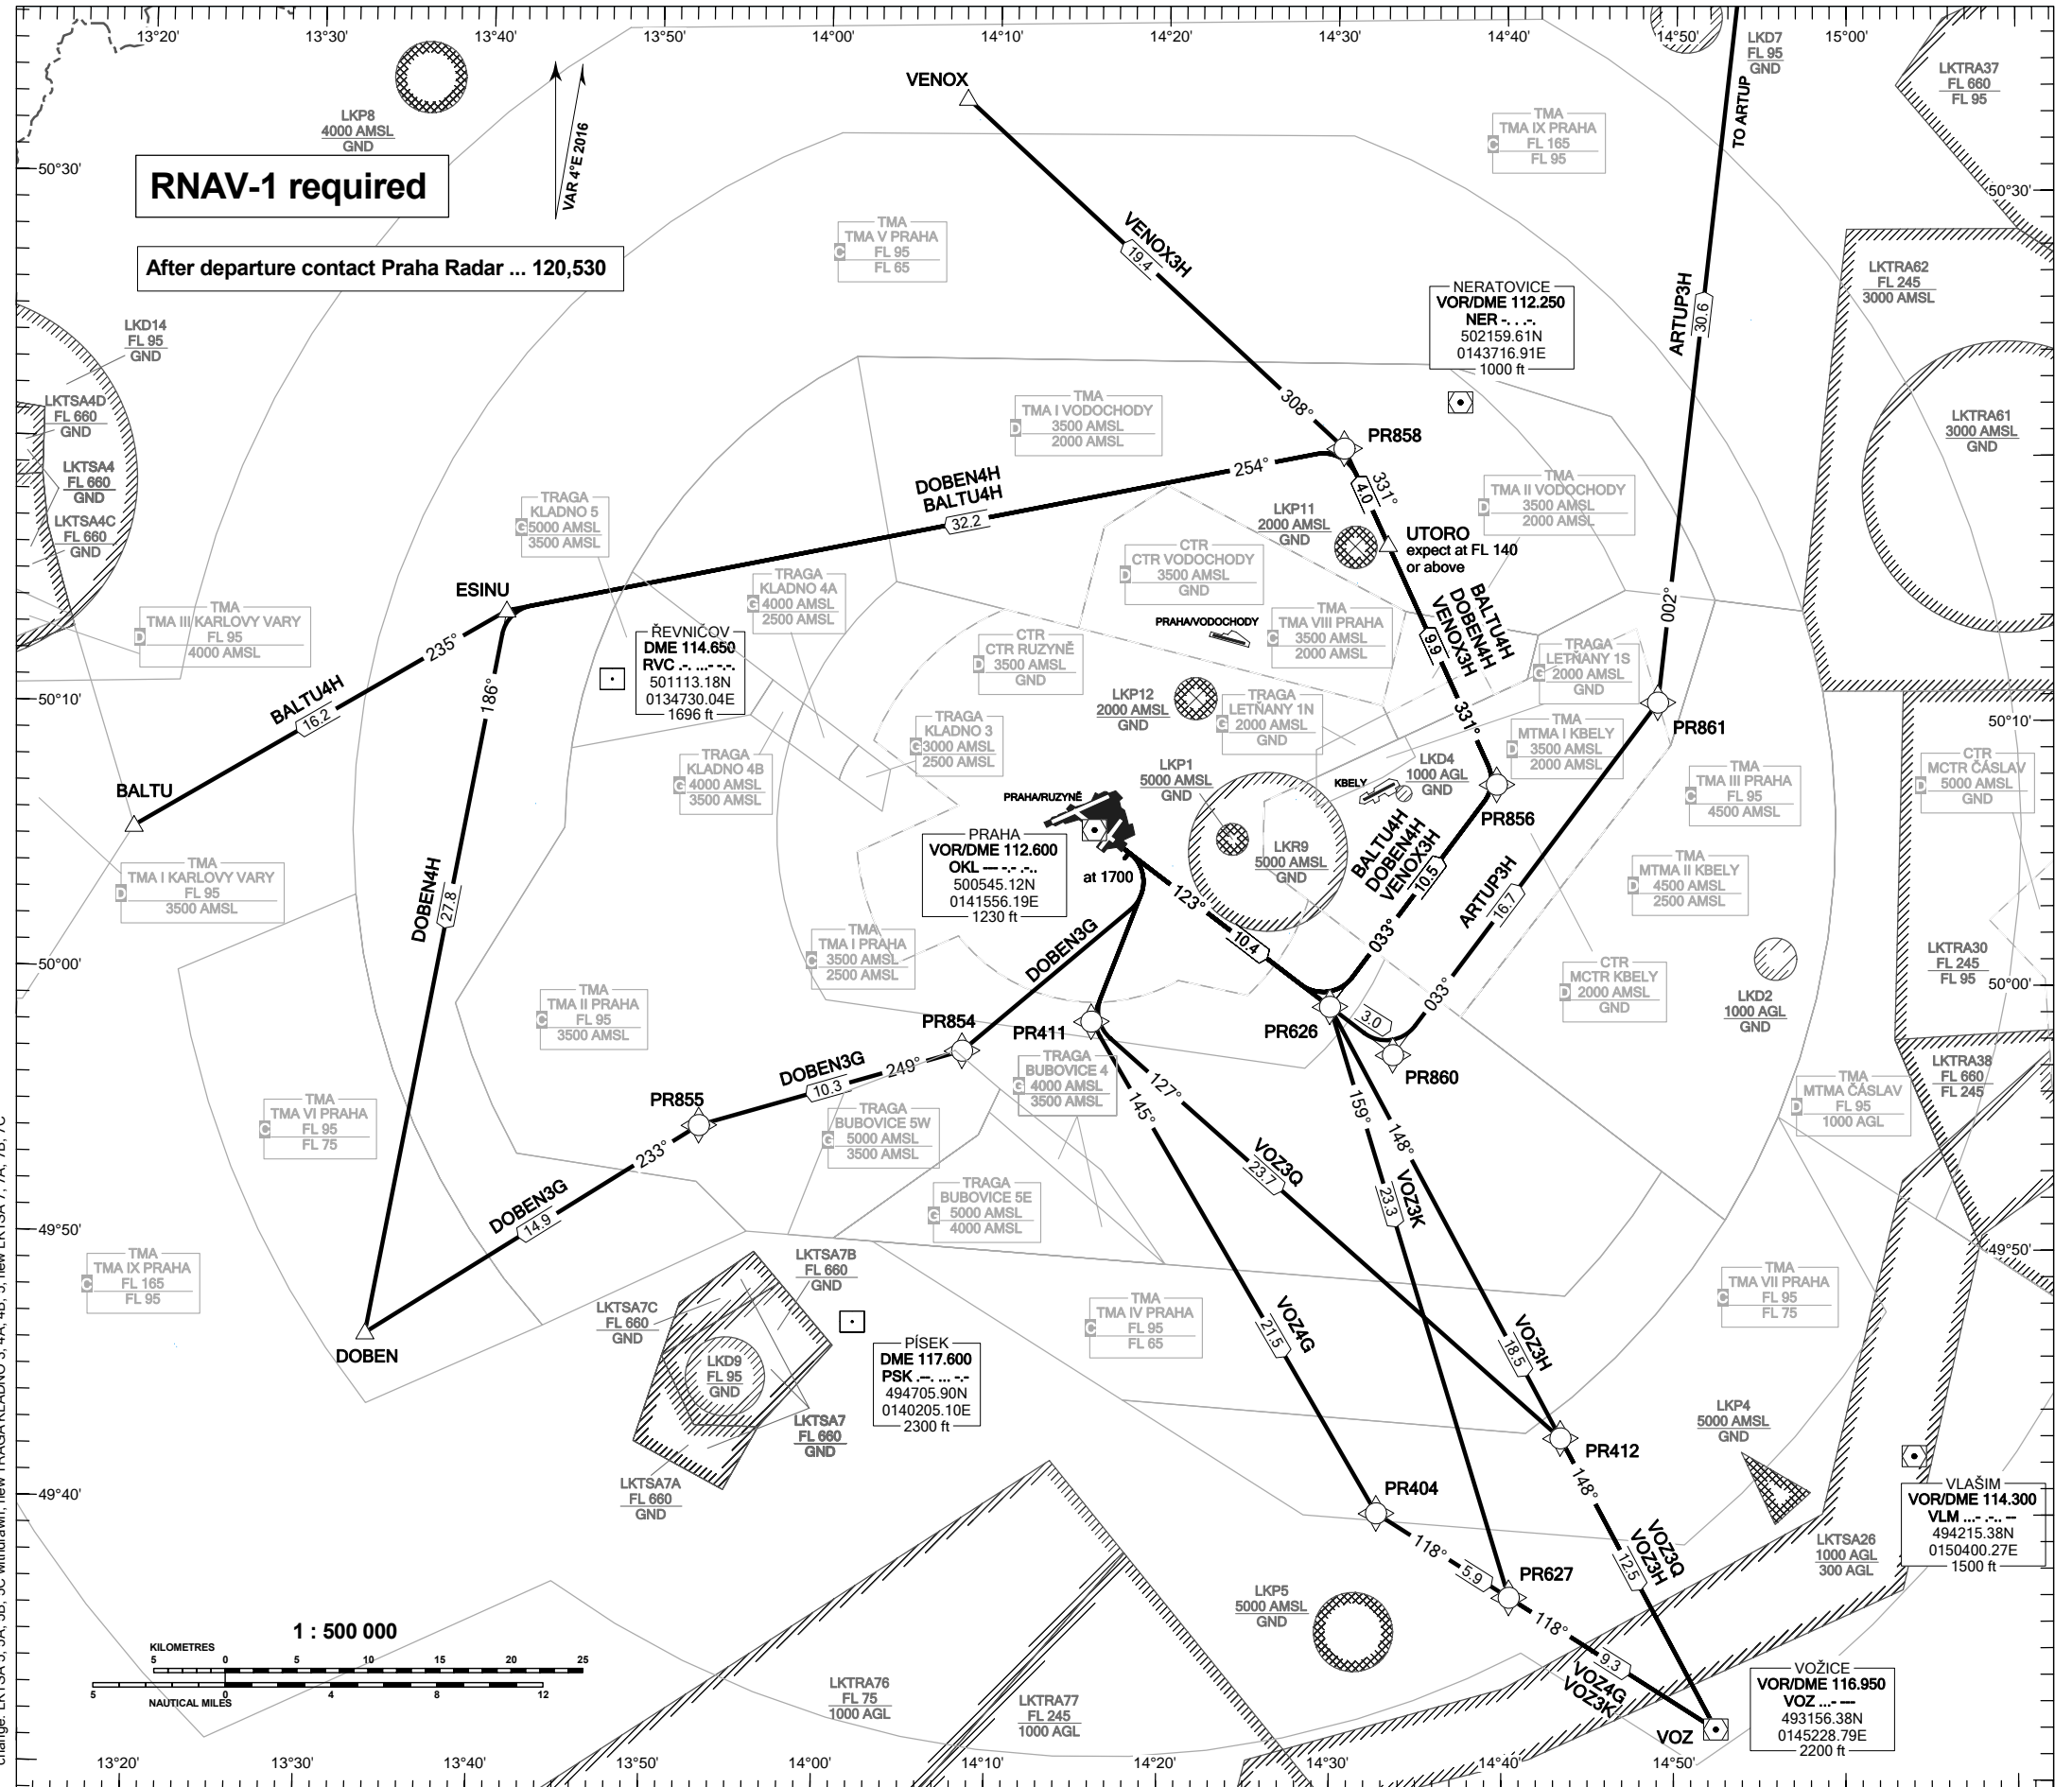


**RNAV-1 required**  
After departure contact Praha Radar ... 120,530

**VOZ 3Q**  
Only for propeller driven aircraft between 0500 - 2100 (0400 - 2000) UTC when RWY 24 is in use.

**VOZ 3K**  
Only for propeller driven aircraft between 0500 - 2100 (0400 - 2000) UTC when RWY 06 is in use.

PRAHA APPROACH / RADAR	120.530
RUZYŇĚ APPROACH / RADAR	127.580
RUZYŇĚ RADAR / INFORMATION	118.310
SUPPLEMENTARY FREQ APP	136.080
RUZYŇĚ DELIVERY	120.060
RUZYŇĚ TOWER	134.560
SUPPLEMENTARY FREQ TWR	118.110
RUZYŇĚ GROUND	121.910
RUZYŇĚ ATIS	122.160
EMERGENCY FREQ	121.500

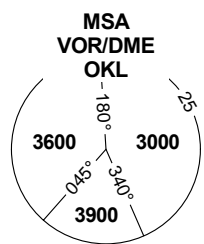

TRANSITION ALTITUDE  
5000

BEARINGS, TRACKS AND  
RADIALS ARE MAGNETIC  
ALTITUDES AND ELEVATIONS  
ARE IN FEET  
DISTANCES ARE IN NM

DEPARTURE SPEED LIMIT BELOW FL 100	
JETS	MAX IAS 250 KT
PROPS	MAX IAS 180 KT

see AIP AD 2-LKPR-33, 2.22.4.3.5

change: LKTSAs 5A, 5B, 5C withdrawn, new TRAGA KLADNO 3, 4A, 4B, 5, new LKTSAs 7, 7A, 7B, 7C