


**RNAV STANDARD DEPARTURE CHART -
INSTRUMENT (SID) - ICAO**

**PRAHA/RUZYŇĚ
RNAV SID RWY 30**

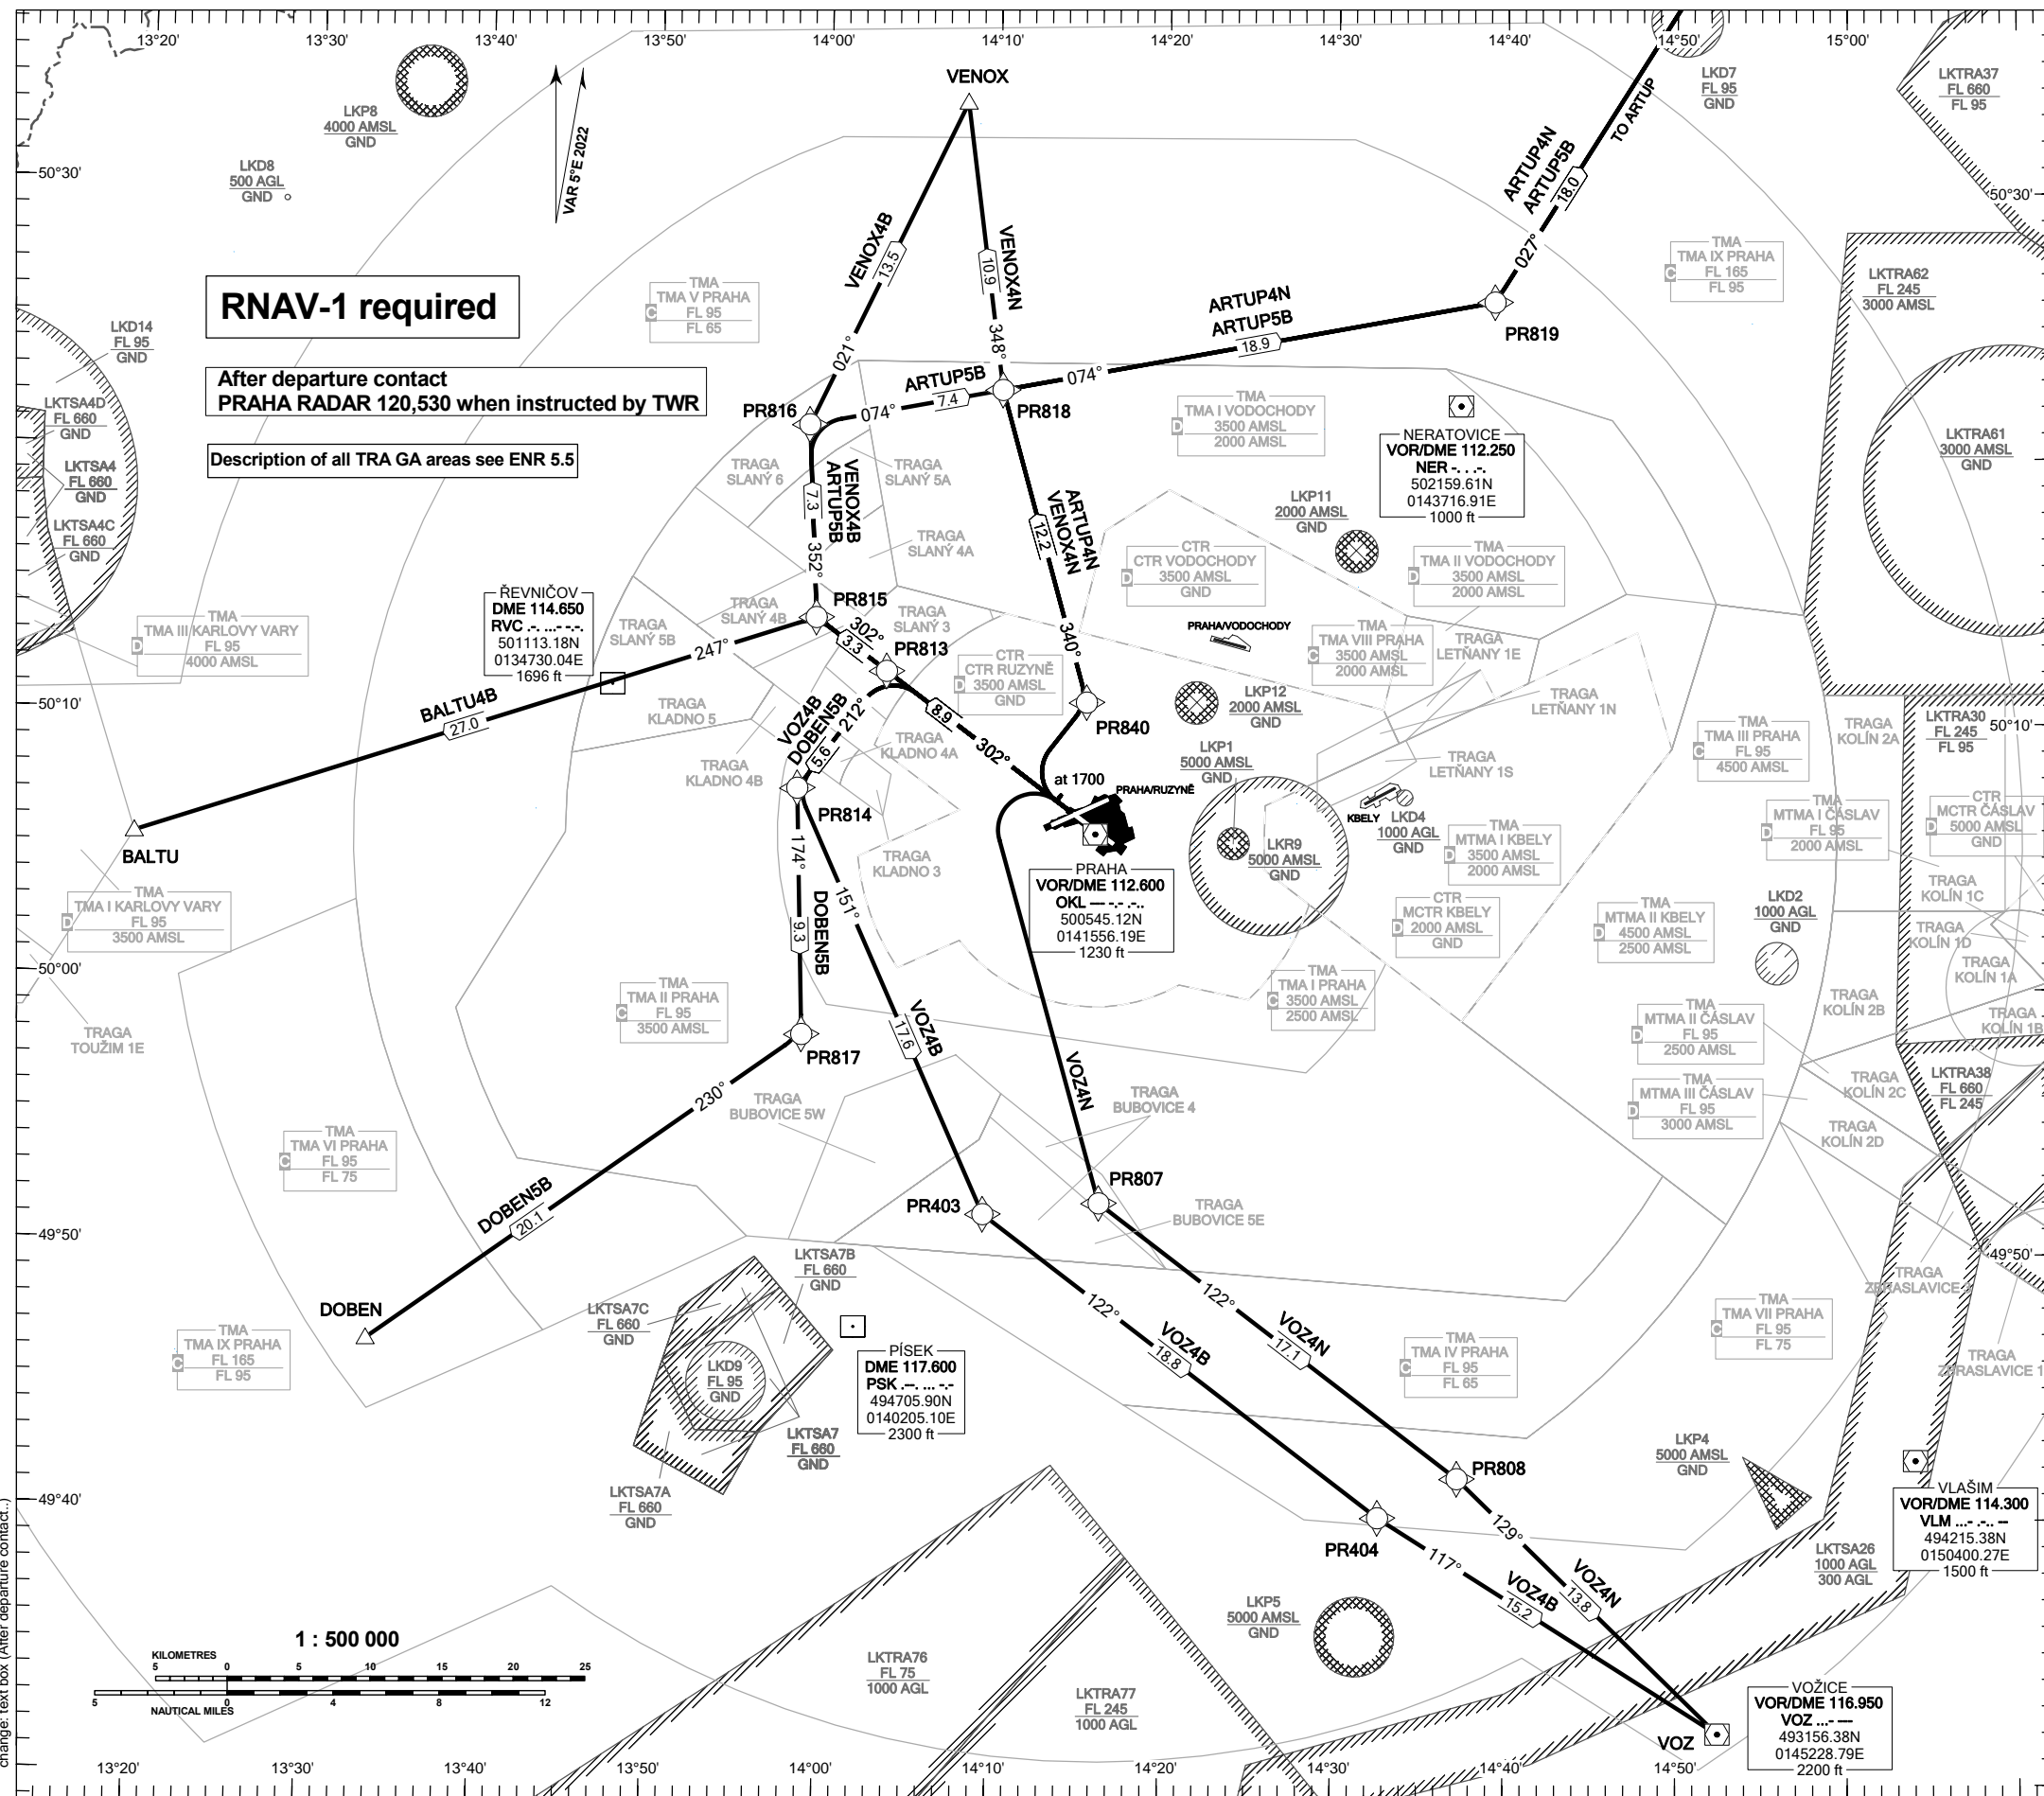


RNAV-1 required

After departure contact
PRAHA RADAR 120,530 when instructed by TWR

Description of all TRA GA areas see ENR 5.5

| | |
|----------------------------|---------|
| PRAHA APPROACH / RADAR | 120.530 |
| RUZYŇĚ APPROACH / RADAR | 127.580 |
| RUZYŇĚ RADAR / INFORMATION | 118.310 |
| SUPPLEMENTARY FREQ APP | 136.080 |
| RUZYŇĚ DELIVERY | 120.060 |
| RUZYŇĚ TOWER | 134.560 |
| SUPPLEMENTARY FREQ TWR | 118.110 |
| RUZYŇĚ GROUND | 121.910 |
| RUZYŇĚ ATIS | 122.160 |
| EMERGENCY FREQ | 121.500 |

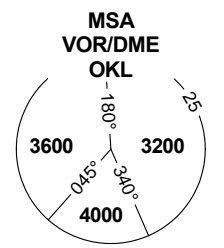

TRANSITION ALTITUDE
5000

BEARINGS, TRACKS AND
RADIALS ARE MAGNETIC
ALTITUDES AND ELEVATIONS
ARE IN FEET
DISTANCES ARE IN NM

| DEPARTURE SPEED LIMIT BELOW FL 100 | |
|---------------------------------------|----------------|
| JETS | MAX IAS 250 KT |
| PROPS | MAX IAS 180 KT |

see AIP AD 2-LKPR-33, 2.22.4.3.5

