


**RNAV STANDARD DEPARTURE CHART -  
INSTRUMENT (SID) - ICAO**

**PRAHA/RUZYŇĚ  
RNAV SID RWY 12**

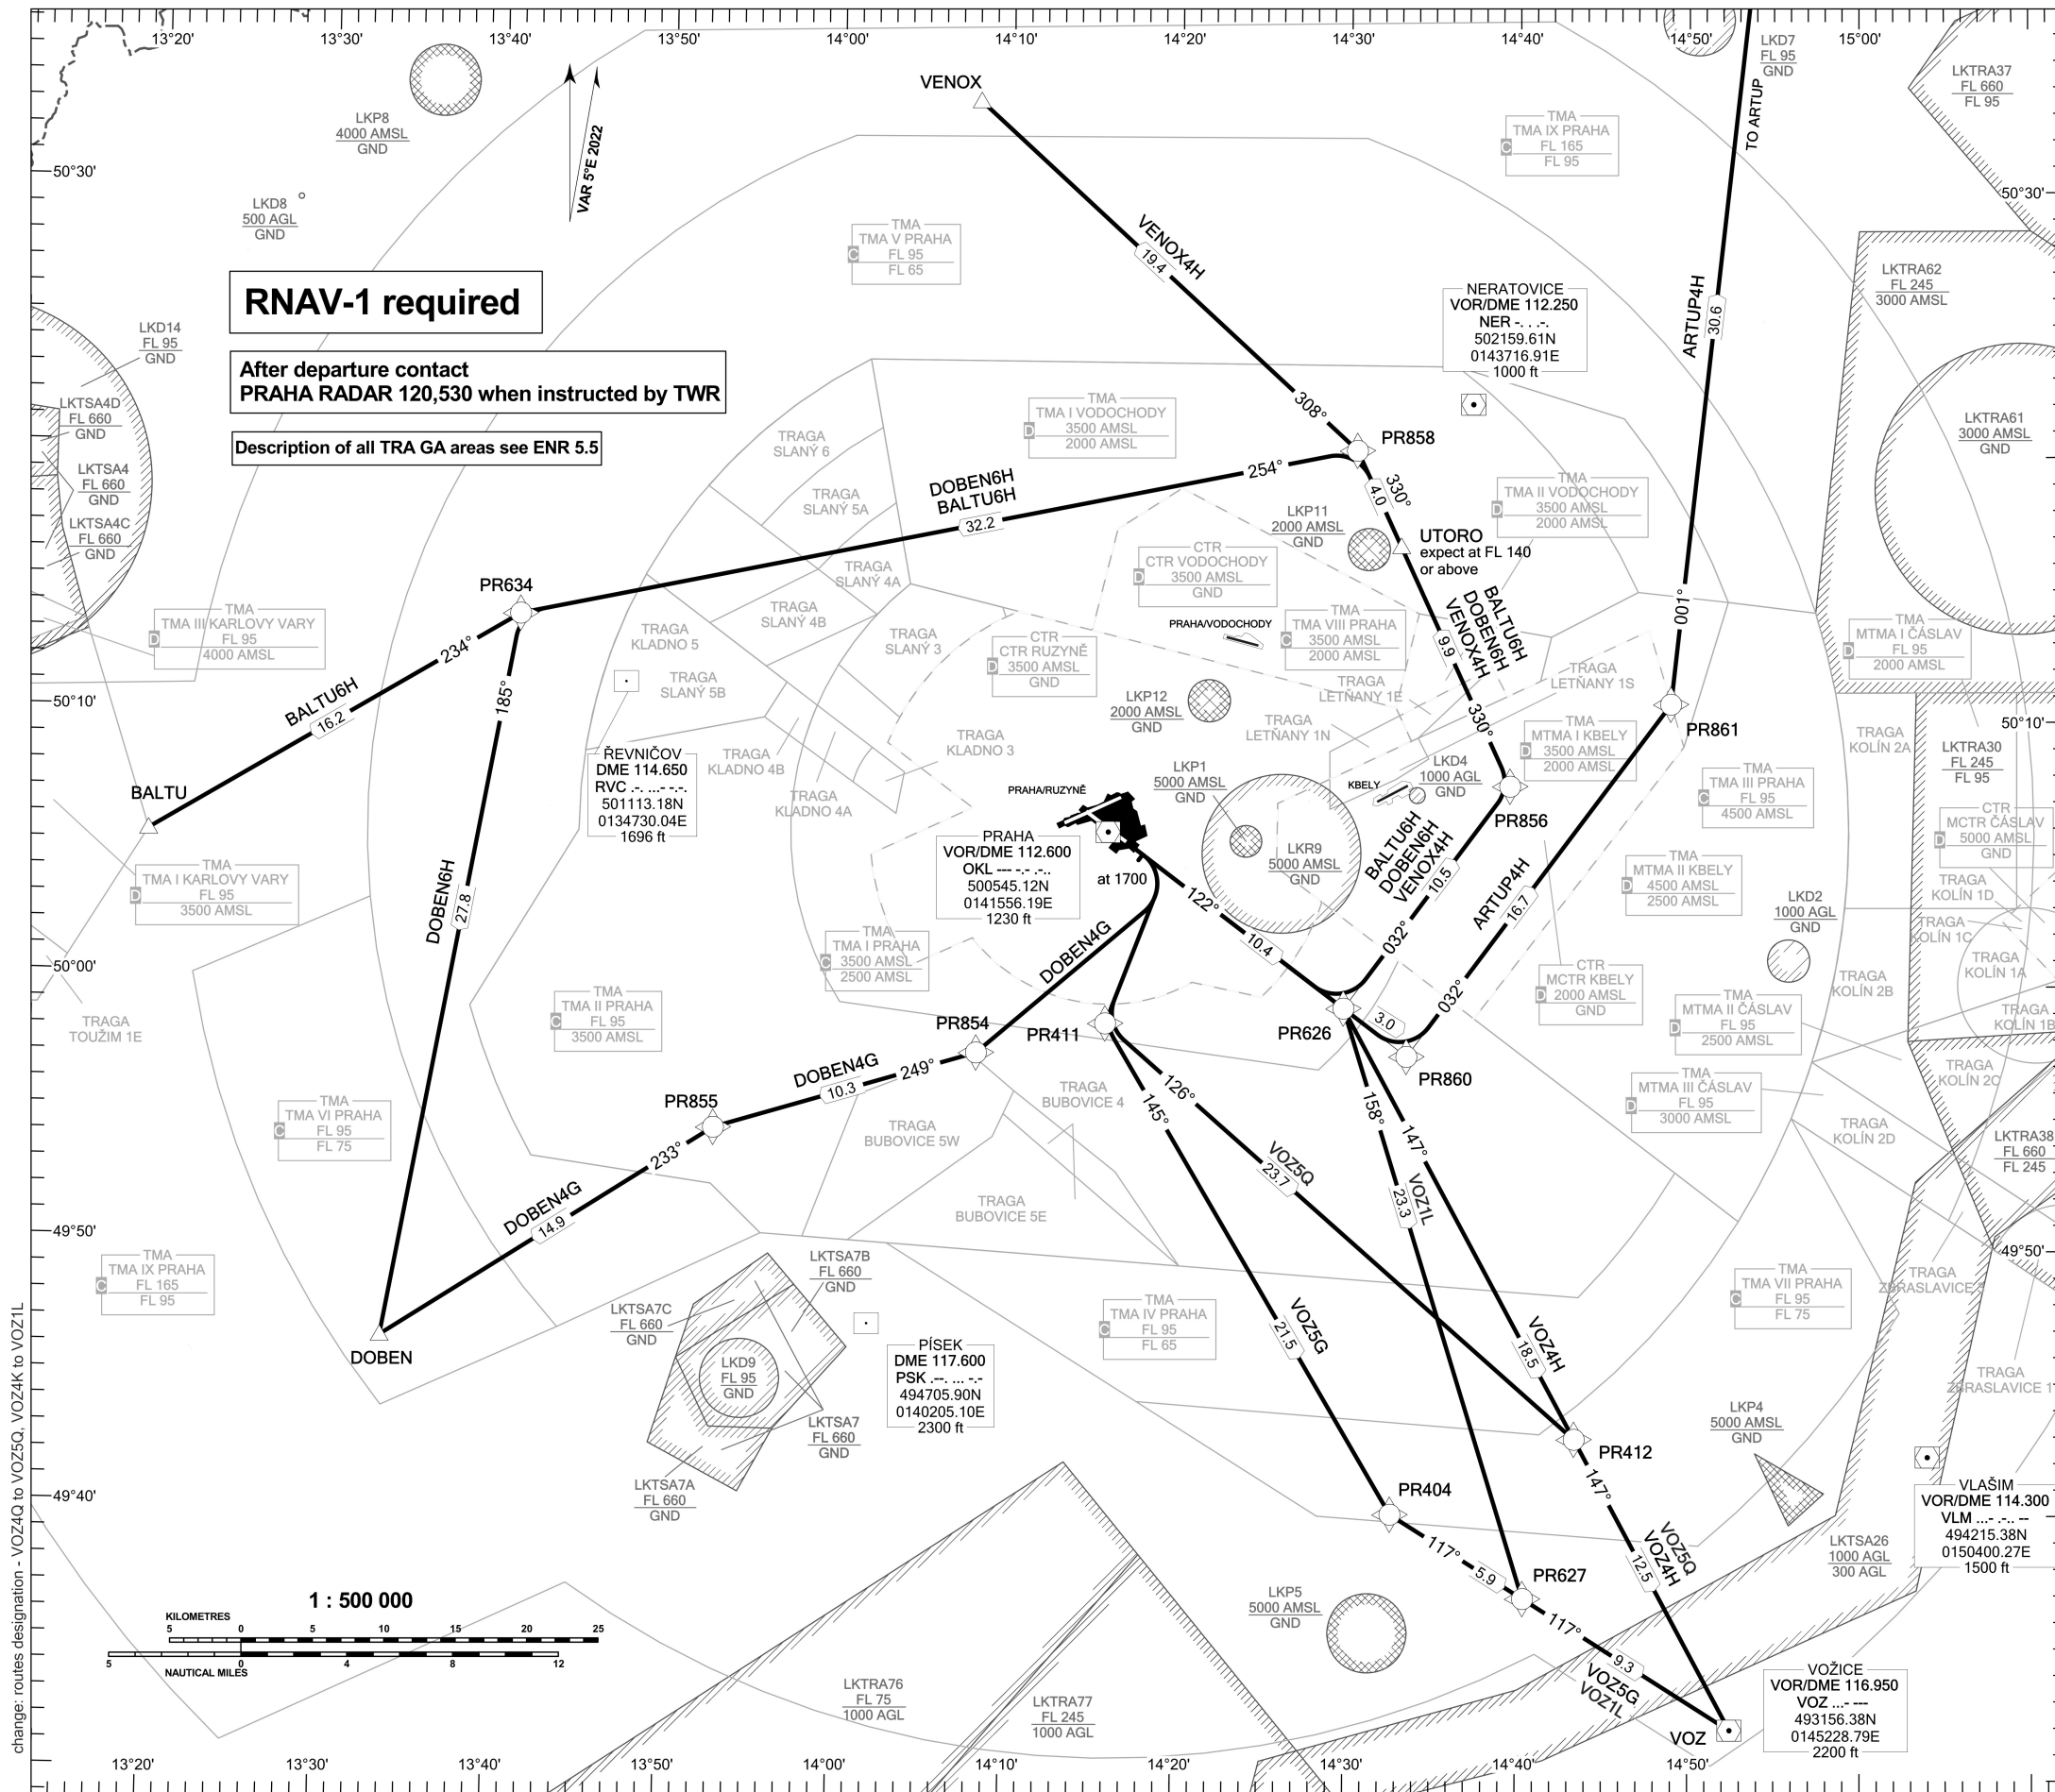


**RNAV-1 required**  
**After departure contact**  
**PRAHA RADAR 120,530 when instructed by TWR**  
 Description of all TRA GA areas see ENR 5.5

**VOZ 5Q**  
 Only for propeller driven aircraft between 0500 - 2100 (0400 - 2000) UTC when RWY 24 is in use.

**VOZ 1L**  
 Only for propeller driven aircraft between 0500 - 2100 (0400 - 2000) UTC when RWY 06 is in use.

PRAHA APPROACH / RADAR	120.530
RUZYŇĚ APPROACH / RADAR	119.010
RUZYŇĚ RADAR / INFORMATION	118.310
SUPPLEMENTARY FREQ APP	136.080
RUZYŇĚ DELIVERY	120.060
RUZYŇĚ TOWER	134.560
SUPPLEMENTARY FREQ TWR	118.110
RUZYŇĚ GROUND	121.910
RUZYŇĚ ATIS	122.160
EMERGENCY FREQ	121.500

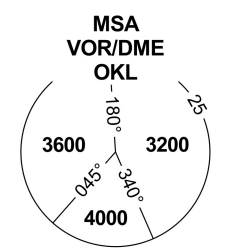

**TRANSITION ALTITUDE**  
 5000

<b>DEPARTURE SPEED LIMIT</b> BELOW FL 100	
JETS	MAX IAS 250 KT
PROPS	MAX IAS 180 KT

**BEARINGS, TRACKS AND RADIALS ARE MAGNETIC**  
**ALTITUDES AND ELEVATIONS ARE IN FEET**  
**DISTANCES ARE IN NM**

see AIP AD 2-LKPR-33, 2.22.4.3.5