


# RNAV STANDARD DEPARTURE CHART - INSTRUMENT (SID) - ICAO

# PRAHA/RUZYŇĚ RNAV SID RWY 30

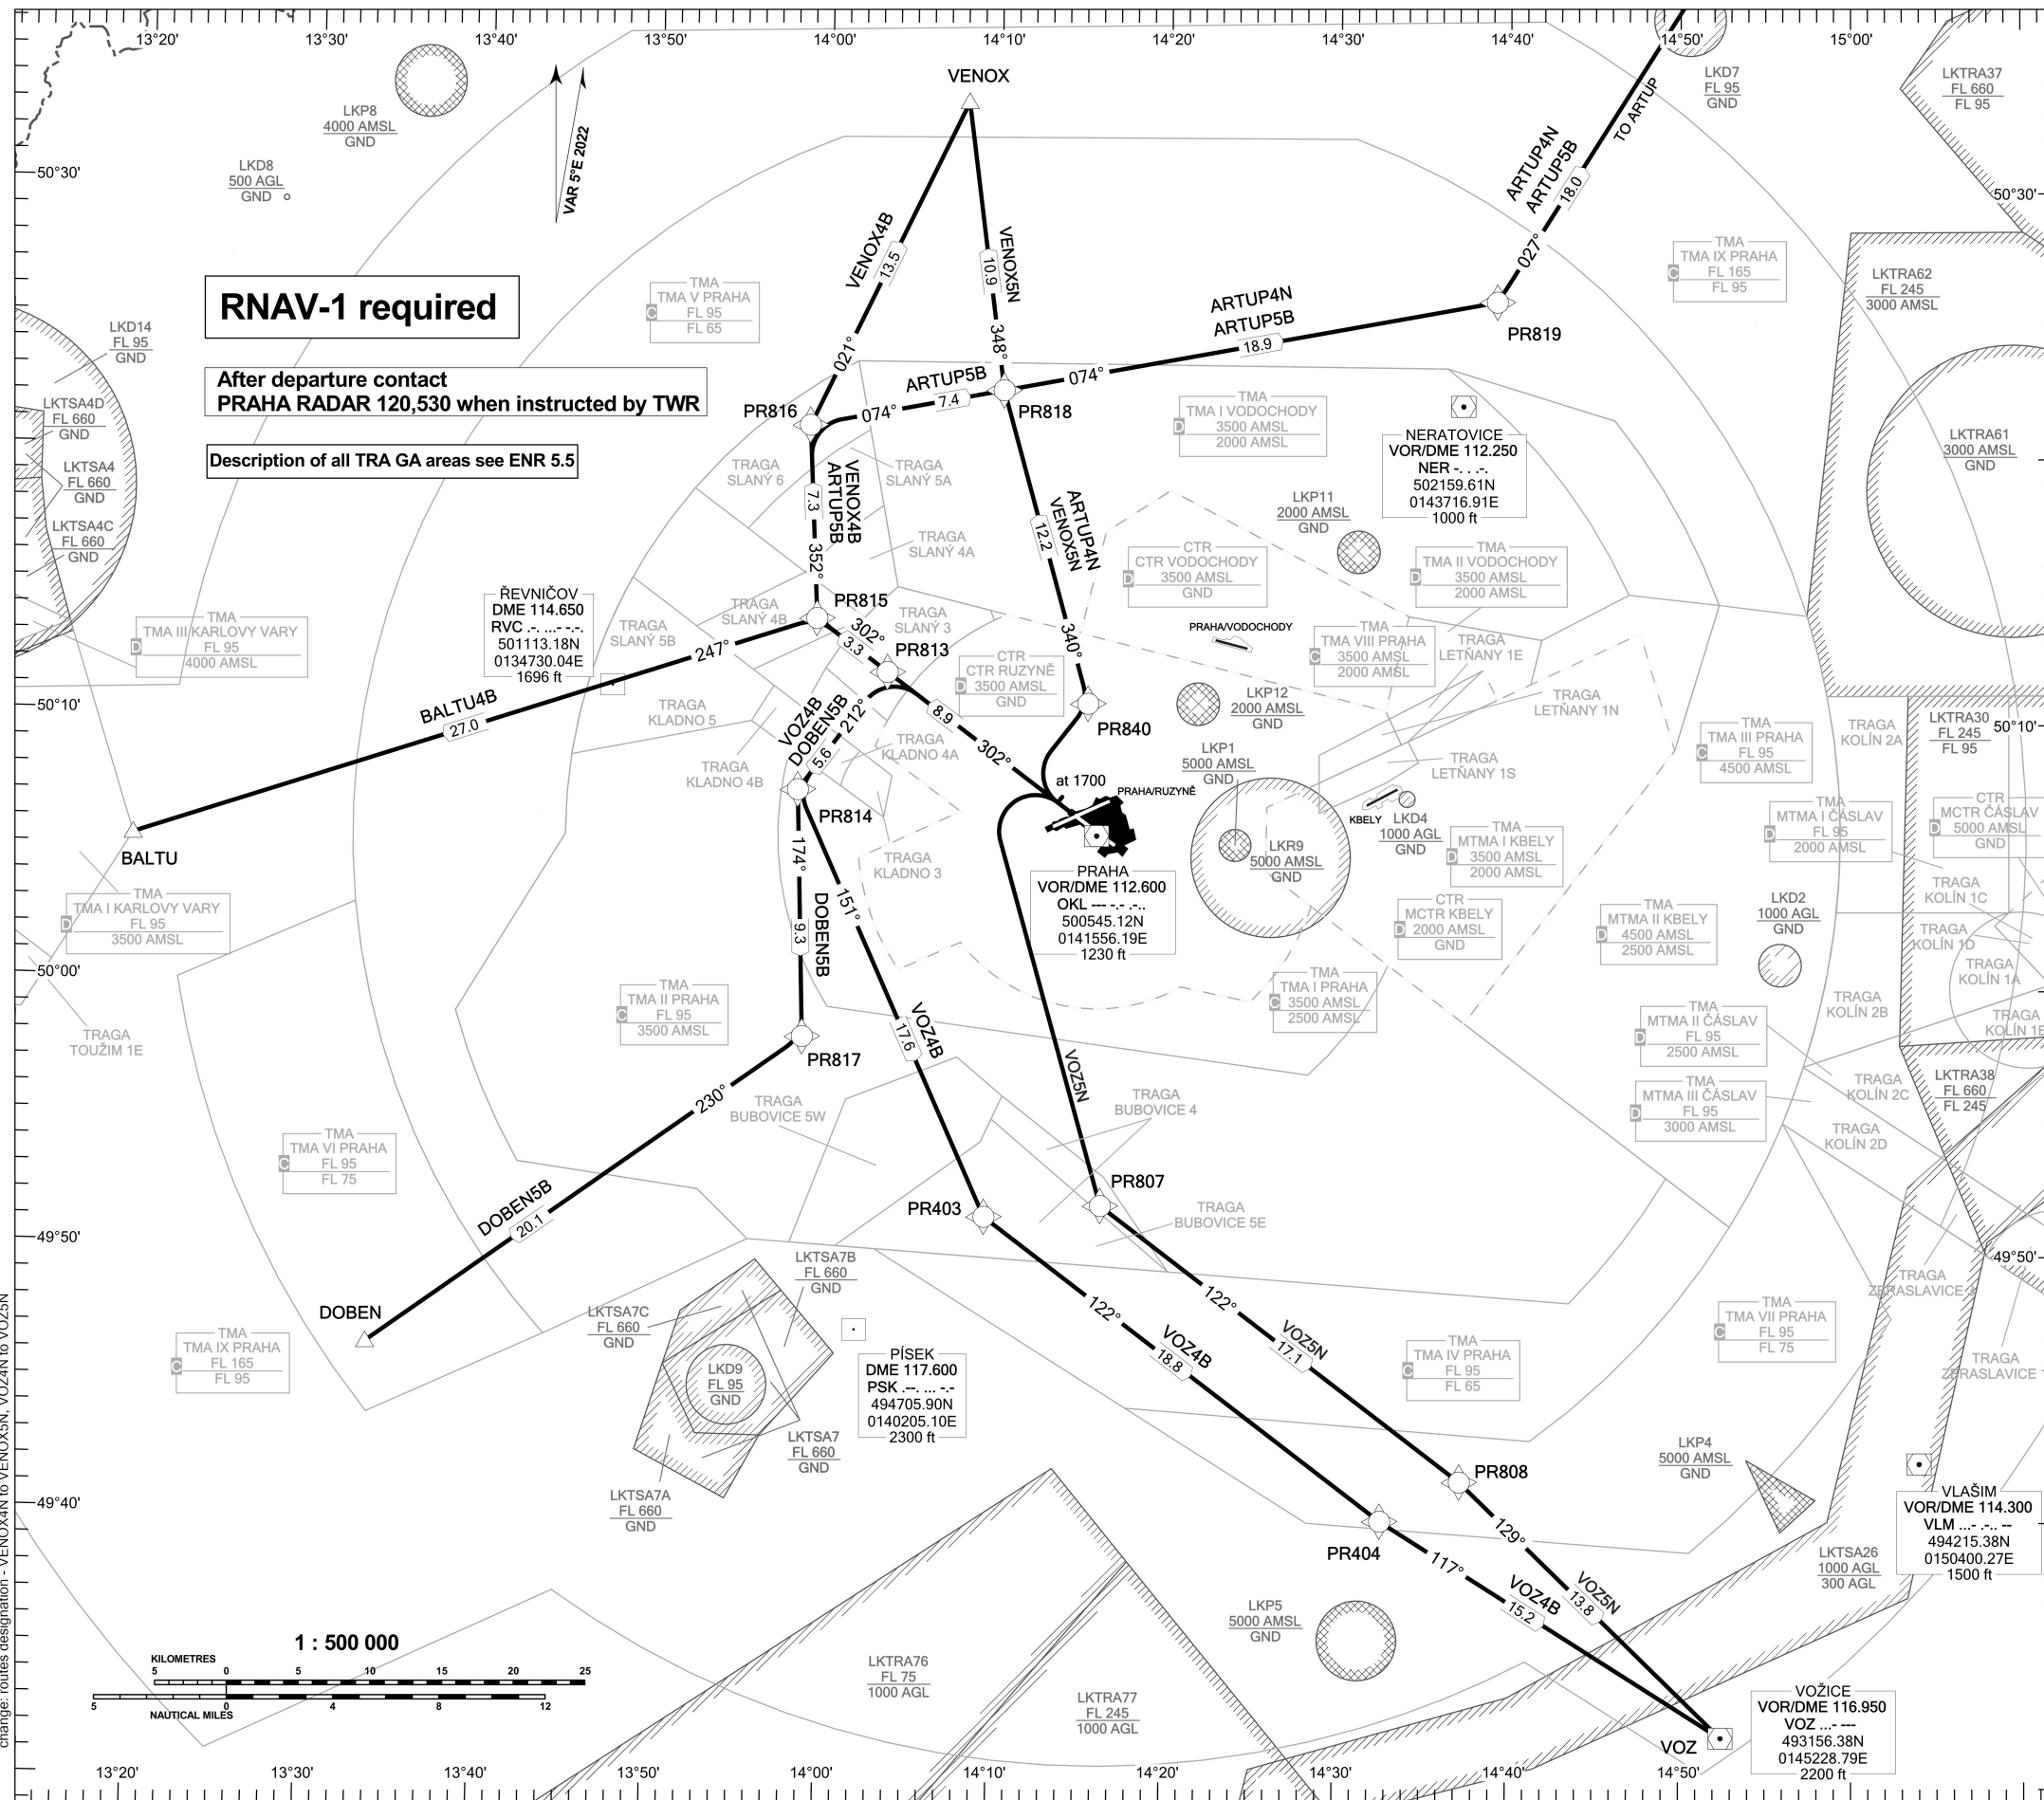


**RNAV-1 required**

After departure contact  
**PRAHA RADAR 120,530 when instructed by TWR**

Description of all TRA GA areas see ENR 5.5

PRAHA APPROACH / RADAR	120.530
	127.580
RUZYŇĚ APPROACH / RADAR	119.010
RUZYŇĚ RADAR / INFORMATION	118.310
SUPPLEMENTARY FREQ APP	136.080
RUZYŇĚ DELIVERY	120.060
SUPPLEMENTARY FREQ TWR	134.560
RUZYŇĚ GROUND	121.910
RUZYŇĚ ATIS	122.160
EMERGENCY FREQ	121.500

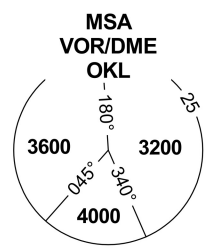

TRANSITION ALTITUDE  
**5000**

DEPARTURE SPEED LIMIT BELOW FL 100	
JETS	MAX IAS 250 KT
PROPS	MAX IAS 180 KT

BEARINGS, TRACKS AND RADIALS ARE MAGNETIC  
ALTITUDES AND ELEVATIONS ARE IN FEET  
DISTANCES ARE IN NM

see AIP AD 2-LKPR-33, 2.22.4.3.5

