


STANDARD DEPARTURE CHART - INSTRUMENT (SID) - ICAO

PRAHA/RUZYŇĚ RNAV SID RWY 24

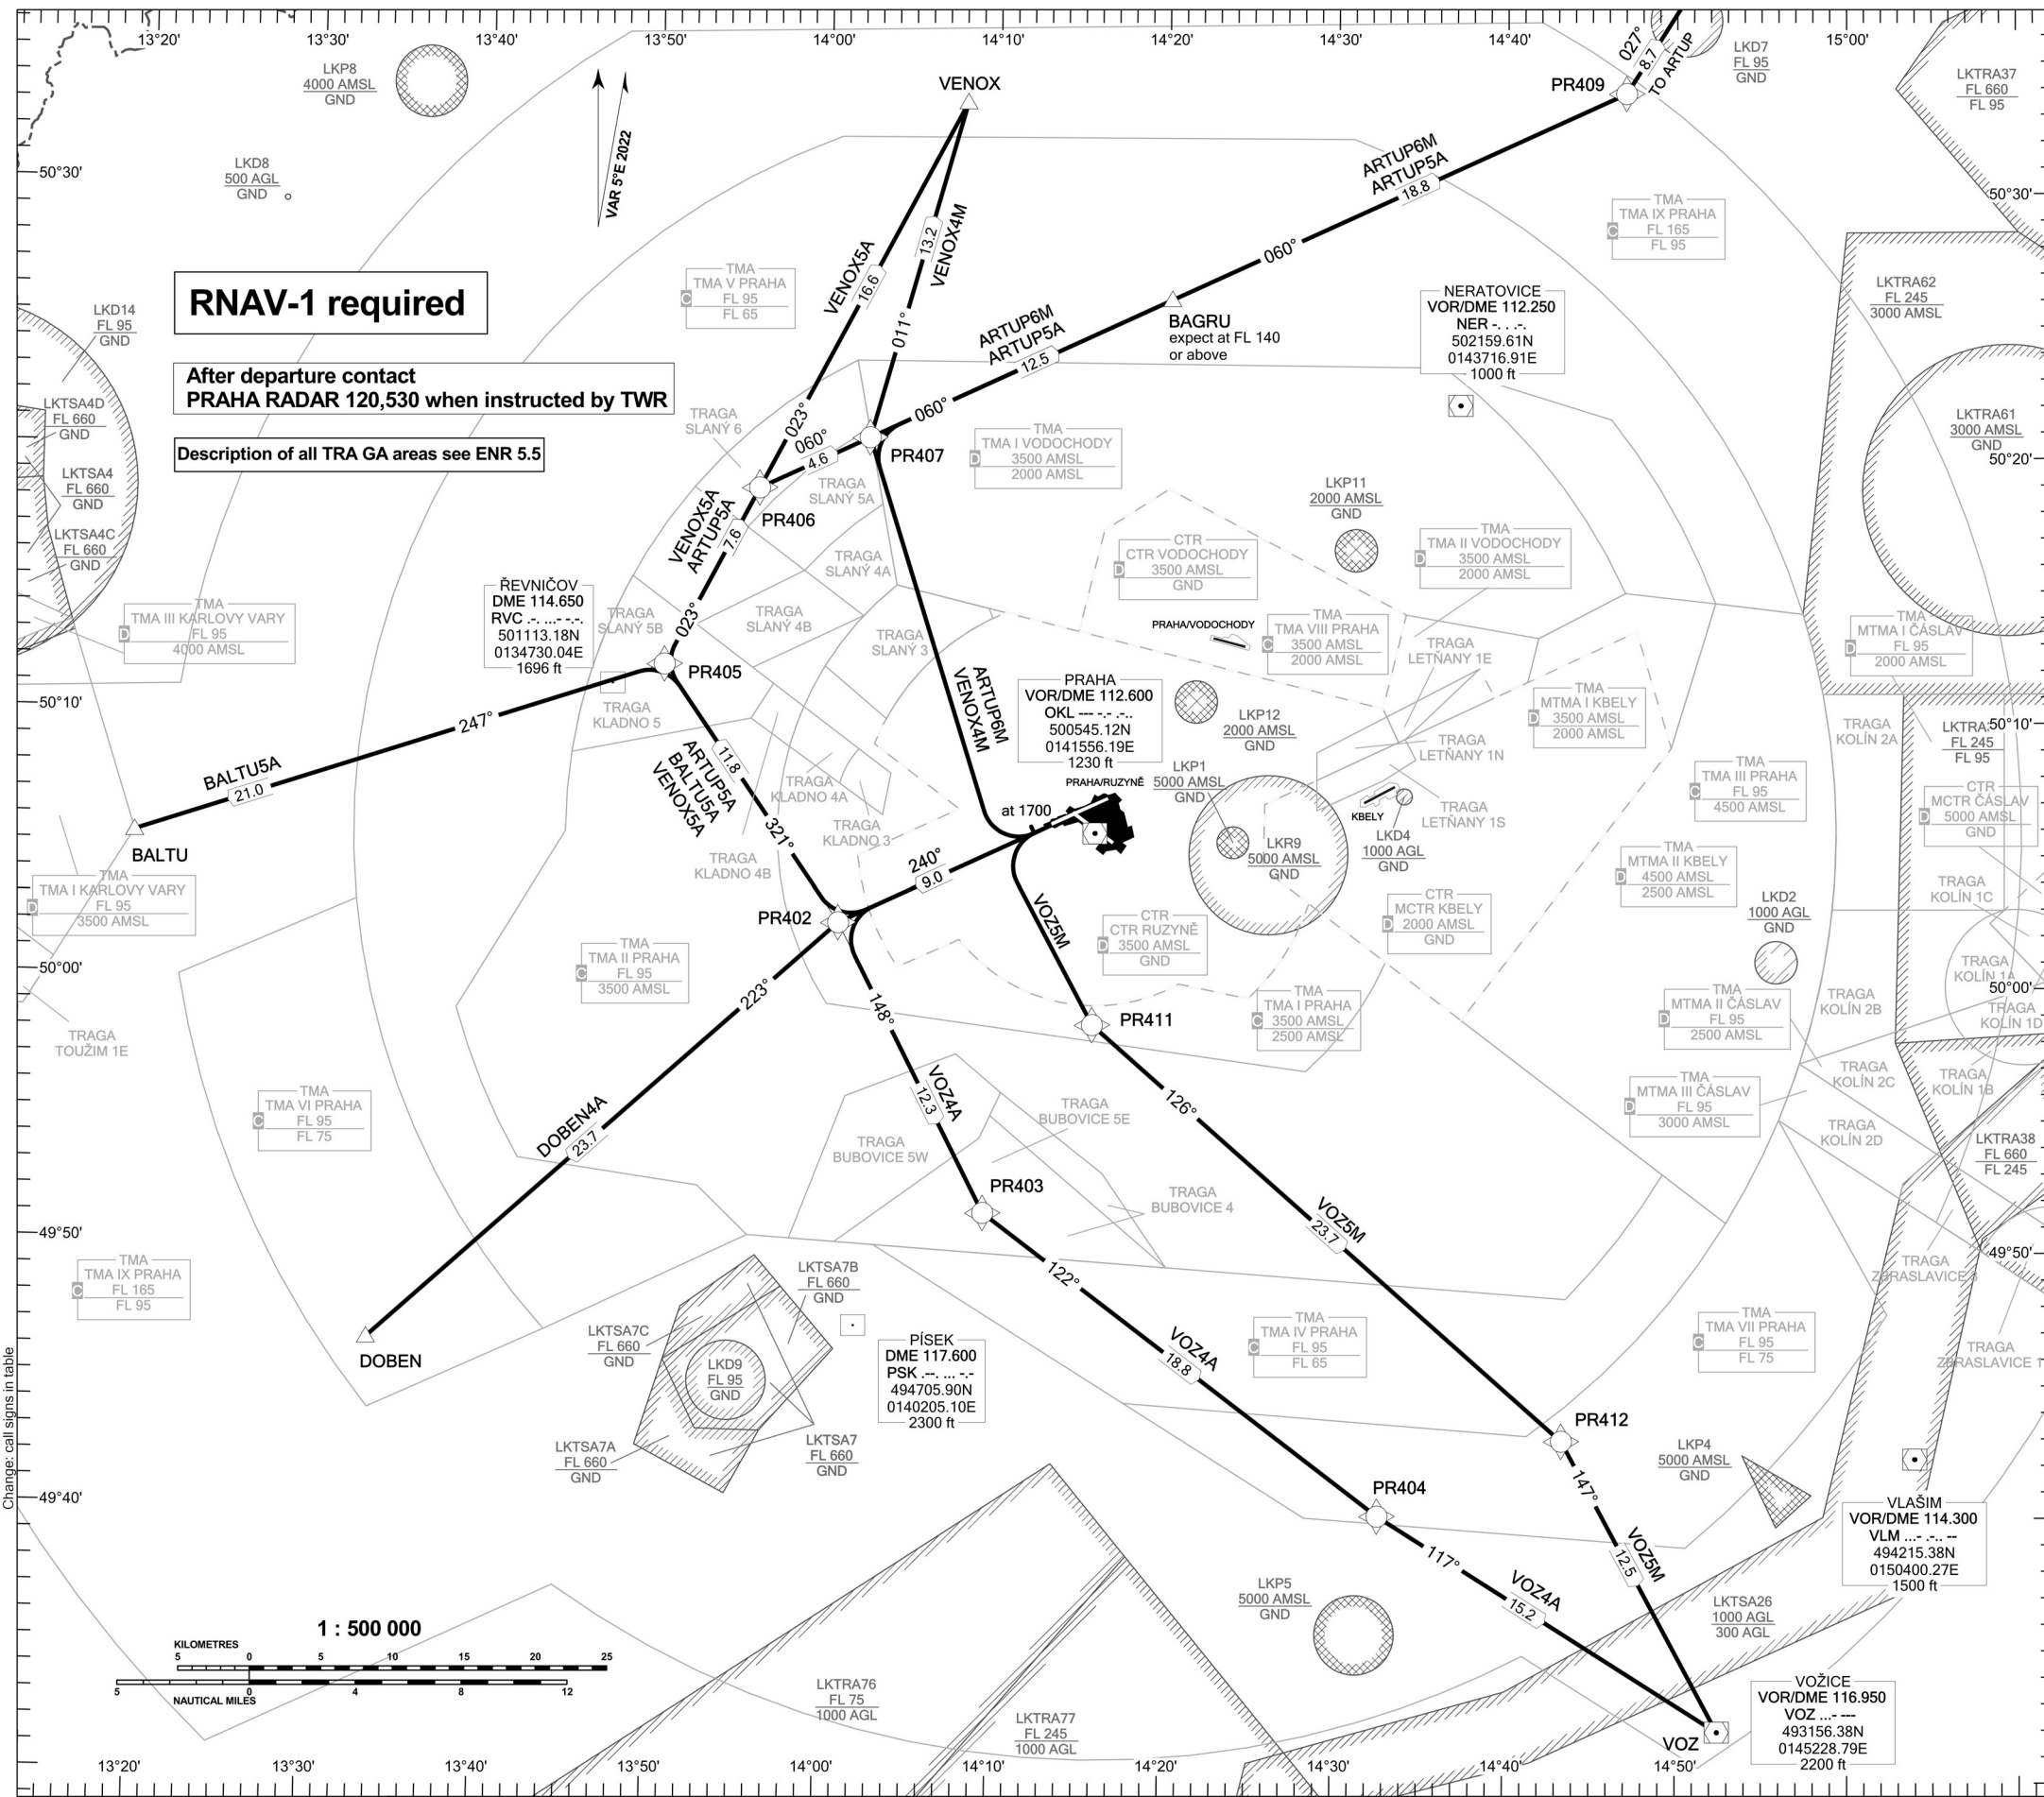


RNAV-1 required

**After departure contact
PRAHA RADAR 120,530 when instructed by TWR**

Description of all TRA GA areas see ENR 5.5

PRAHA RADAR	120.530
RUZYŇĚ RADAR	127.580
RUZYŇĚ RADAR	119.010
SUPPLEMENTARY FREQ APP	118.310
RUZYŇĚ DELIVERY	136.080
RUZYŇĚ TOWER	120.060
SUPPLEMENTARY FREQ TWR	134.560
RUZYŇĚ GROUND	118.110
RUZYŇĚ ATIS	121.910
EMERGENCY FREQ	122.160
	121.500

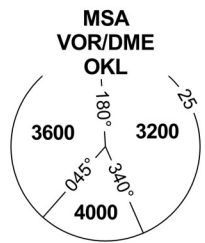

**TRANSITION ALTITUDE
5000**

DEPARTURE SPEED LIMIT BELOW FL 100	
JETS	MAX IAS 250 KT
PROPS	MAX IAS 180 KT

**BEARINGS, TRACKS AND
RADIALS ARE MAGNETIC
ALTITUDES AND ELEVATIONS
ARE IN FEET
DISTANCES ARE IN NM**

see AIP AD 2-LKPR-33, 2.22.4.3.5