


**RNAV STANDARD DEPARTURE CHART - INSTRUMENT  
(SID) - ICAO**


**KARLOVY VARY  
RNAV SID RWY 11**

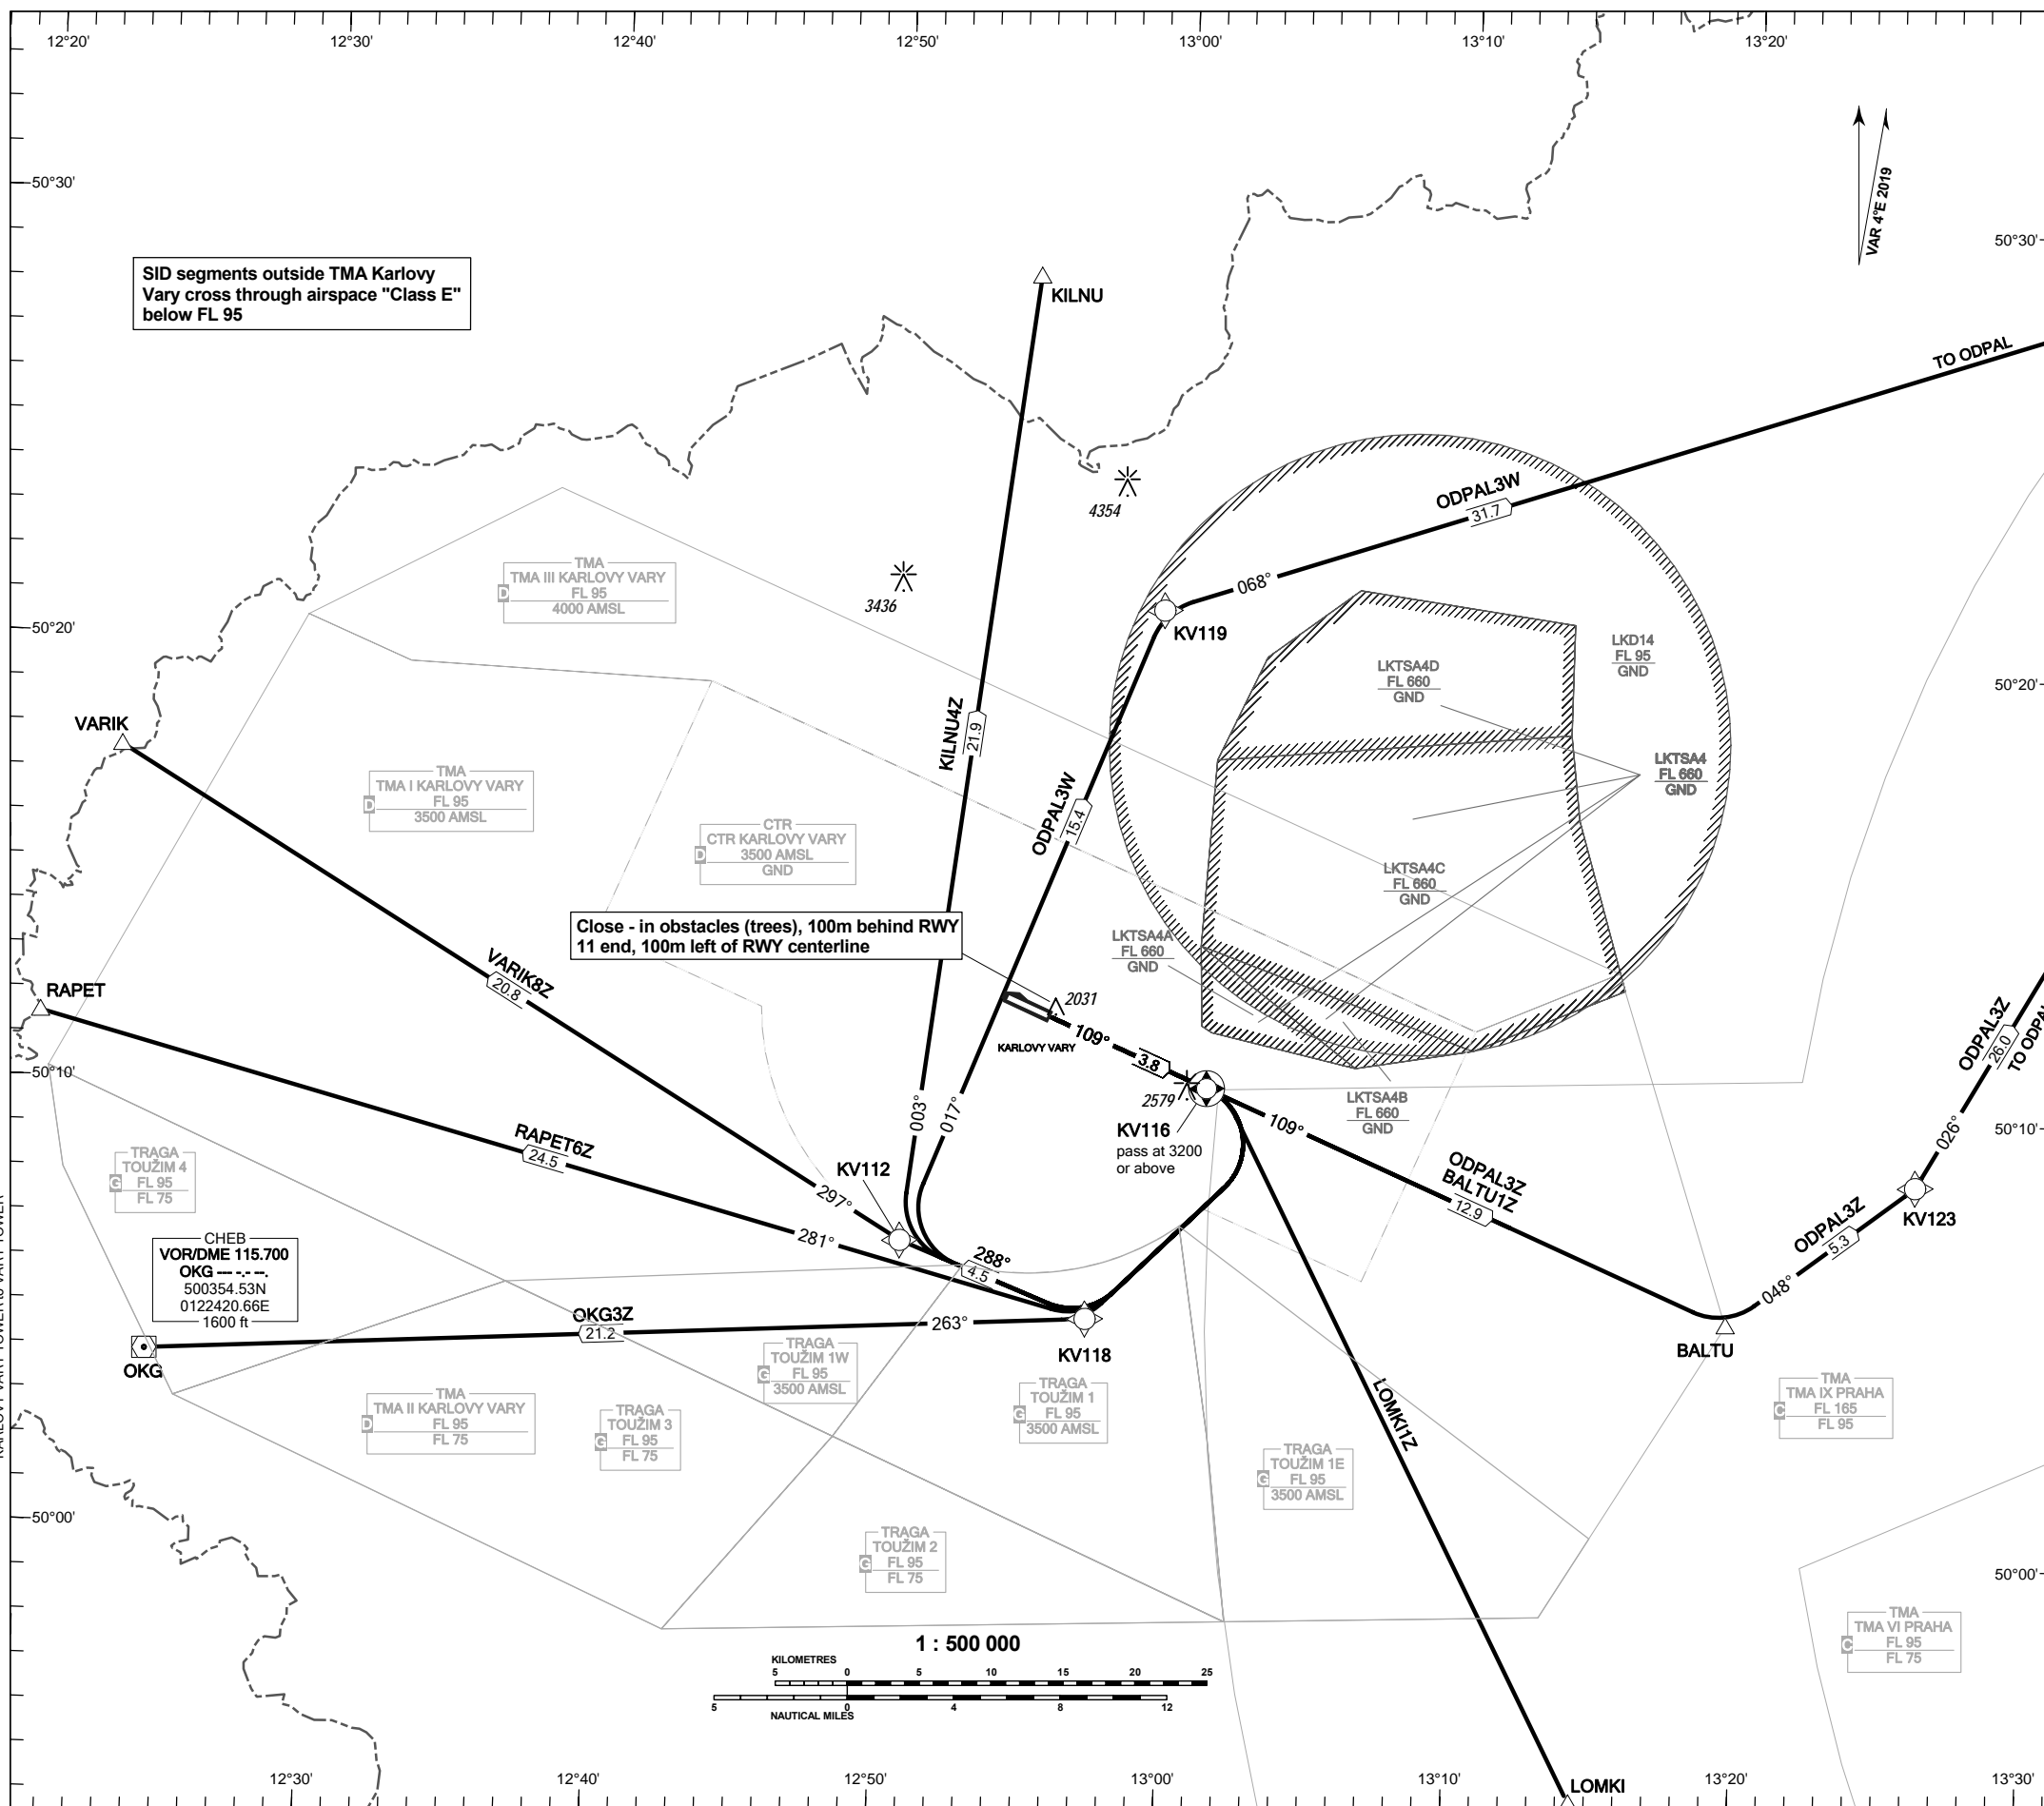

SID segments outside TMA Karlovy Vary cross through airspace "Class E" below FL 95

Close - in obstacles (trees), 100m behind RWY 11 end, 100m left of RWY centerline

PRAHA RADAR	118.650
VARY TOWER	121.230
KARLOVY VARY ATIS	118.955
EMERGENCY FREQ	121.500

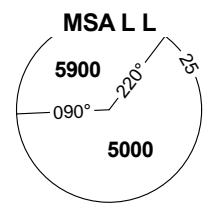

BEARINGS, TRACKS AND RADIALS ARE MAGNETIC  
ALTITUDES AND ELEVATIONS ARE IN FEET  
DISTANCES ARE IN NM

TRANSITION ALTITUDE  
5000

