


**RNAV STANDARD DEPARTURE CHART -
INSTRUMENT (SID) - ICAO**

**PRAHA/RUZYŇĚ
RNAV SID RWY 12**

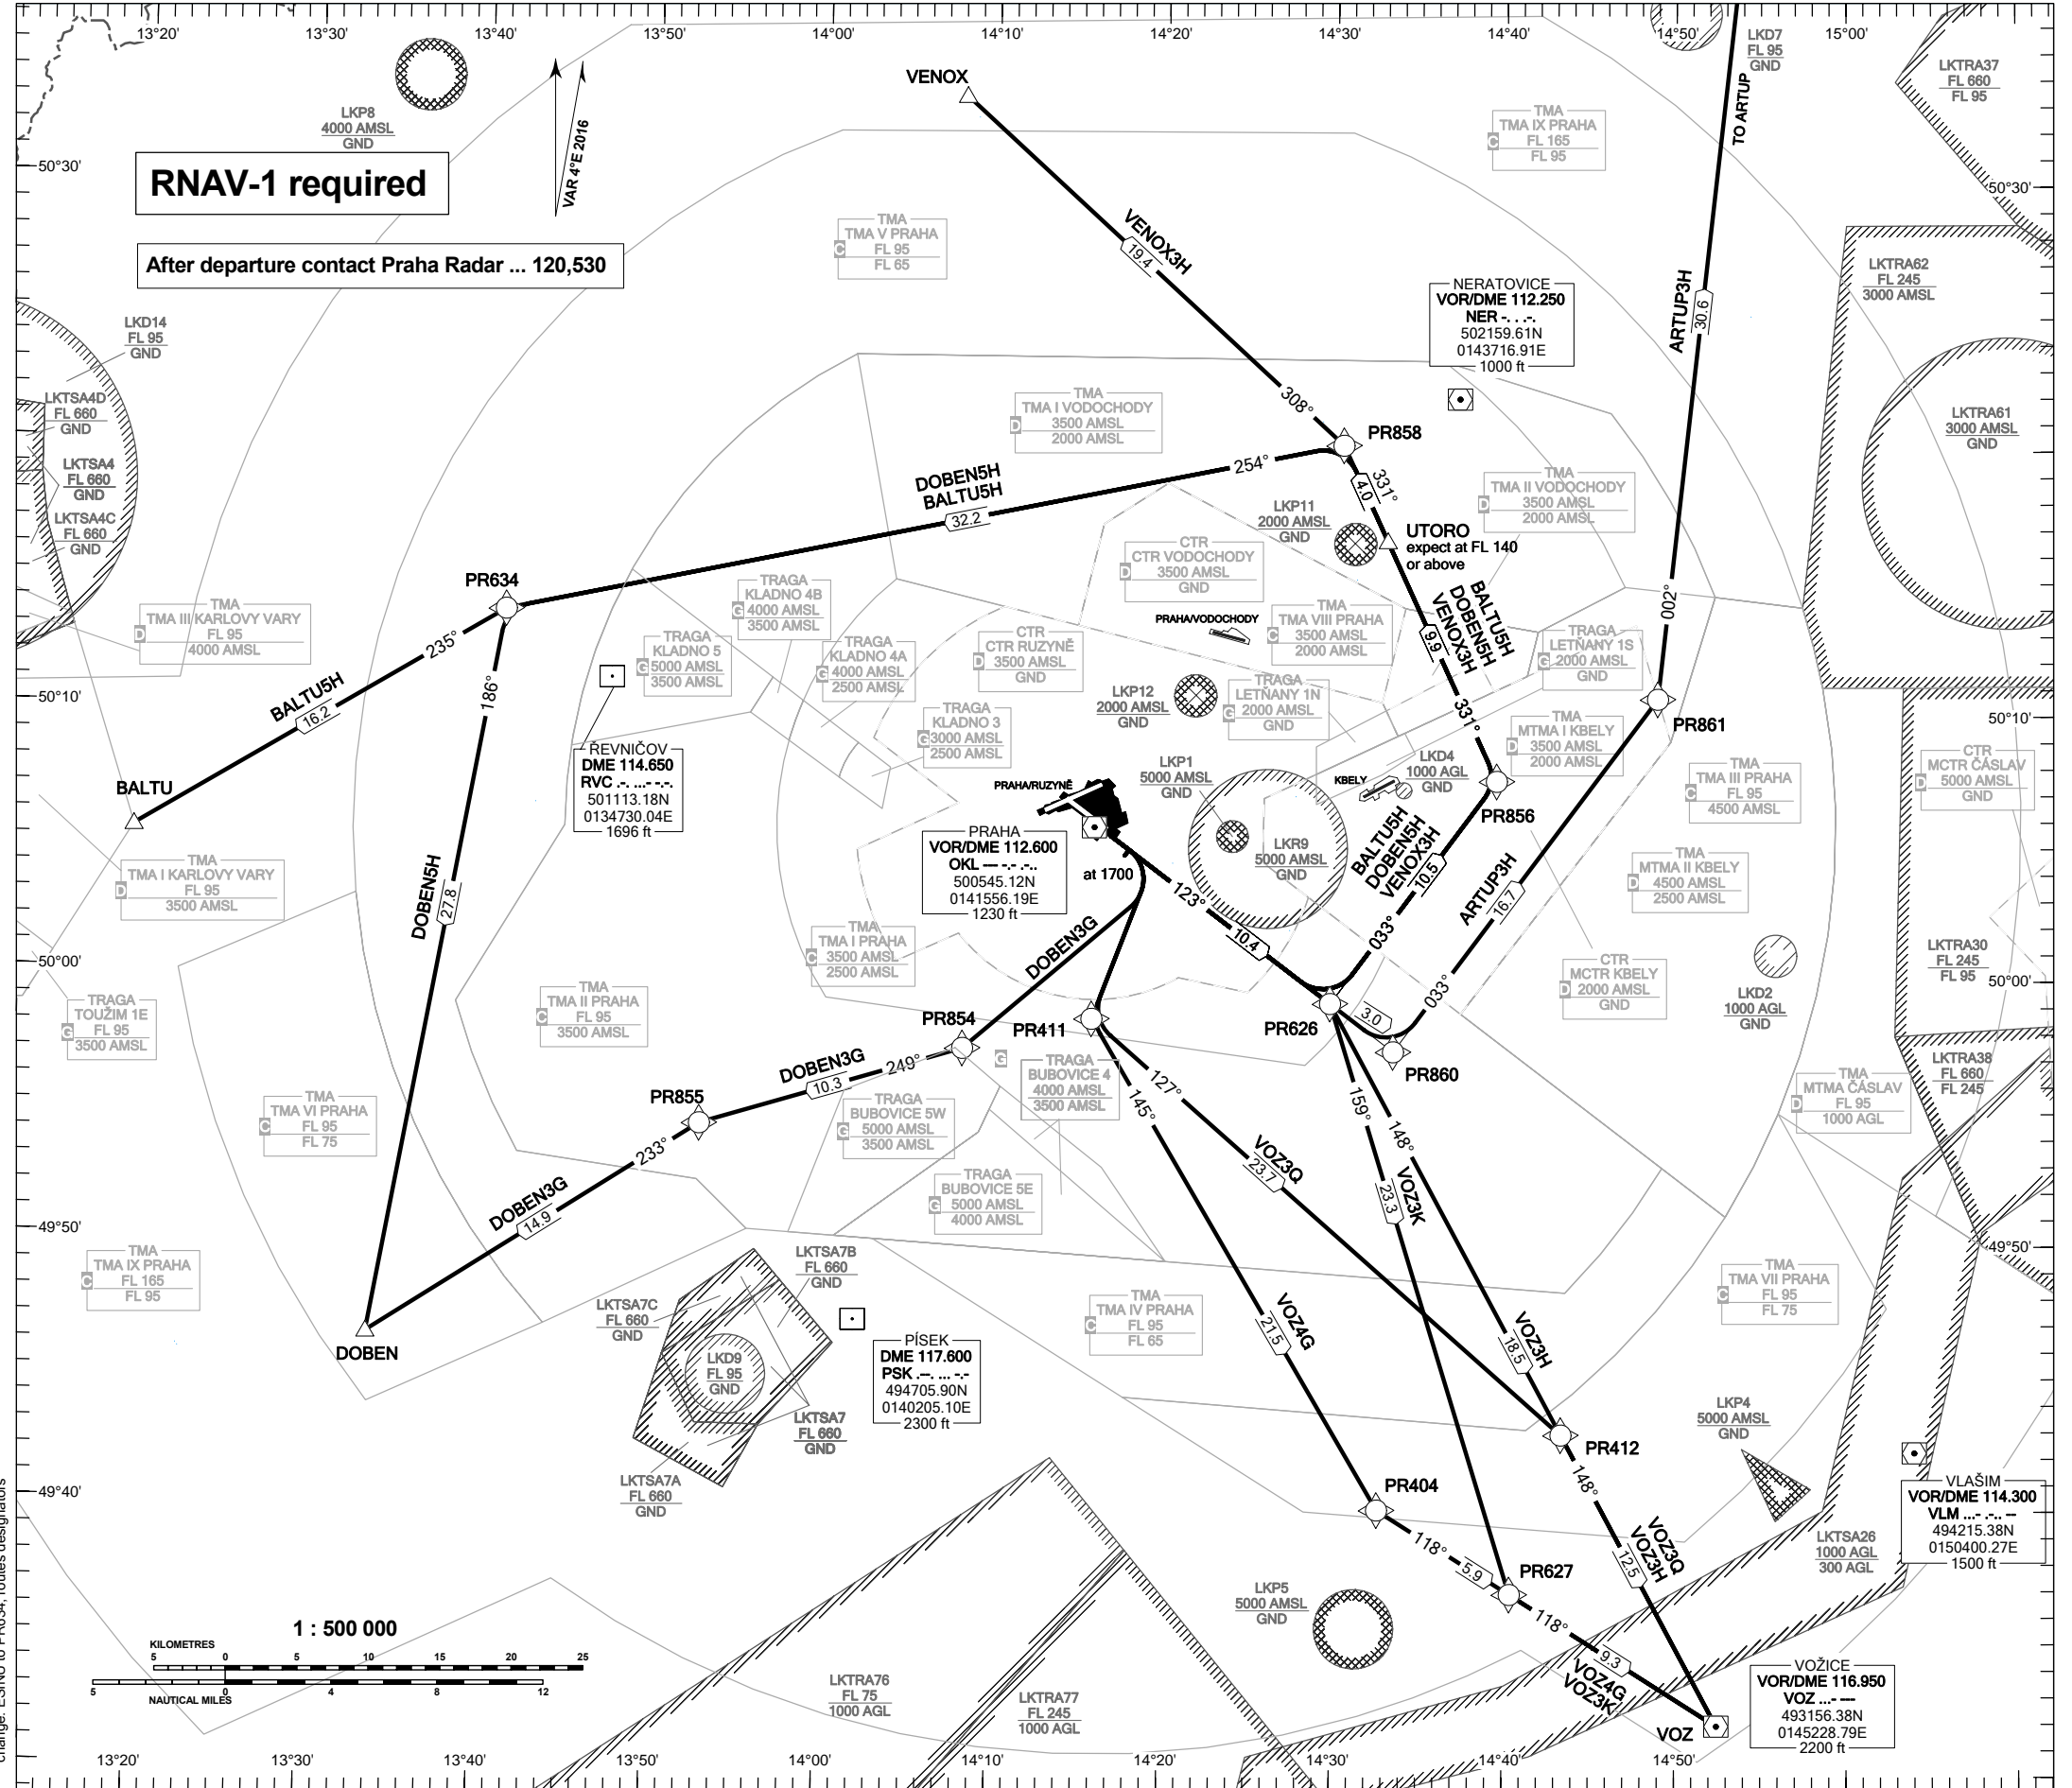


RNAV-1 required
After departure contact Praha Radar ... 120,530

VOZ 3Q
Only for propeller driven aircraft between 0500 - 2100 (0400 - 2000) UTC when RWY 24 is in use.

VOZ 3K
Only for propeller driven aircraft between 0500 - 2100 (0400 - 2000) UTC when RWY 06 is in use.

PRAHA APPROACH / RADAR	120.530
RUZYŇĚ APPROACH / RADAR	127.580
RUZYŇĚ RADAR / INFORMATION	118.310
SUPPLEMENTARY FREQ APP	136.080
RUZYŇĚ DELIVERY	120.060
RUZYŇĚ TOWER	134.560
SUPPLEMENTARY FREQ TWR	118.110
RUZYŇĚ GROUND	121.910
RUZYŇĚ ATIS	122.160
EMERGENCY FREQ	121.500

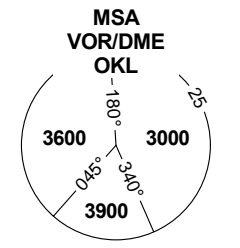

TRANSITION ALTITUDE
5000

DEPARTURE SPEED LIMIT BELOW FL 100	
JETS	MAX IAS 250 KT
PROPS	MAX IAS 180 KT

BEARINGS, TRACKS AND RADIALS ARE MAGNETIC
ALTITUDES AND ELEVATIONS ARE IN FEET
DISTANCES ARE IN NM

see AIP AD 2-LKPR-33, 2.22.4.3.5