


**RNAV STANDARD DEPARTURE CHART -
INSTRUMENT (SID) - ICAO**

**PRAHA/RUZYŇĚ
RNAV SID RWY 12**

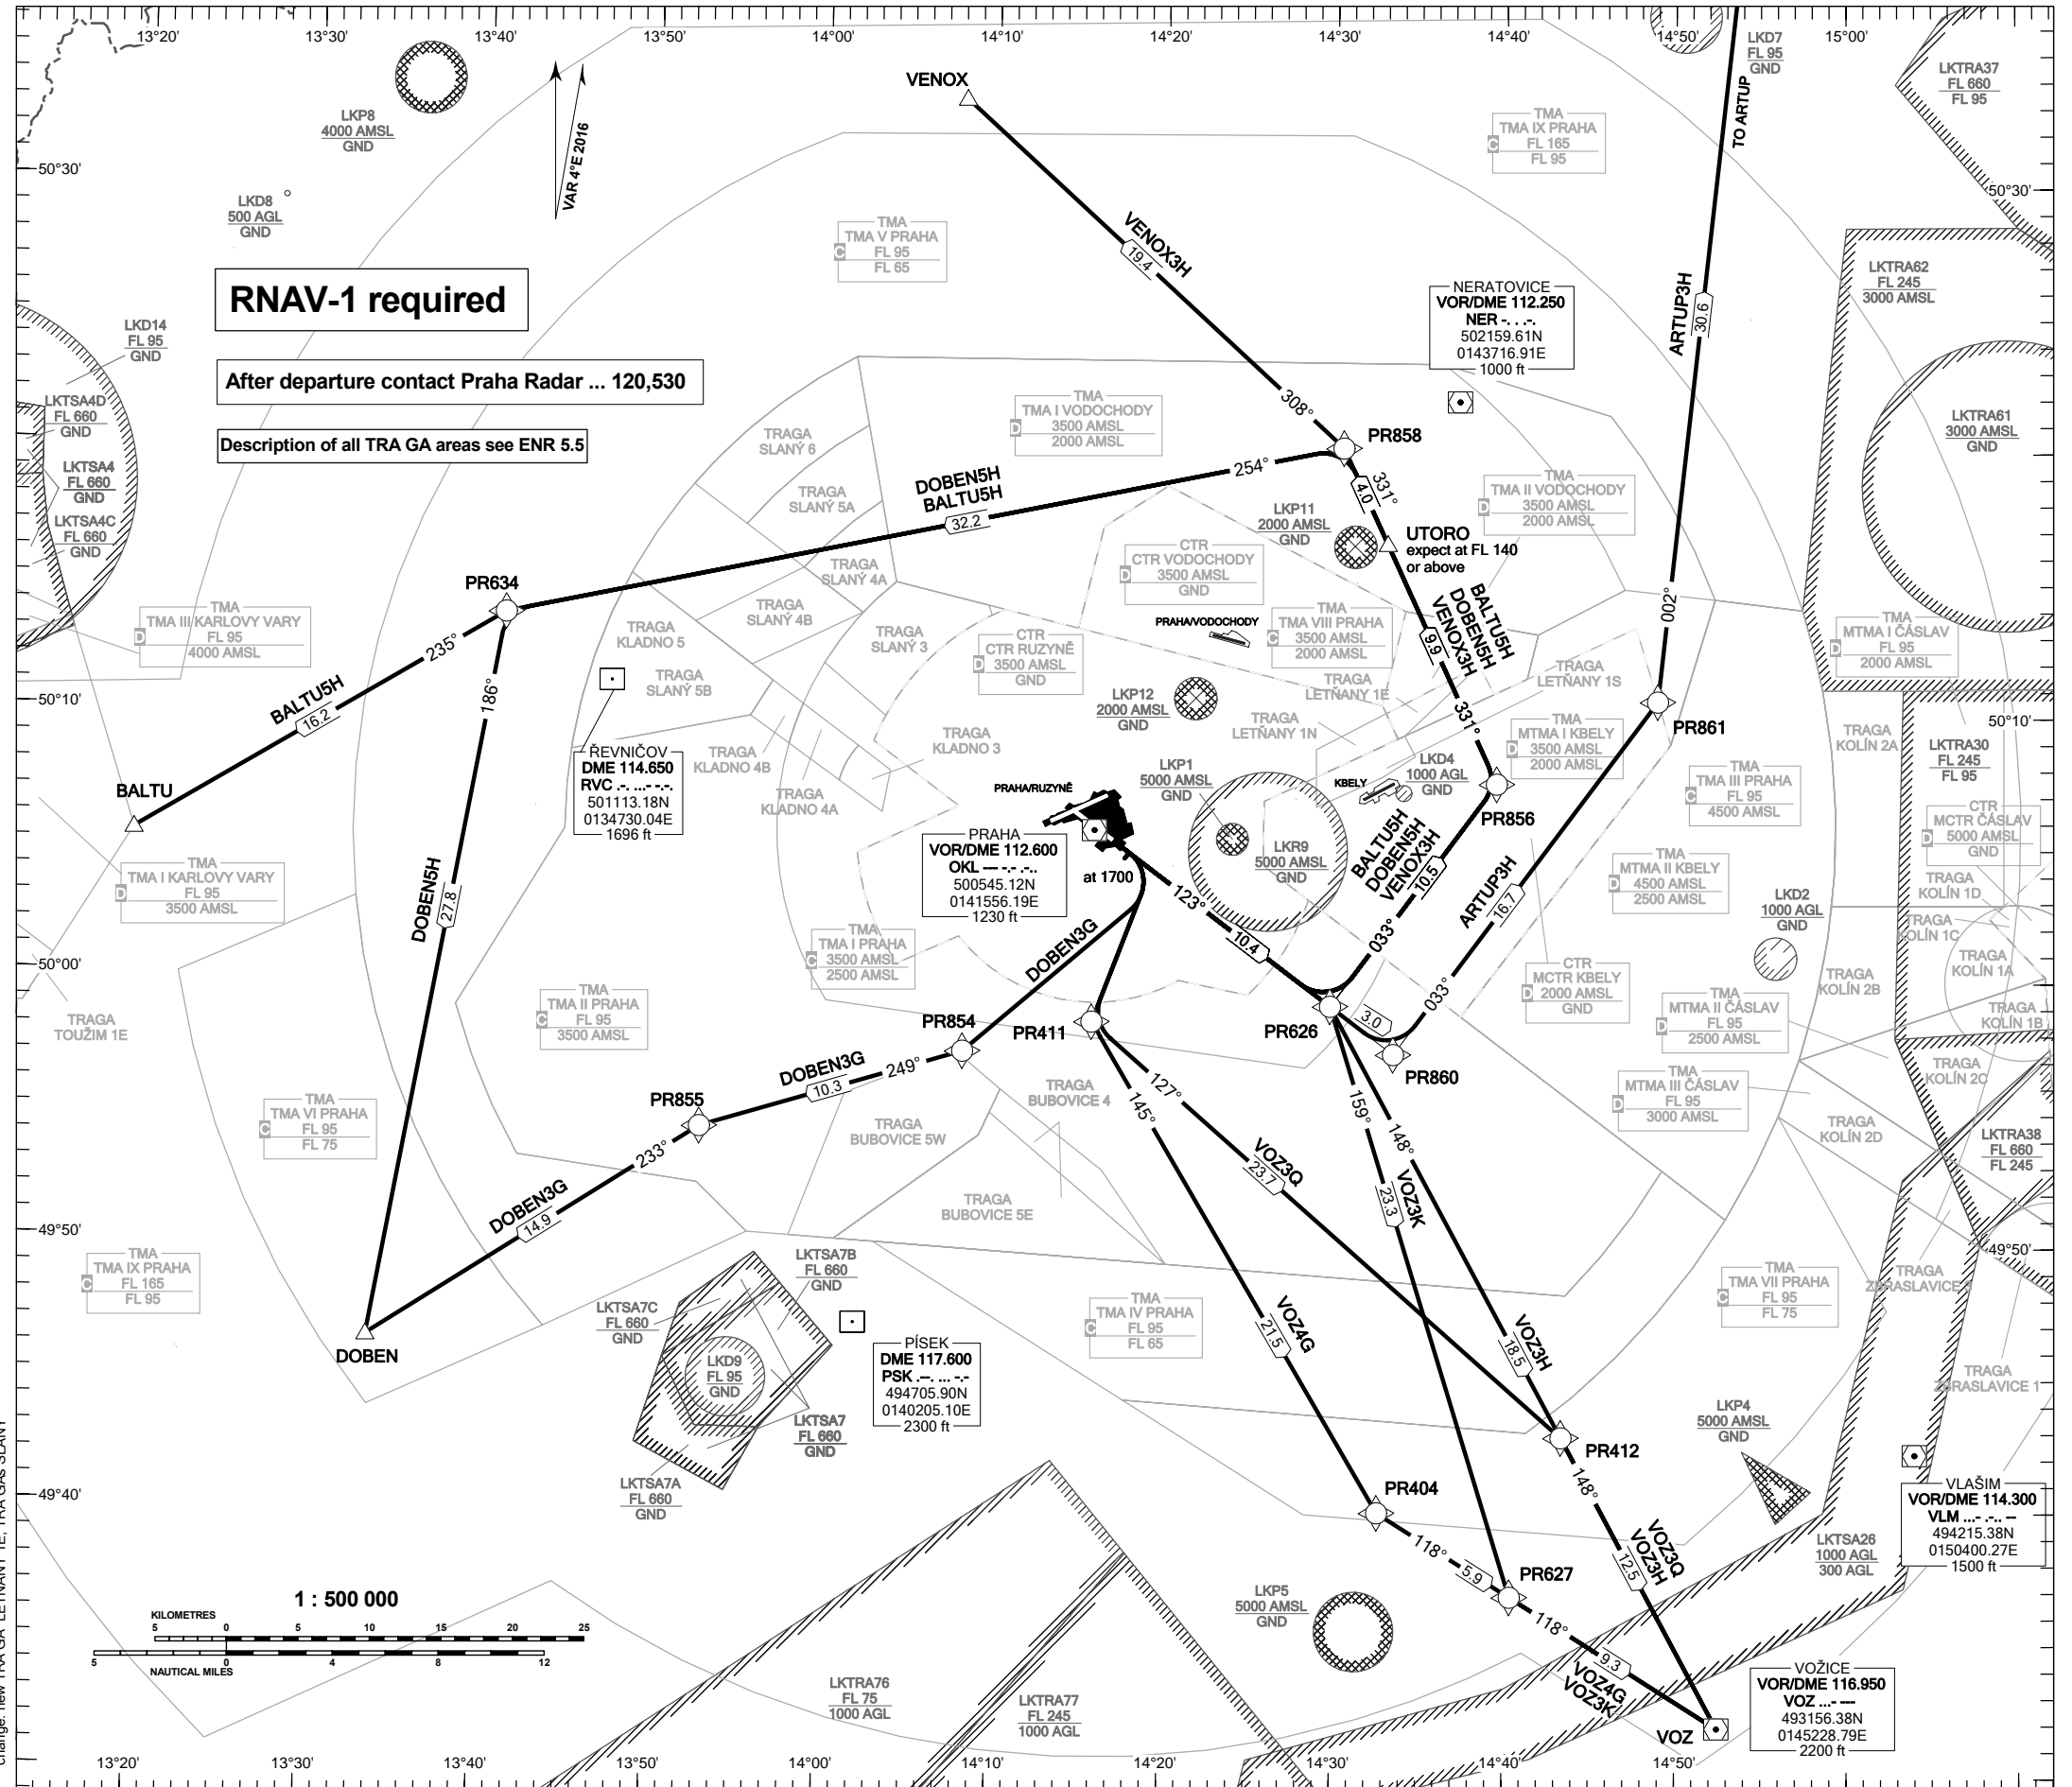

RNAV-1 required


After departure contact Praha Radar ... 120,530

Description of all TRA GA areas see ENR 5.5

VOZ 3Q
Only for propeller driven aircraft between 0500 - 2100 (0400 - 2000) UTC when RWY 24 is in use.

VOZ 3K
Only for propeller driven aircraft between 0500 - 2100 (0400 - 2000) UTC when RWY 06 is in use.

PRAHA APPROACH / RADAR	120.530
RUZYŇĚ APPROACH / RADAR	127.580
RUZYŇĚ RADAR / INFORMATION	119.010
SUPPLEMENTARY FREQ APP	118.310
RUZYŇĚ DELIVERY	136.080
RUZYŇĚ TOWER	120.060
SUPPLEMENTARY FREQ TWR	134.560
RUZYŇĚ GROUND	118.110
RUZYŇĚ ATIS	121.910
EMERGENCY FREQ	122.160
	121.500

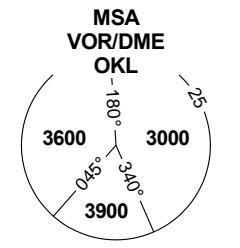

TRANSITION ALTITUDE
5000

DEPARTURE SPEED LIMIT BELOW FL 100	
JETS	MAX IAS 250 KT
PROPS	MAX IAS 180 KT

BEARINGS, TRACKS AND
RADIALS ARE MAGNETIC
ALTITUDES AND ELEVATIONS
ARE IN FEET
DISTANCES ARE IN NM

see AIP AD 2-LKPR-33, 2.22.4.3.5