


RNAV STANDARD DEPARTURE CHART INSTRUMENT (SID) - ICAO

PRAHA RADAR 127.350
KUNOVICE TOWER 120.105
EMERGENCY FREQ 121.500

MSA NDB KNE

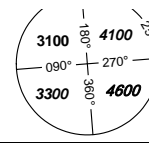


KUNOVICE RWY 02C

BEARINGS, TRACKS AND
RADIALS ARE MAGNETIC
ALTITUDES AND ELEVATIONS
ARE IN FEET
DISTANCES ARE IN NM

TRANSITION ALTITUDE
5000

Departure routes may cross through airspace class E.
Check lower limits of TMA BRNO

RNAV 1 REQUIRED

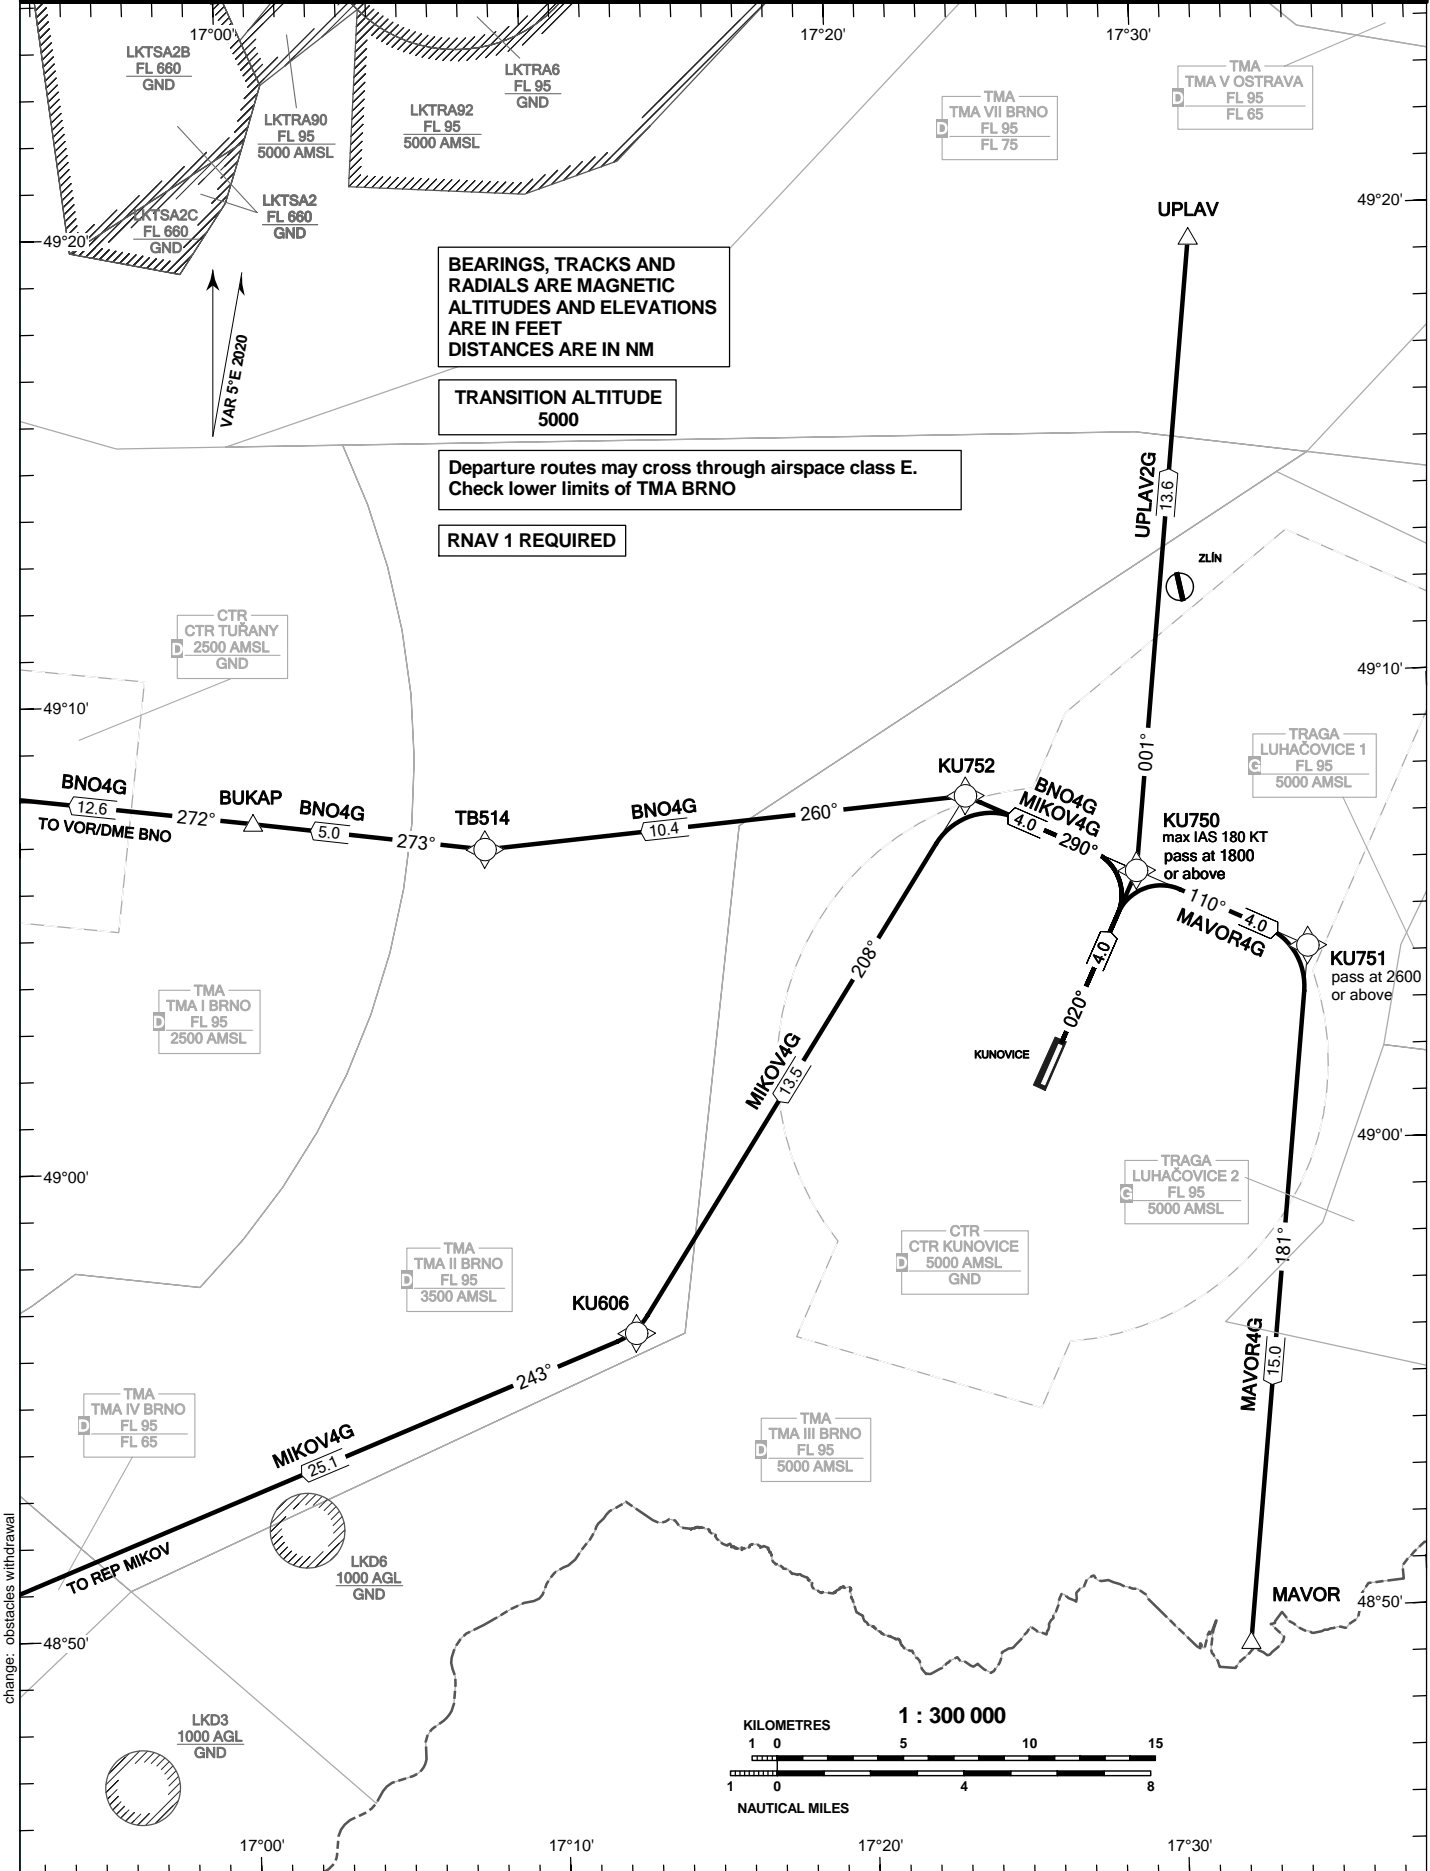

change: obstacles withdrawal