


**RNAV STANDARD DEPARTURE CHART - INSTRUMENT  
(SID) - ICAO**


**PRAHA/RUZYŇĚ  
RNAV SID RWY 06**

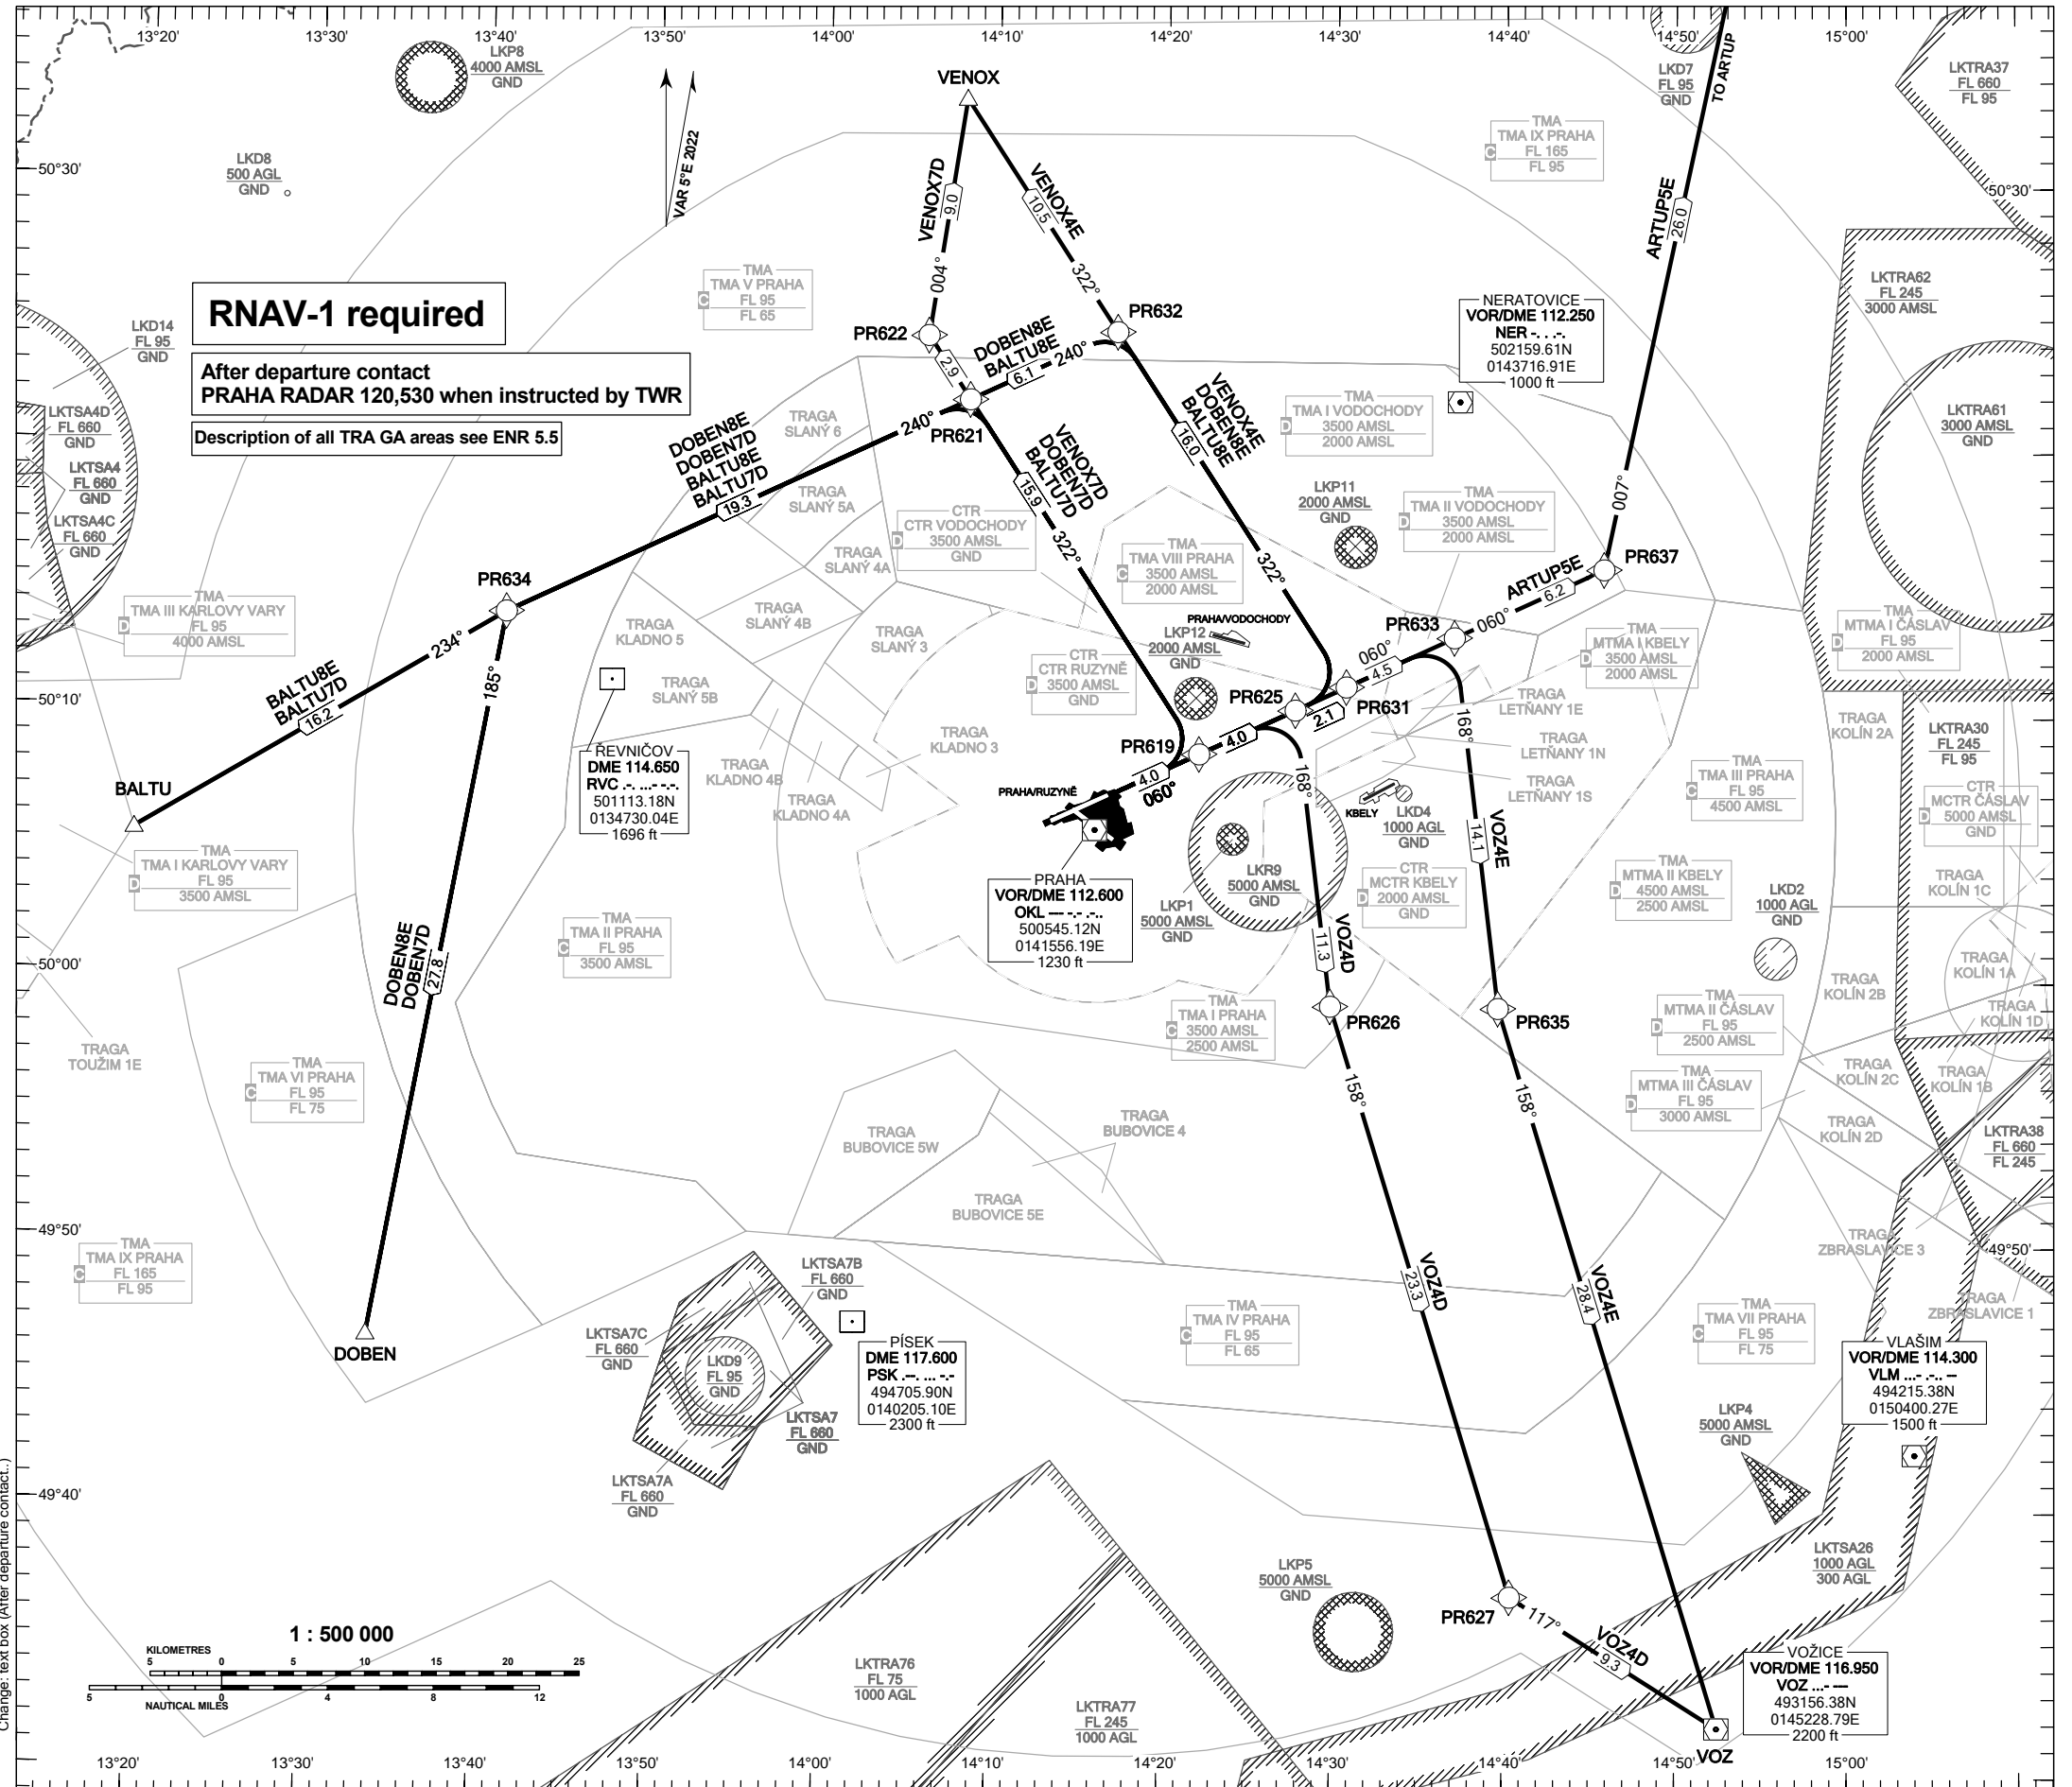

**RNAV-1 required**

After departure contact  
**PRAHA RADAR 120,530** when instructed by TWR  
Description of all TRA GA areas see ENR 5.5

PRAHA APPROACH / RADAR	120.530
RUZYŇĚ APPROACH / RADAR	127.580
RUZYŇĚ RADAR / INFORMATION	118.310
SUPPLEMENTARY FREQ APP	136.080
RUZYŇĚ DELIVERY	120.060
RUZYŇĚ TOWER	134.560
SUPPLEMENTARY FREQ TWR	118.110
RUZYŇĚ GROUND	121.910
RUZYŇĚ ATIS	122.160
EMERGENCY FREQ	121.500

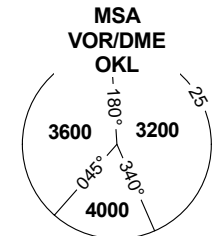

TRANSITION ALTITUDE  
5000

DEPARTURE SPEED LIMIT  
BELOW FL 100

JETS	MAX IAS 250 KT
PROPS	MAX IAS 180 KT

BEARINGS, TRACKS AND  
RADIALS ARE MAGNETIC  
ALTITUDES AND ELEVATIONS  
ARE IN FEET  
DISTANCES ARE IN NM

see AIP AD 2-LKPR-33, 2.22.4.3.5

Change: text box (After departure contact..)