


# STANDARD DEPARTURE CHART - INSTRUMENT (SID) - ICAO

# PRAHA/RUZYŇĚ RNAV SID RWY 06

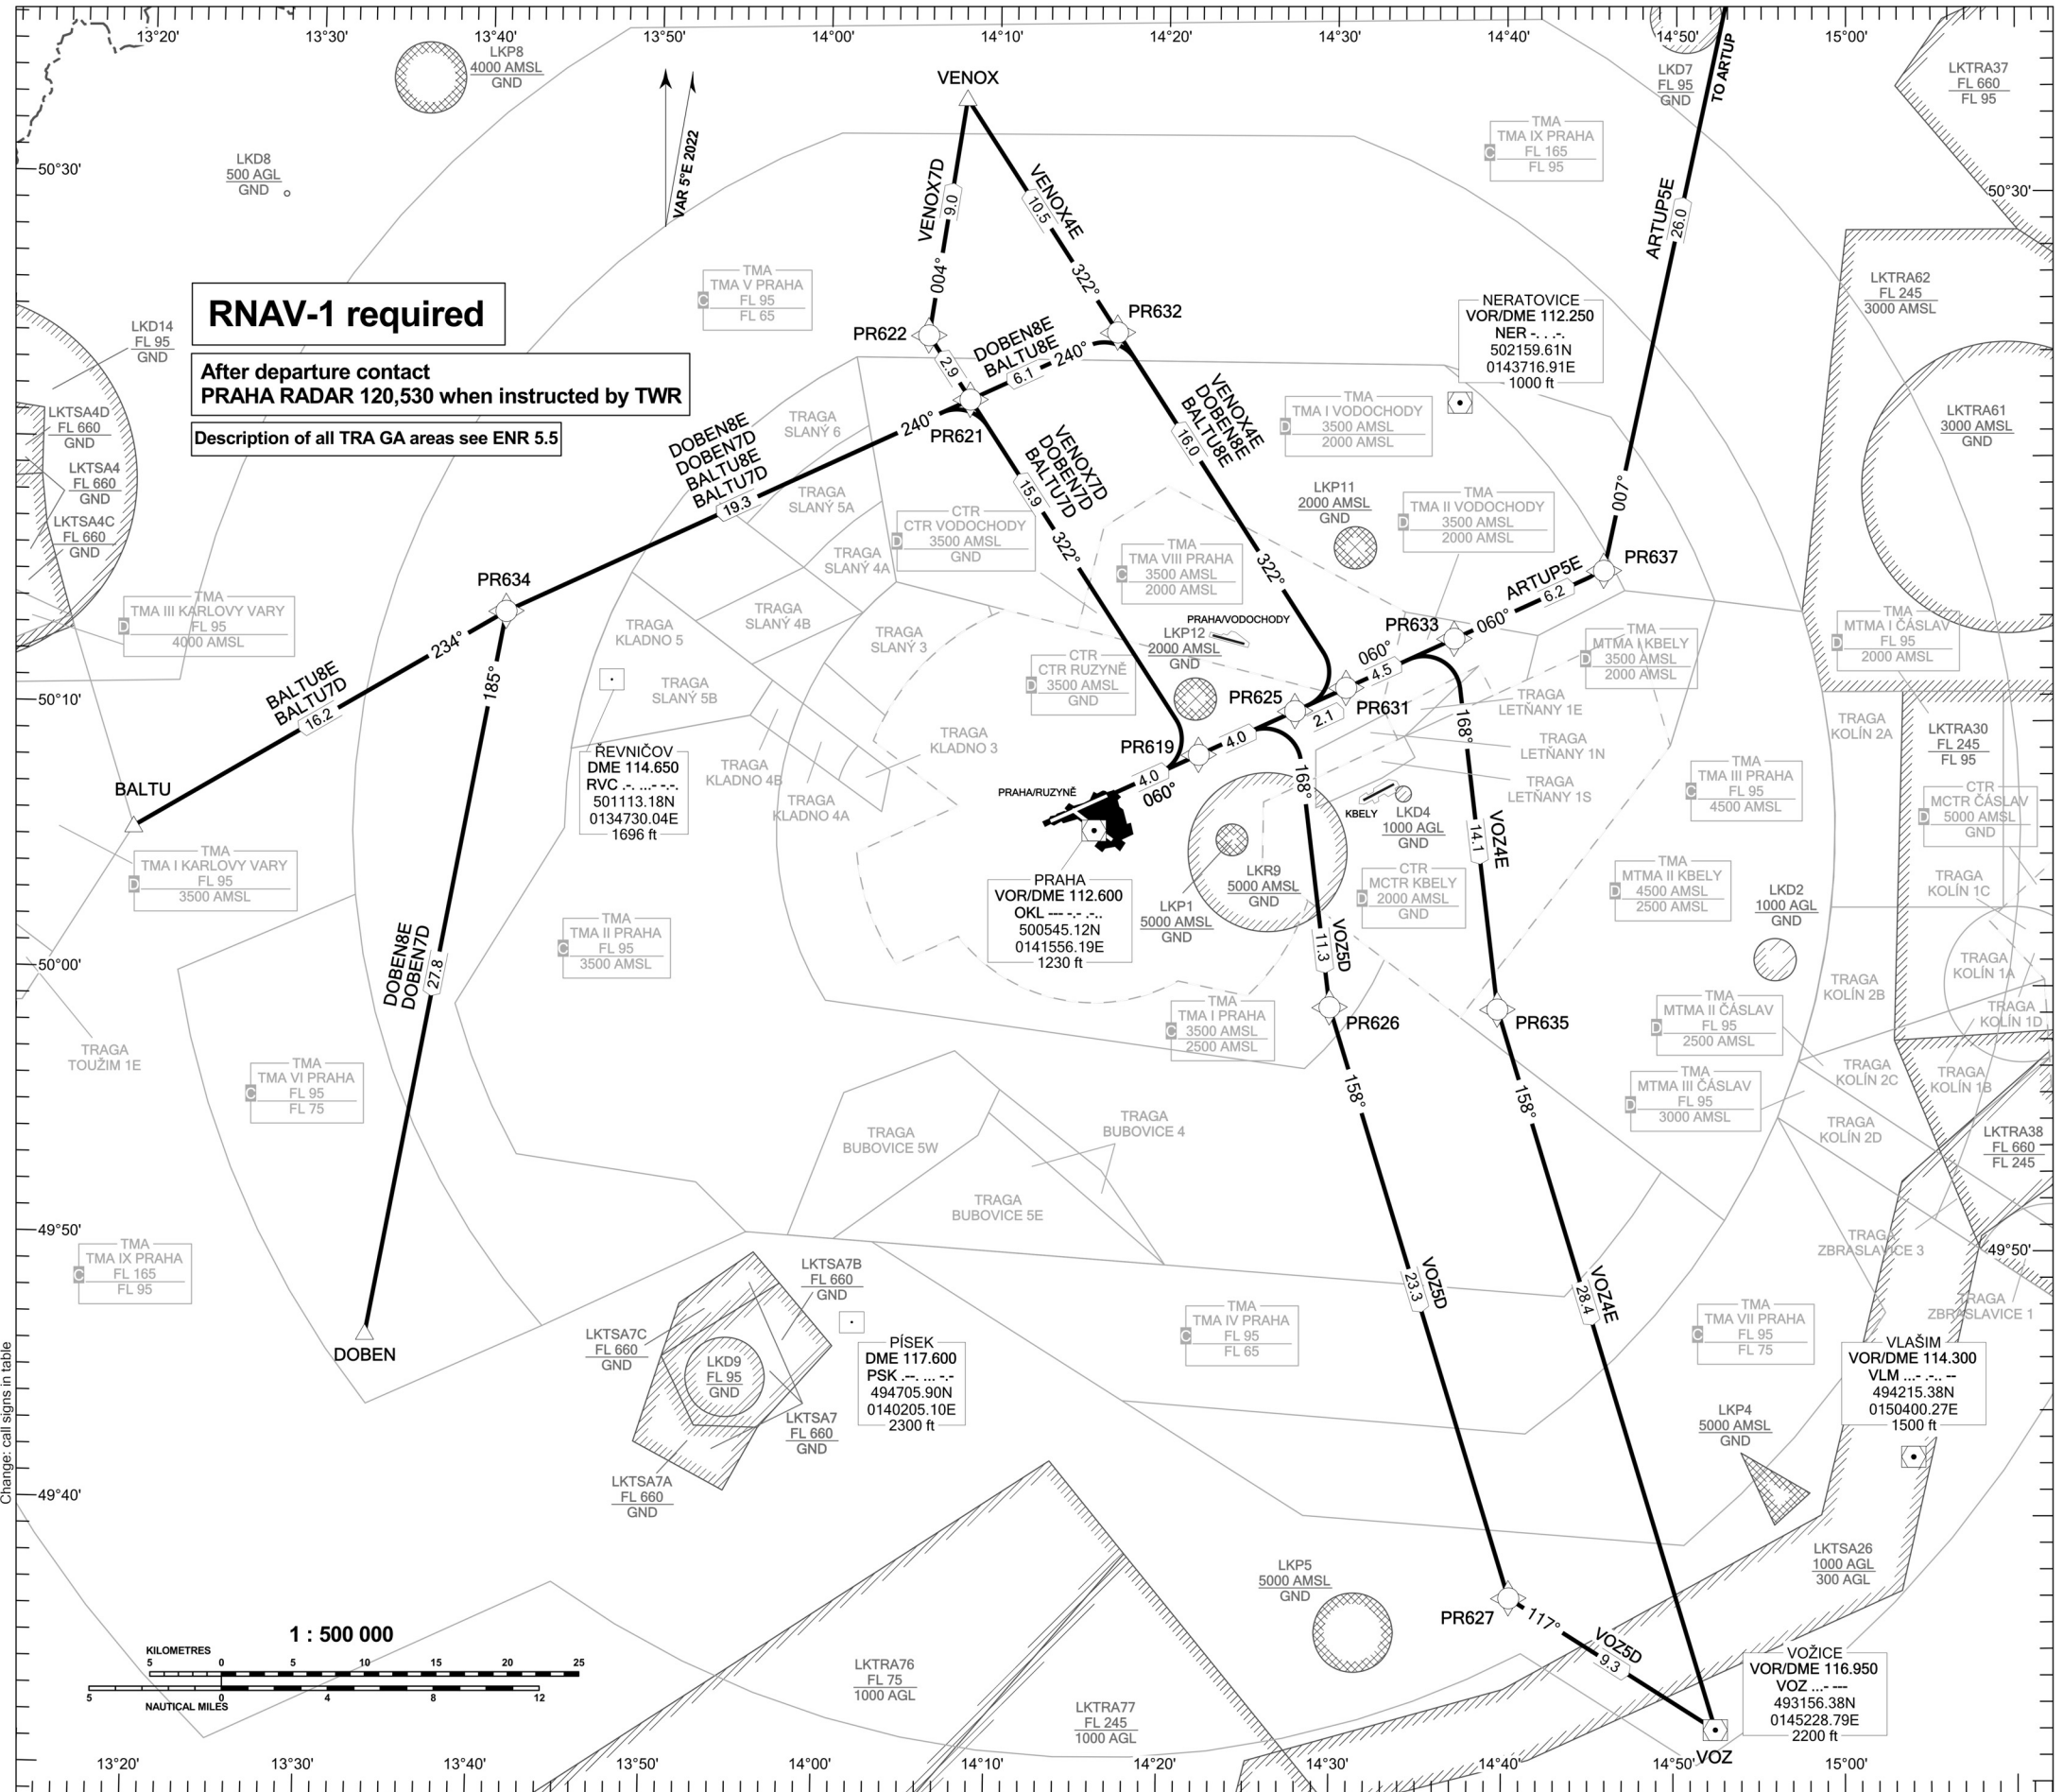


**RNAV-1 required**

After departure contact  
PRAHA RADAR 120,530 when instructed by TWR

Description of all TRA GA areas see ENR 5.5

PRAHA RADAR	120.530
RUZYŇĚ RADAR	127.580
RUZYŇĚ RADAR	119.010
SUPPLEMENTARY FREQ APP	118.310
RUZYŇĚ DELIVERY	120.060
RUZYŇĚ TOWER	134.560
SUPPLEMENTARY FREQ TWR	118.110
RUZYŇĚ GROUND	121.910
RUZYŇĚ ATIS	122.160
EMERGENCY FREQ	121.500

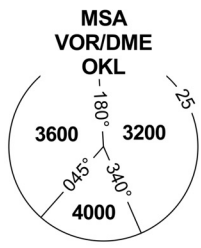

TRANSITION ALTITUDE  
5000

DEPARTURE SPEED LIMIT BELOW FL 100	
JETS	MAX IAS 250 KT
PROPS	MAX IAS 180 KT

see AIP AD 2-LKPR-33, 2.22.4.3.5

BEARINGS, TRACKS AND  
RADIALS ARE MAGNETIC  
ALTITUDES AND ELEVATIONS  
ARE IN FEET  
DISTANCES ARE IN NM

