


**RNAV STANDARD
DEPARTURE CHART
INSTRUMENT (SID) - ICAO**

BRNO APPROACH / RADAR	127.350
KUNOVICE TOWER	120.555
EMERGENCY FREQ	121.500

MSA L KNE

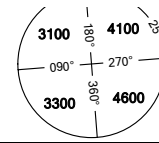


**KUNOVICE
RWY 20C**

BEARINGS, TRACKS AND RADIALS ARE MAGNETIC
ALTITUDES AND ELEVATIONS
ARE IN FEET
DISTANCES ARE IN NM

TRANSITION ALTITUDE
5000

Departure routes may cross through airspace class E.
Check lower limits of TMA BRNO

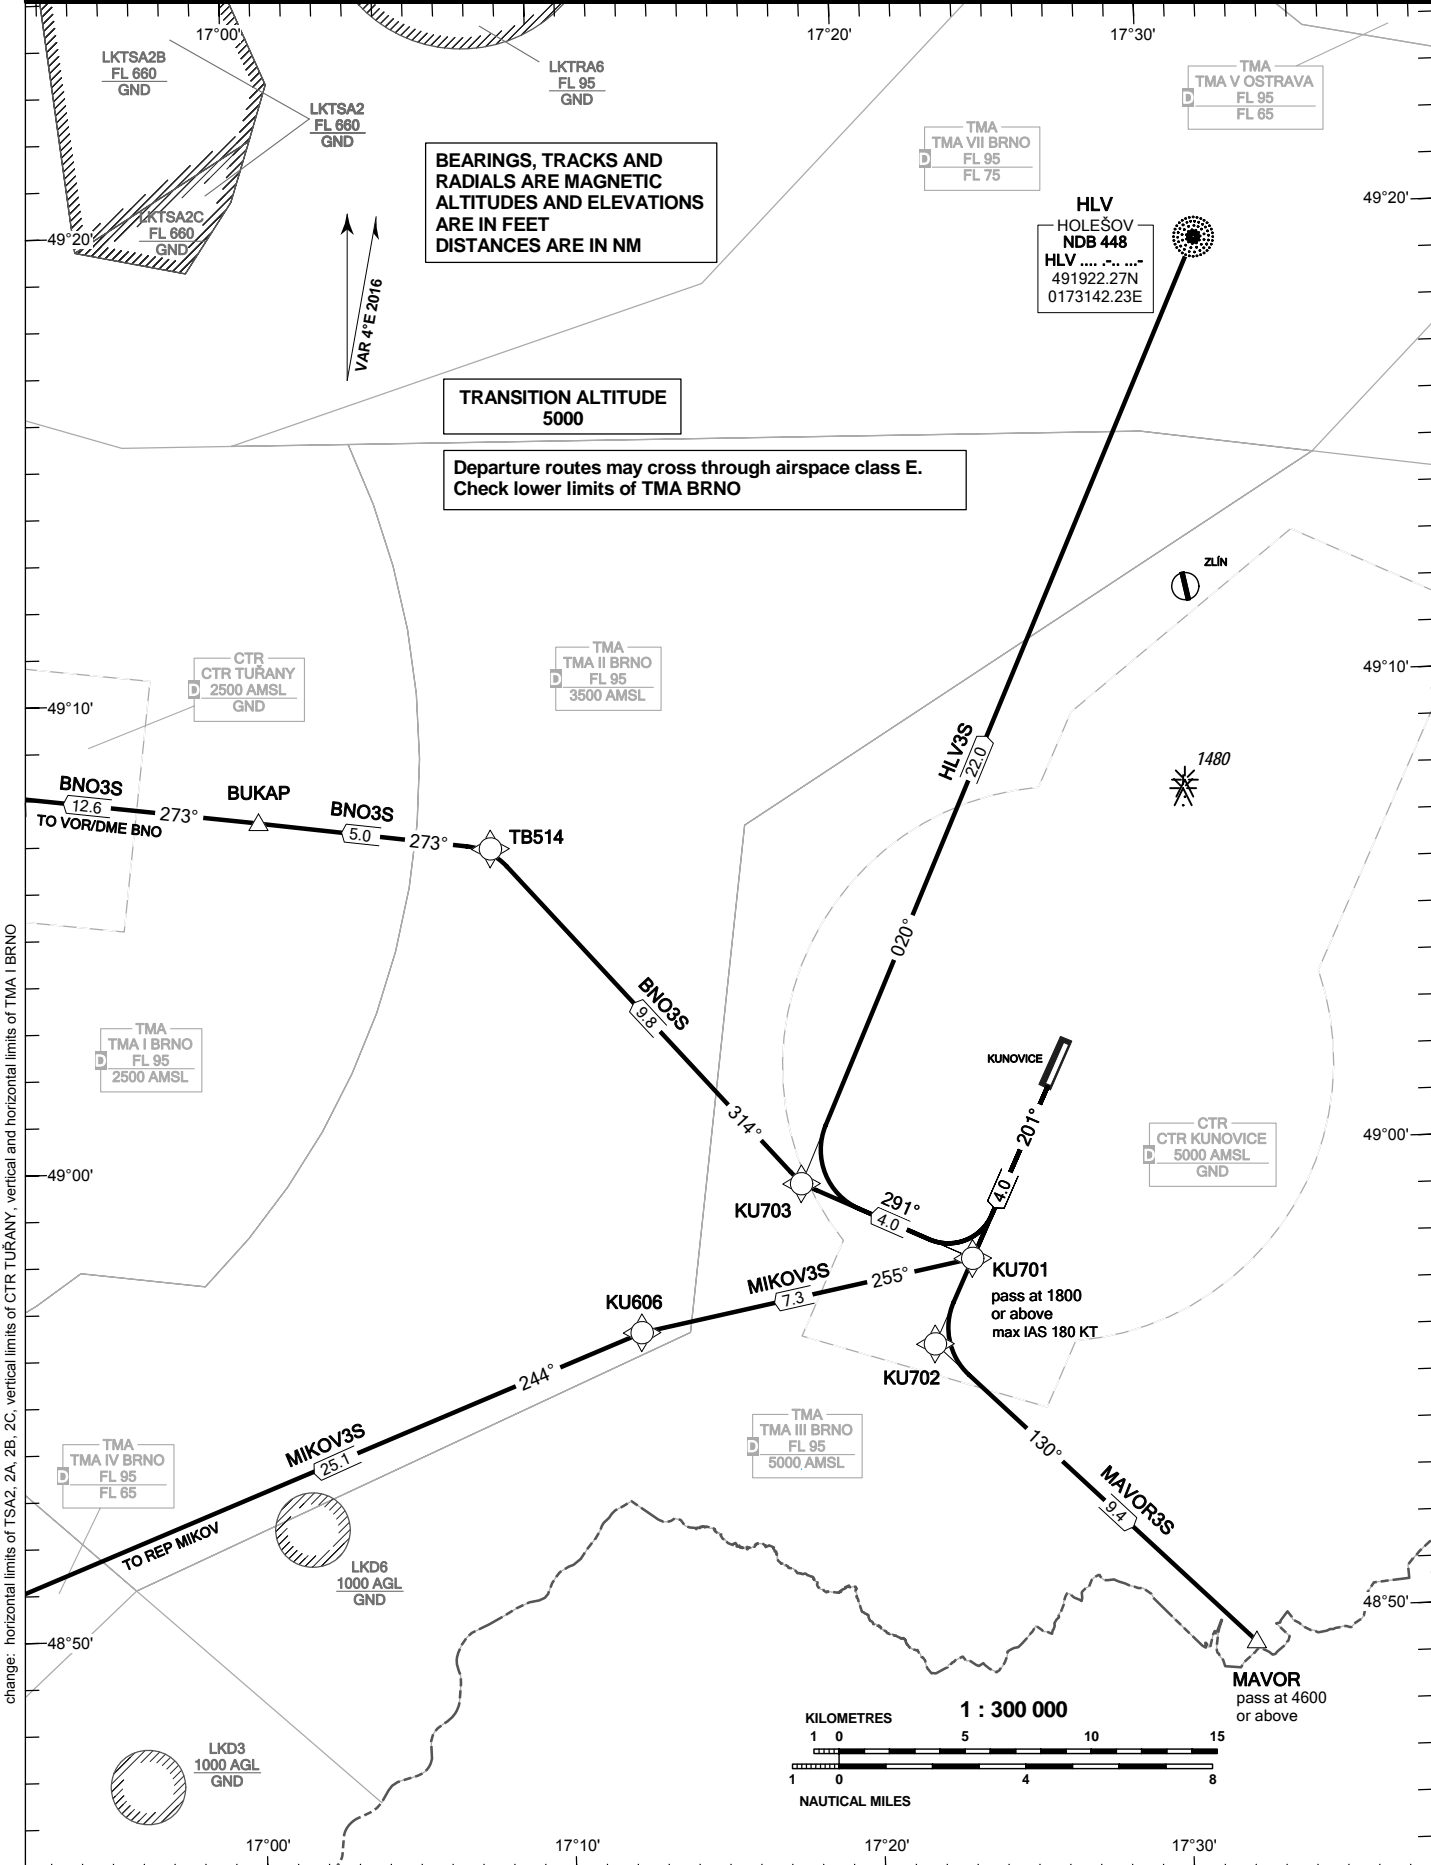

change: horizontal limits of TSA2, 2A, 2B, 2C, vertical limits of CTR TUŘANY, vertical and horizontal limits of TMA I BRNO

