

ARP 50° 06'03''N
014° 15'36''E

RUZYNĚ TWR 134,560
121,500

**RUZYNĚ GROUND
RUZYNĚ DELIVERY**

AD ELEV1234 ft / 376 m

AERODROME CHART - ICAO

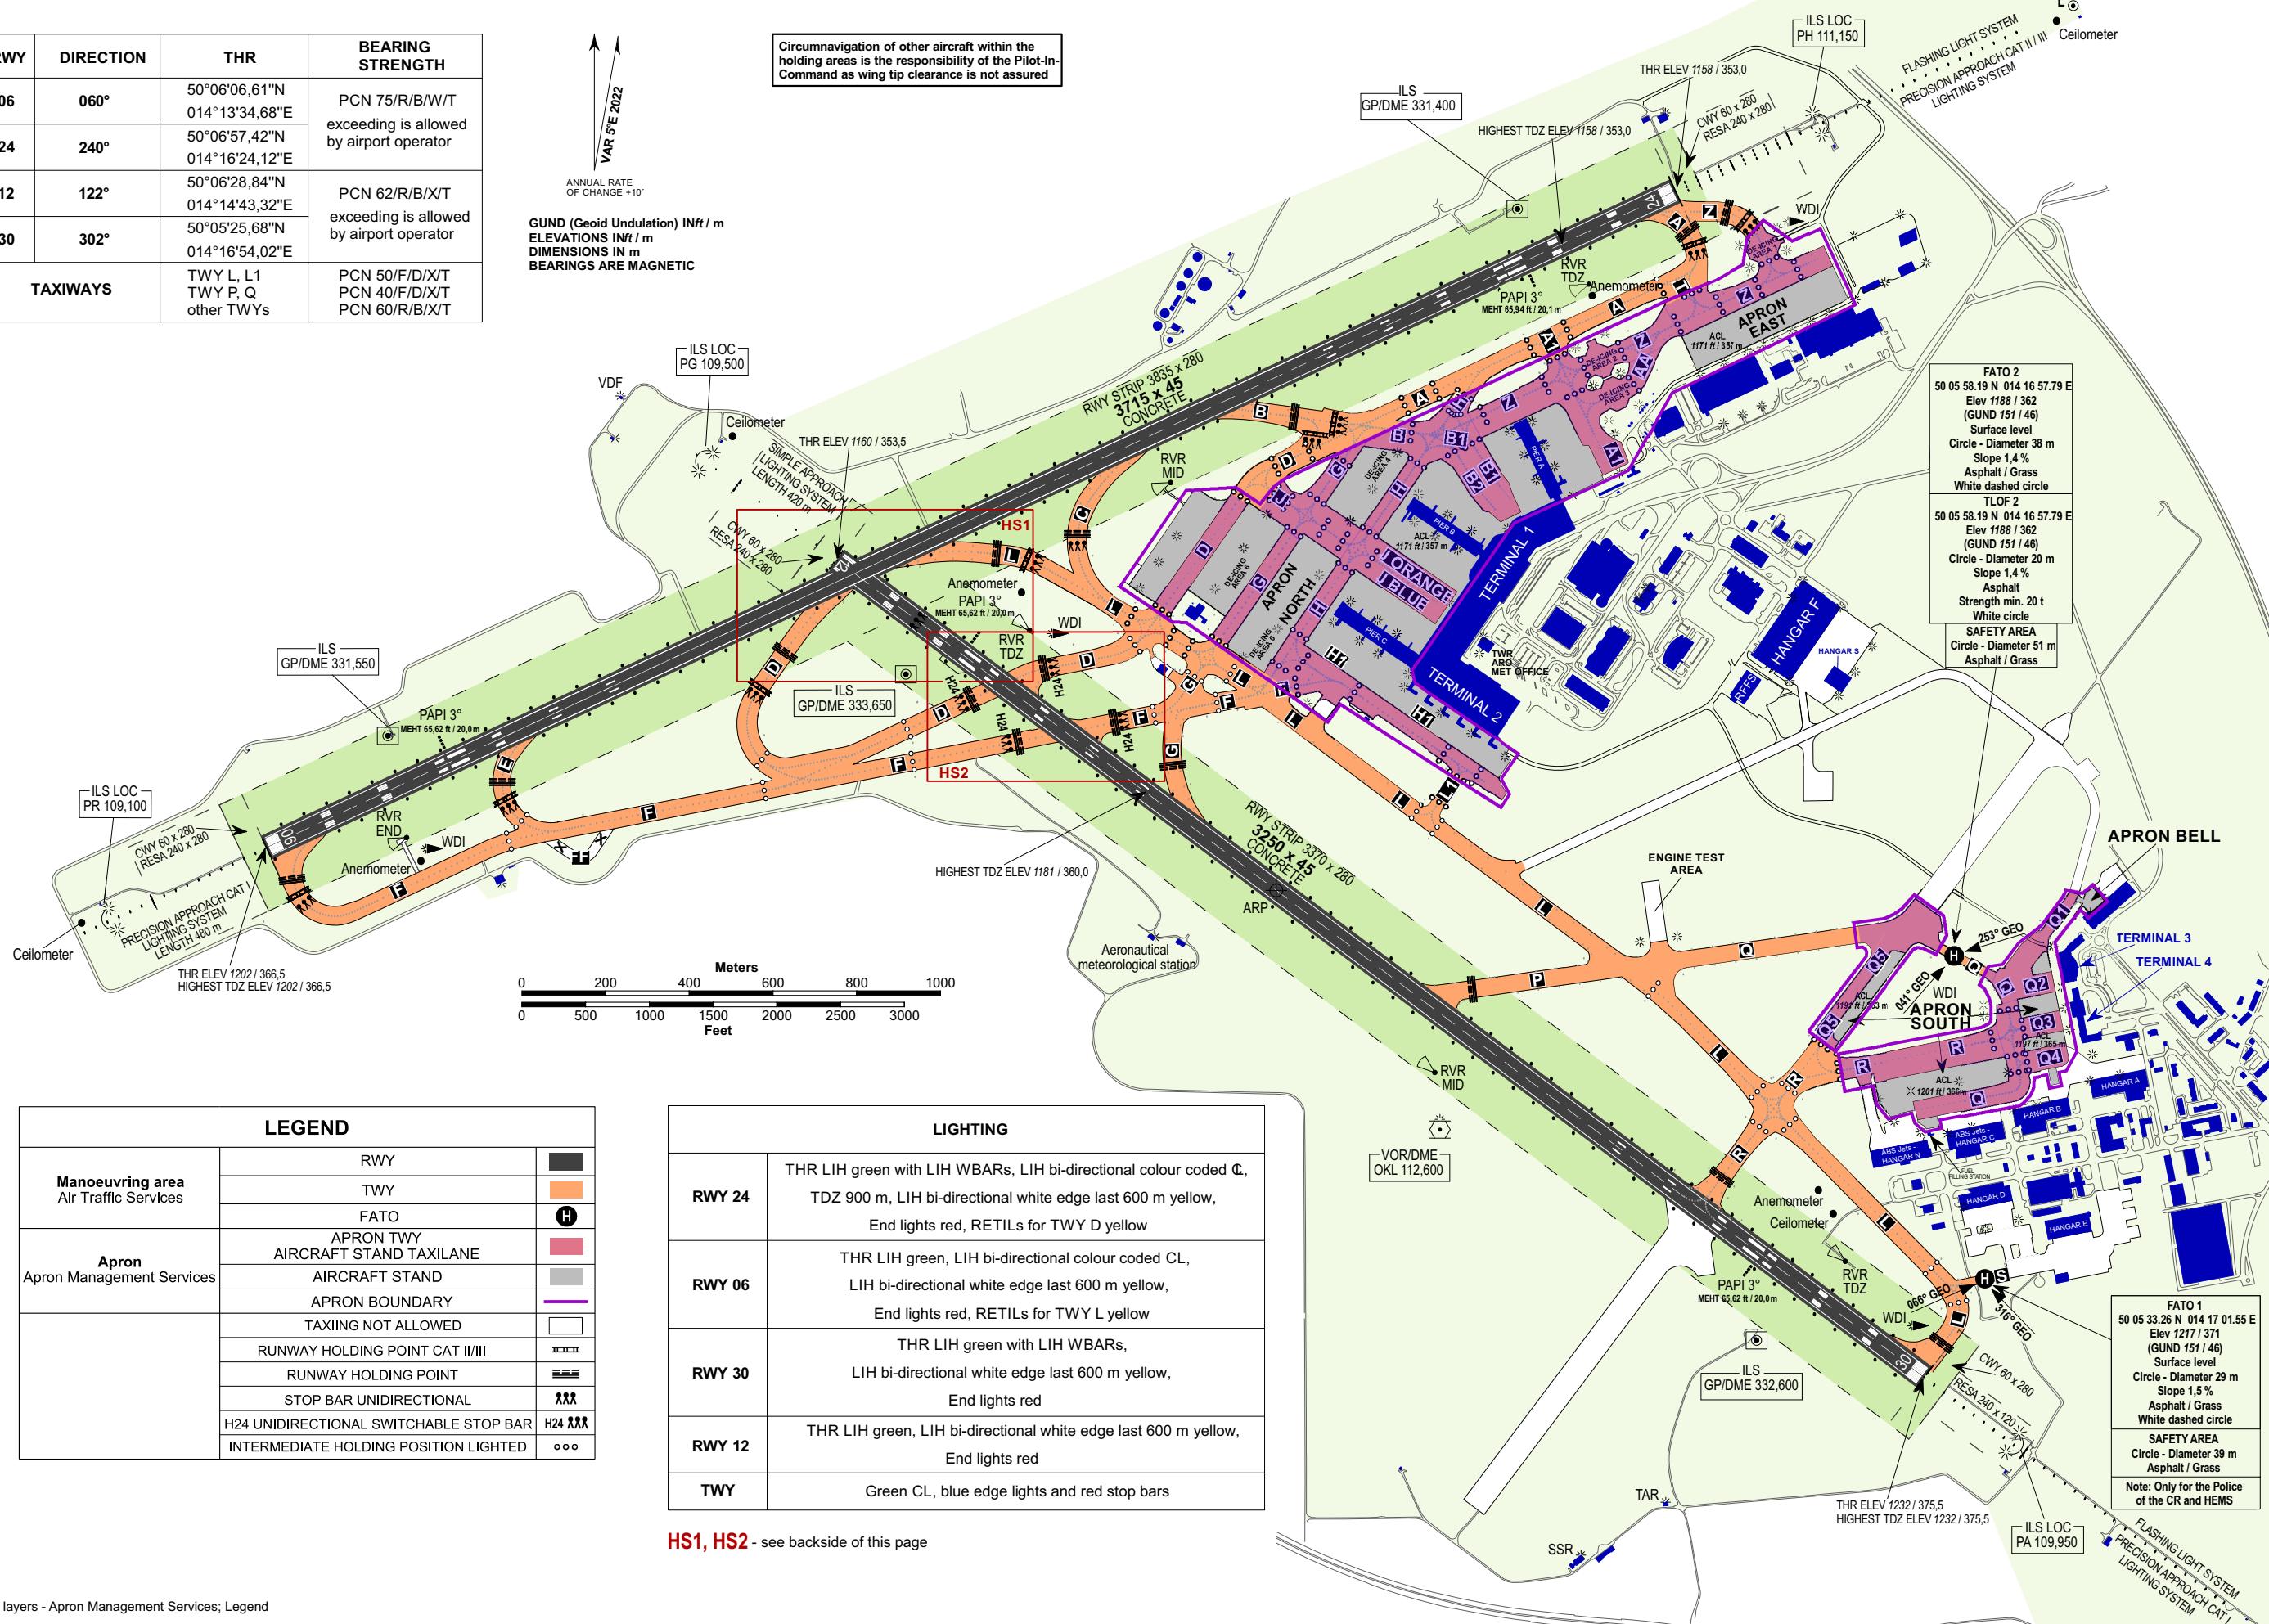
PRAHA/Ruzyně

RWY	DIRECTION	THR	BEARING STRENGTH
06	060°	50°06'06,61"N 014°13'34,68"E	PCN 75/R/B/W/T exceeding is allowed by airport operator
24	240°	50°06'57,42"N 014°16'24,12"E	
12	122°	50°06'28,84"N 014°14'43,32"E	PCN 62/R/B/X/T exceeding is allowed by airport operator
30	302°	50°05'25,68"N 014°16'54,02"E	
TAXIWAYS		TWY L, L1 TWY P, Q other TWYs	PCN 50/F/D/X/T PCN 40/F/D/X/T PCN 60/R/B/X/T

Circumnavigation of other aircraft within the holding areas is the responsibility of the Pilot-Command as wing tip clearance is not assured.

ANNUAL RATE
OF CHANGE $\pm 10'$

ND (Geoid Undulation) IN ft
ELEVATIONS IN ft / m
ENSIONS IN m
ARINGS ARE MAGNETIC

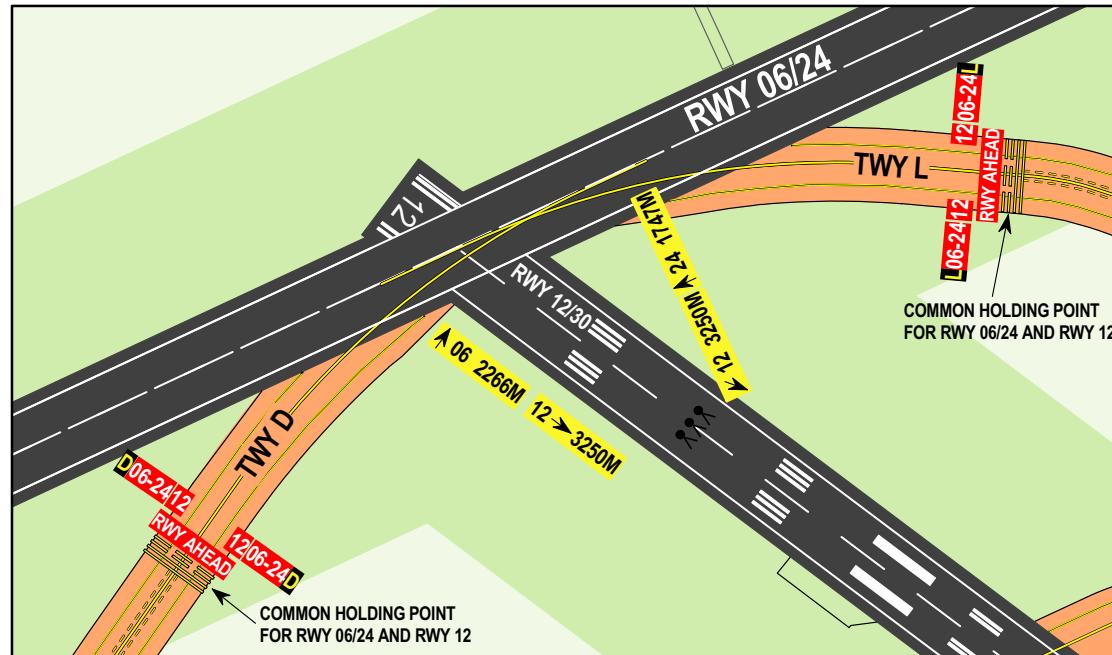


change: new layers - Apron Management Services; Legend

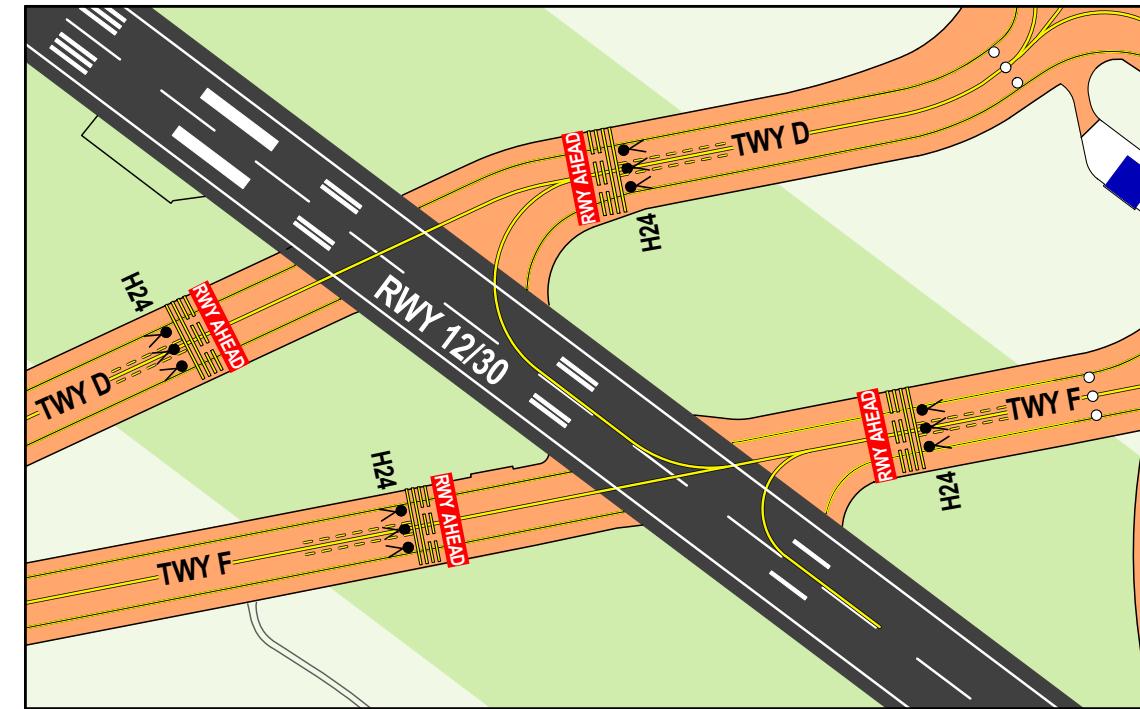
RWY 06/24 IN USE

Possible misidentification of TWY D, RWY 12 AND TWY L.

After landing on RWY 06/24 do not vacate via RWY 12 unless explicitly instructed by ATC to do so.

**HS1****TWYs D and F cross the active RWY 12/30**

The Stop Bars on TWYs D and F are controlled automatically. Pilots must expect a short delay between the clearance to cross the active RWY and the consequent Stop Bar switch-off.

**HS2**