


STANDARD DEPARTURE CHART - INSTRUMENT (SID) - ICAO

PRAHA/RUZYŇĚ RNAV SID RWY 30

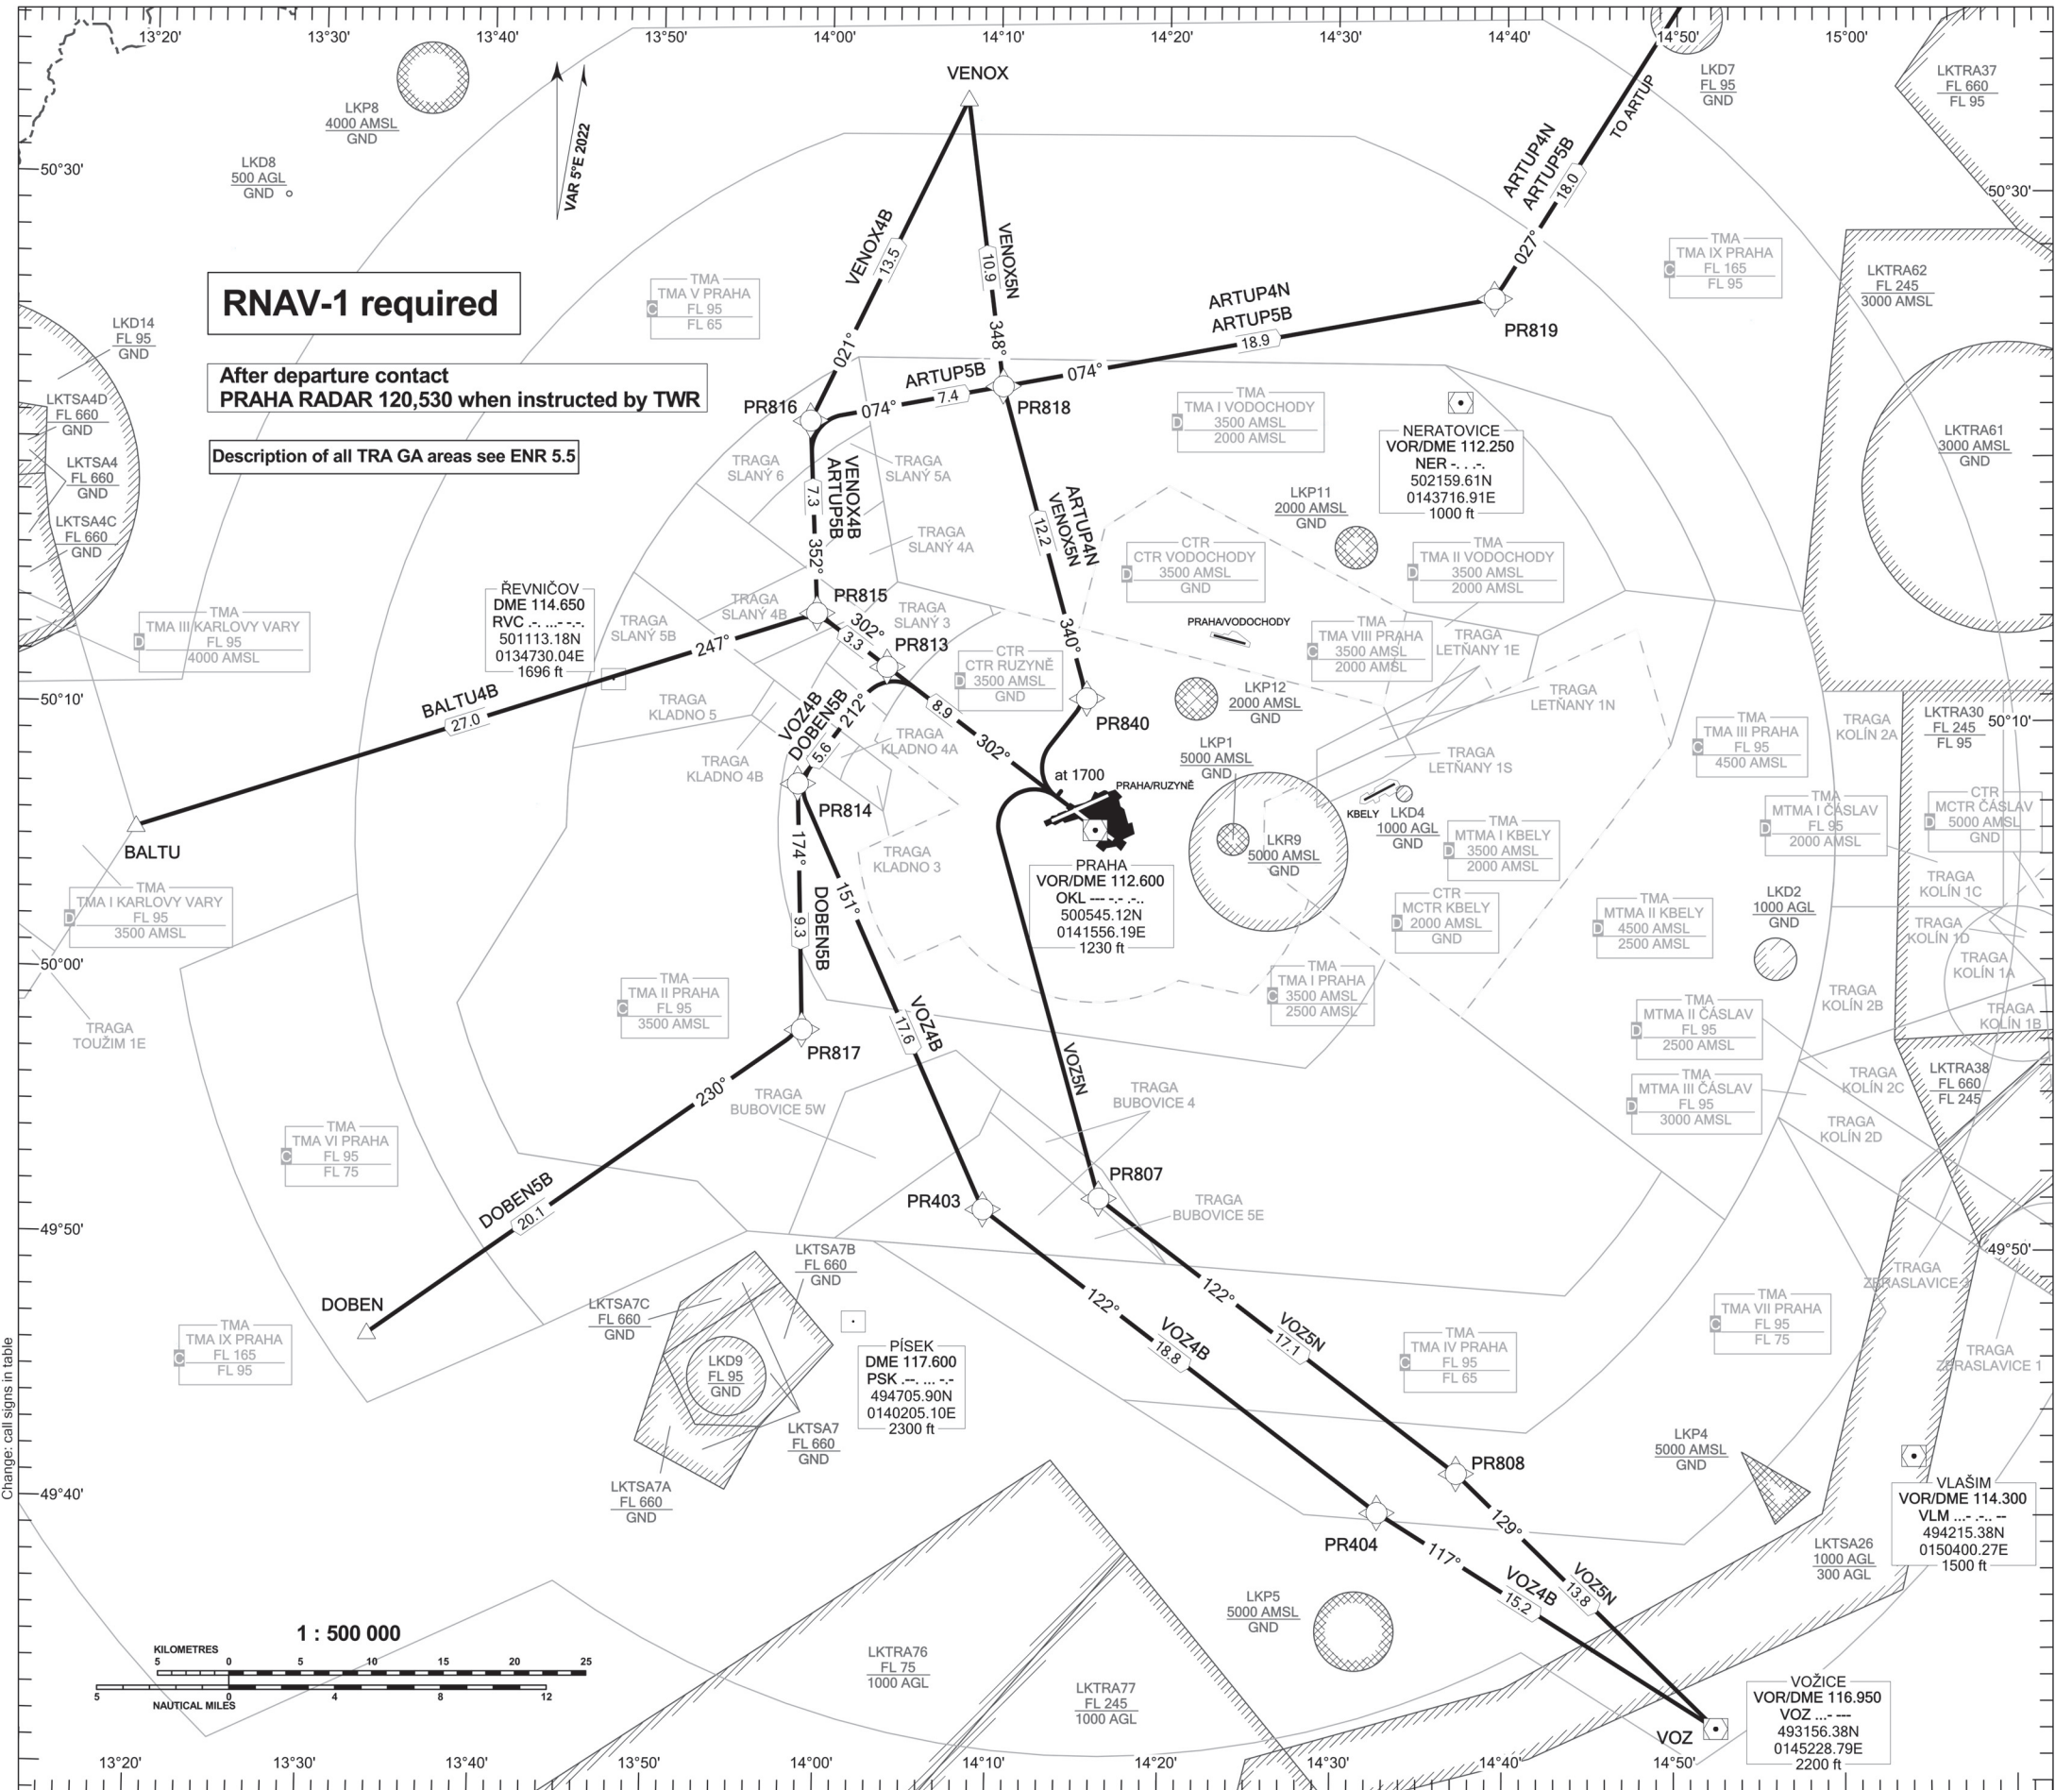


RNAV-1 required

After departure contact
PRAHA RADAR 120,530 when instructed by TWR

Description of all TRA GA areas see ENR 5.5

PRAHA RADAR	120.530
RUZYŇĚ RADAR	119.010
RUZYŇĚ RADAR	118.310
SUPPLEMENTARY FREQ APP	136.080
RUZYŇĚ DELIVERY	120.060
RUZYŇĚ TOWER	134.560
SUPPLEMENTARY FREQ TWR	118.110
RUZYŇĚ GROUND	121.910
RUZYŇĚ ATIS	122.160
EMERGENCY FREQ	121.500

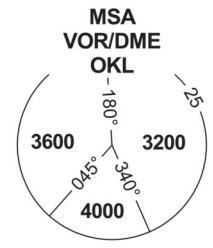

TRANSITION ALTITUDE
5000

BEARINGS, TRACKS AND RADIALS ARE MAGNETIC
ALTITUDES AND ELEVATIONS ARE IN FEET
DISTANCES ARE IN NM

DEPARTURE SPEED LIMIT BELOW FL 100	
JETS	MAX IAS 250 KT
PROPS	MAX IAS 180 KT

see AIP AD 2-LKPR-33, 2.22.4.3.5

