



M992* - CDR

	FRA boundary
	Cross-border FRA operations
	E - FRA Horizontal Entry Point
	X - FRA Horizontal Exit Point
	I - FRA Intermediate Point
	A - FRA Arrival Connecting Point
	D - FRA Departure Connecting Point
	LANUX (IAD) FRA significant point (FRA relevance) i.e. LANUX (Intermediate/Arrival/Departure)
	SKODA** FRA relevance - see AIP of the concerned countries
	EUNPZ** NPZ - Non-standard Planning zone
	distance in NM bearing in *MAG
	CDR1 one way
	RNAV routes

For flight planning CTA 1 / TMA Praha see Route Availability Document (RAD)
For FRA significant points conditions see ENR 4, 1, 4.4 and RAD

CHANGE : new NPZ; Sectors; FRA relevance of FRA Significant Points