

Do not fly over surrounding villages below 1000 ft / 300 m AGL. The field is unsuitable for operations after prolonged rainfall. Snow removal is not provided. Overhead power lines are located SE and W of the field. The field is located under LKTRA78 Soběslav FL245 / 1000 AGL. Model aircraft operators give priority to airplanes. Arrivals only with prior telephone approval from the operator. Taxi with regard to other traffic, taxi on the runway.

Objezdec

1404

Smržov

1:200 000

Dobřejovice

