

## GEN-1 INTRODUCTION

- 1.1 General
  - 1.1.1 The VFR manual of the Czech Republic is published by authority of the Air Navigation Services of the Czech Republic – AIM Centre.
  - 1.1.2 The information contained in this manual relates to pilots of VFR flights executed within airspace of the Czech Republic territory.
  - 1.1.3 Pilots of VFR flights intending to carry out international VFR flight shall be aware that this manual doesn't contain rules and procedures that may be applied abroad and therefore they should consult the AIP or VFR Manual of the appropriate State.
  - 1.1.4 Pilots of VFR flights shall be aware that this manual does not substitute more comprehensive information contained in the AIP CR.
  - 1.1.5 In the event of conflict between information in this manual and the AIP, information in the AIP shall be regarded as the authoritative source.
  - 1.1.6 Any changes affecting the contents of this manual will be amended on the appropriate AIRAC date – or as soon as possible thereafter.

### 1.2 The VFR Manual structure

- 1.2.1 Part 1 - General (VFR-GEN)
- 1.2.2 Part 2 - En-route (VFR-ENR)
- 1.2.3 Part 3 - Aerodromes (VFR-AD)
- 1.2.4 Part 4 - SLZ fields (VFR-SLZ)
- 1.2.5 Part 5 - Heliports (VFR-HEL)

### 1.3 Contact in case of detecting errors or omissions

In compilation of the VFR manual, care has been taken to ensure that the information contained therein is accurate and complete. Any errors and omissions which may nevertheless be detected, as well as any correspondence concerning the VFR manual, should be forwarded to:

Air Navigation Services of the CR  
AIM Centre  
Navigační 787  
252 61 Jeneč  
aim@ans.cz  
☎ +420 220 372 702

---

Chapter end

---

**Intentionally left blank**