

LKPR PRAHA/Ruzyně

ARP: 50° 06' 03" N, 14° 15' 36" E
277° GEO - 10 km Prague castle
ELEV: 1234 ft / 376 m



RUZYNĚ ATIS 122,160

RUZYNĚ RADAR 118,310

PRAHA RADAR 120,530


PRAHA RADAR 127,580

RUZYNĚ TOWER 134,560

RUZYNĚ GROUND 121,910

RUZYNĚ DELIVERY 120,060


Public international aerodrome IFR, VFR

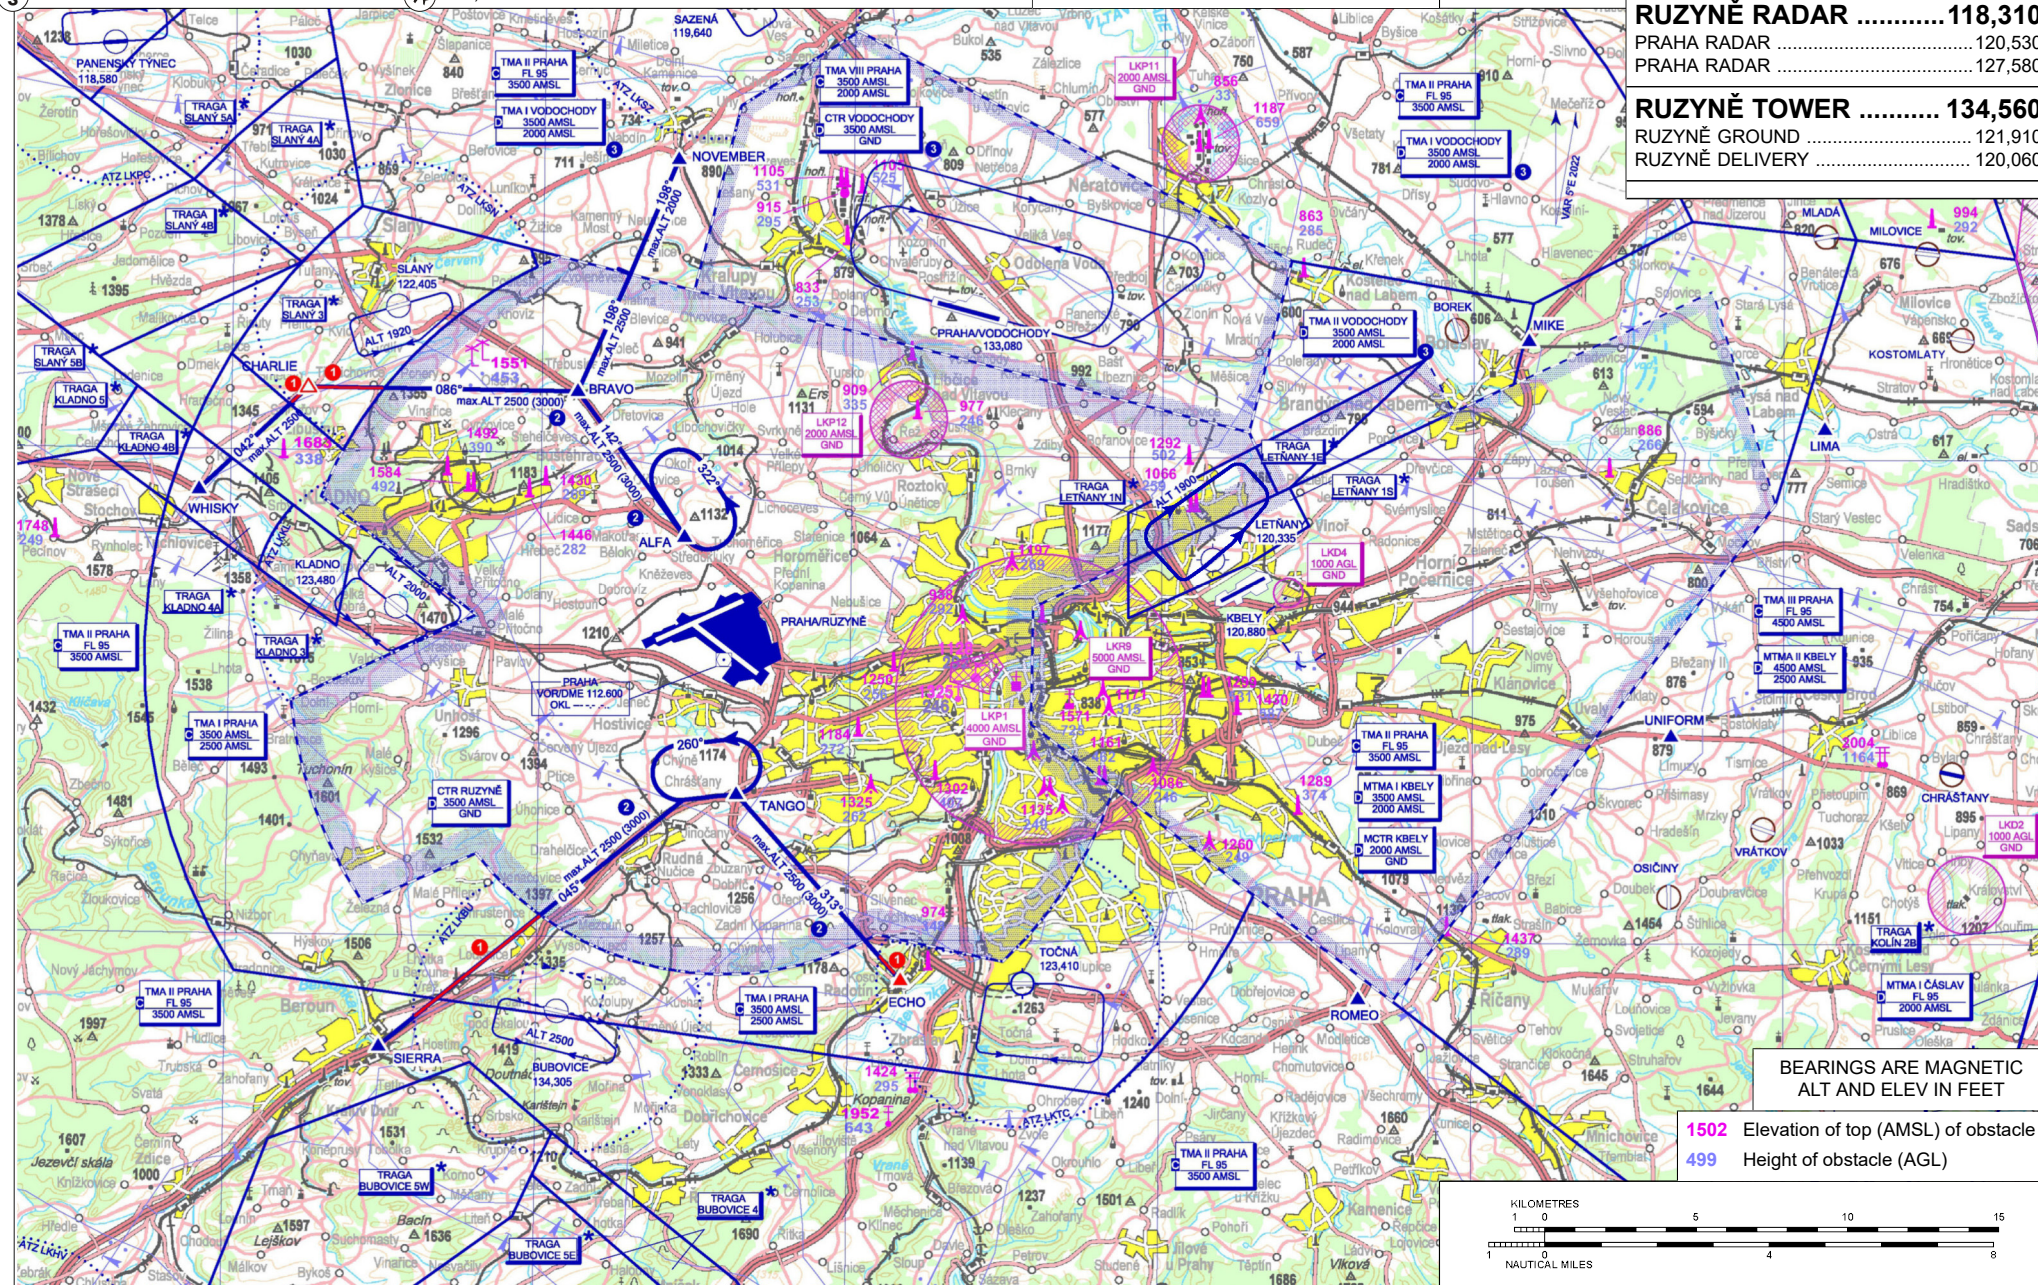

BEARINGS ARE MAGNETIC
ALT AND ELEV IN FEET

DESIGNATION	LOCATION	COORDINATES	
ECHO	Radotín (railway station)	49° 59' 10" N 014° 21' 41" E	Entry / exit
NOVEMBER	Velvary (silo)	50° 16' 06" N 014° 14' 21" E	Entry / exit
SIERRA	Beroun (motorway bridge)	49° 57' 42" N 014° 04' 58" E	Entry / exit
WHISKY	Kačice (motorway flyover)	50° 09' 10" N 013° 58' 59" E	Entry / exit
ALFA	Petrol station	50° 08' 17" N 014° 14' 38" E	
BRAVO	Railway flyover	50° 11' 16" N 014° 11' 09" E	
CHARLIE	Castle	50° 11' 18" N 014° 02' 28" E	
TANGO	Motorway interchange	50° 02' 59" N 014° 16' 22" E	

ARRIVAL ROUTES	WAYPOINT SEQUENCE
NOVEMBER 2	NOVEMBER - BRAVO - ALFA
WHISKY 2	WHISKY - CHARLIE - BRAVO - ALFA
SIERRA 2	SIERRA - TANGO
ECHO 2	ECHO - TANGO
DEPARTURE ROUTES	WAYPOINT SEQUENCE
NOVEMBER 2	ALFA - BRAVO - NOVEMBER
WHISKY 2	ALFA - BRAVO - CHARLIE - WHISKY
SIERRA 2	TANGO - SIERRA
ECHO 2	TANGO - ECHO

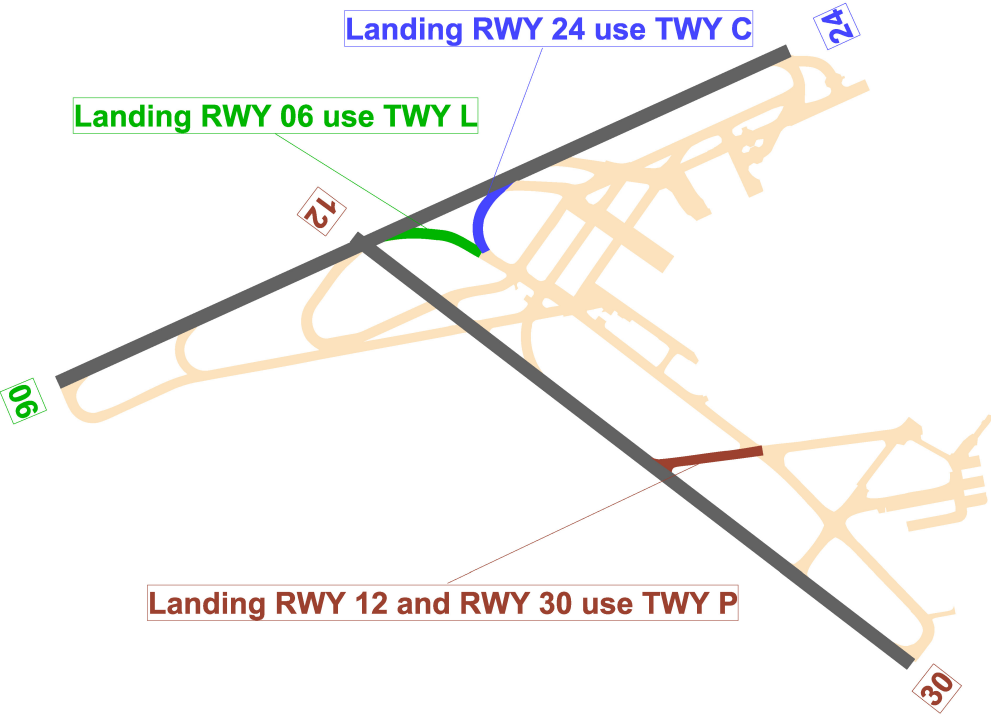

- 3 Activation rules for CTR/TMA VODOCHODY and TMA VIII PRAHA
- TMA VIII PRAHA is effective only if CTR and TMA II Vodochody is not active. Information about status of CTR and TMA II Vodochody is broadcasted on **FREQ 123,030**.
- Outside of activation time TMA I Vodochody the area expires and the airspace classification is changed to class E. Information about status of TMA I Vodochody is broadcasted on **FREQ 123,030**.


LKPR PRAHA/Ruzyně



Ruzyně TOWER
134,560
Ruzyně GROUND
121,910
Ruzyně DELIVERY
120,060


ANNUAL RATE
OF CHANGE +10"
VAR 2° 20'Z
GUND (Geoid Undulation) IN ft / m
ELEVATIONS IN ft / m
DIMENSIONS IN m
BEARINGS ARE MAGNETIC

Circumnavigation of other aircraft within the holding areas is the responsibility of the Pilot-In-Command as wing tip clearance is not assured

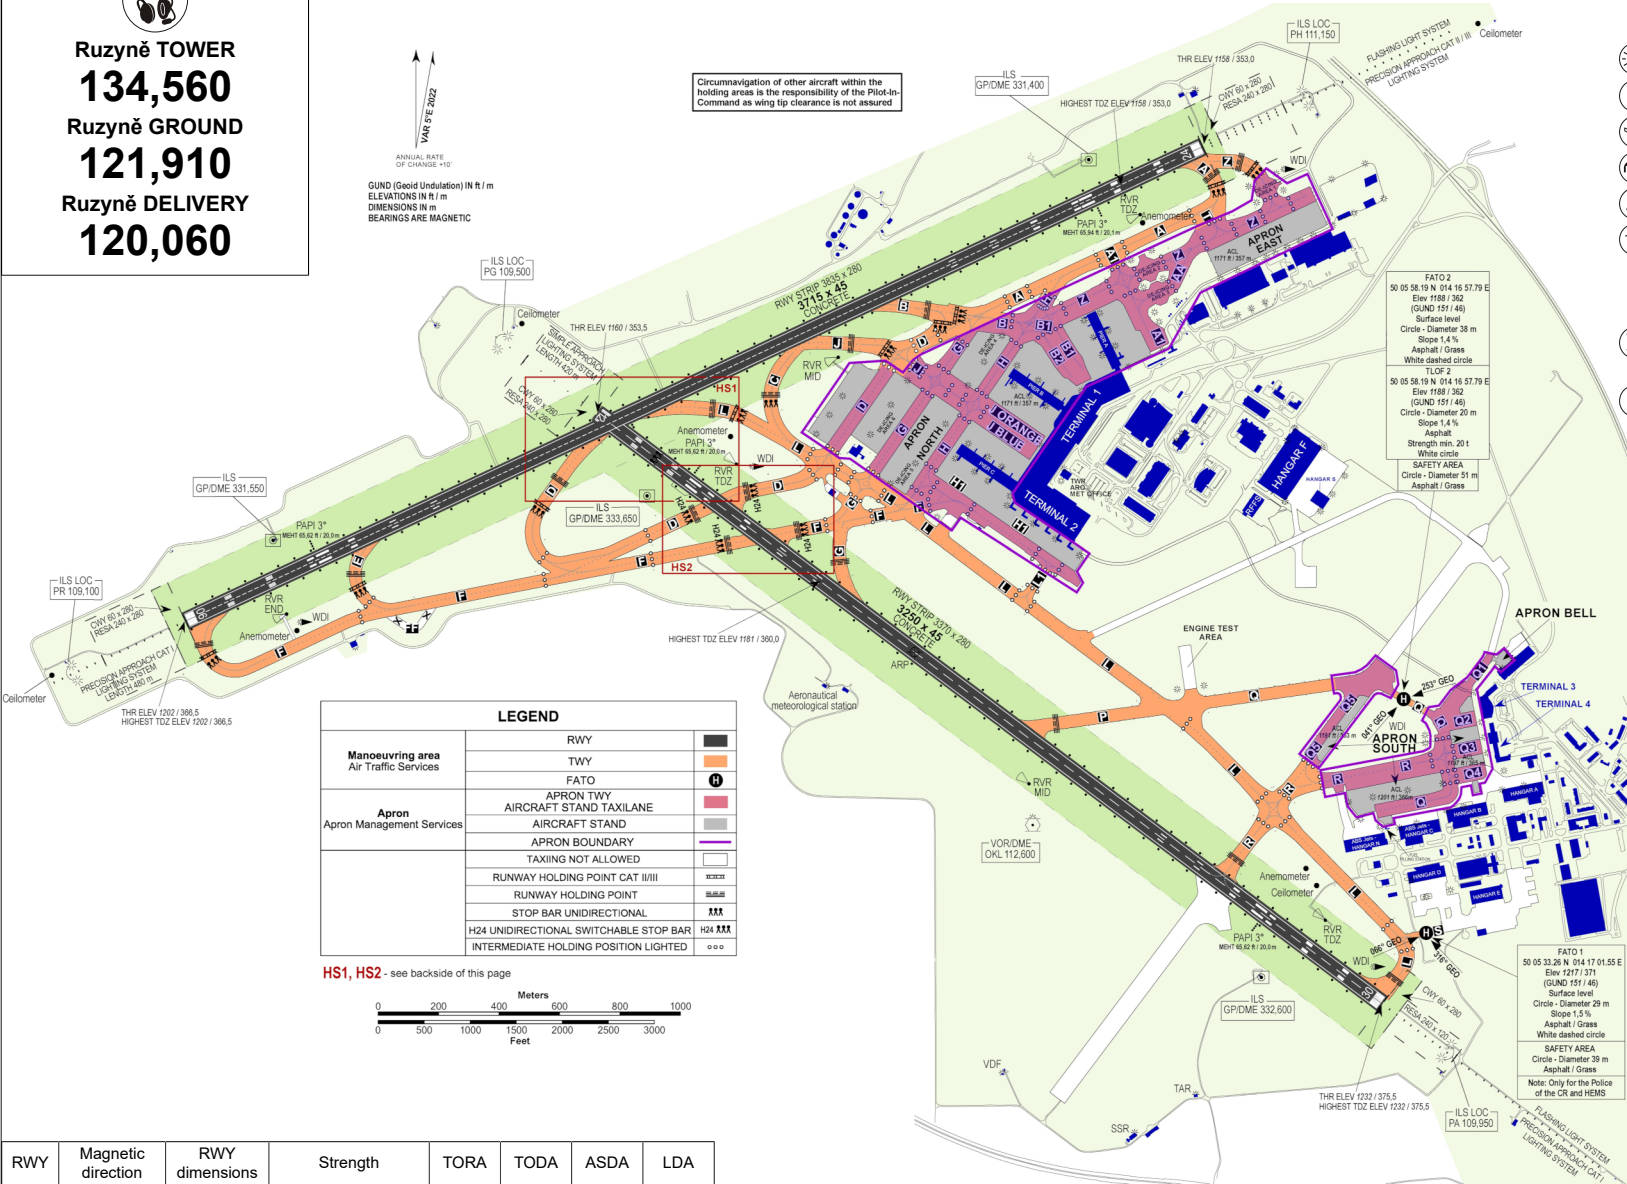

LEGEND	
Manoeuvring area Air Traffic Services	RWY
	TWY
	FATO
Apron Apron Management Services	APRON TWY
	AIRCRAFT STAND TAXILANE
	AIRCRAFT STAND
	APRON BOUNDARY
	TAXIING NOT ALLOWED
	RUNWAY HOLDING POINT CAT II/III
	RUNWAY HOLDING POINT
	STOP BAR UNIDIRECTIONAL
	H24 UNIDIRECTIONAL SWITCHABLE STOP BAR
	INTERMEDIATE HOLDING POSITION LIGHTED

 HS1, HS2 - see backside of this page



RWY	Magnetic direction	RWY dimensions	Strength	TORA	TODA	ASDA	LDA
06	060°	3715 x 45	PCN 75/R/B/W/T	3715	3775	3715	3715
24	240°	3715 x 45	PCN 75/R/B/W/T	3715	3775	3715	3715
12	122°	3250 x 45	PCN 62/R/B/X/T	3250	3310	3250	3250
30	302°	3250 x 45	PCN 62/R/B/X/T	3250	3310	3250	3250



Letiště Praha, a.s.
K Letišti 6/1019, 160 08 Praha 6,
Ruzyně, ☎ +420 220 111 111,
☎ +420 220 115 890,
☎ +420 235 350 922,
LKPR@prg.aero, AFTN: LKPRYDYX

H 24

Turbo Fuel JET A-1, AVGAS 100 LL

NIL

O/R

O/R

Holiday Inn Prague Airport, Ramada Airport
Hotel Prague, Courtyard by Marriott Prague
Airport. Accommodation service of travel
agencies in buildings of terminals 1, 2 and 3.

Restaurant in buildings of terminal 1, 2 and
3.


Rent a car, public transport, taxi including
taxi minibuses, regular transport by bus and
individual transport by car.

Customs and immigration clearance: H 24


After landing on RWY 06/24 vacation via
RWY 12 is prohibited unless otherwise
stated by ATC. There is prohibited taxiing of
aircraft to RWY 12 along RWY 06/24 with
exemption of the segment between TWY L
and TWY D.

RWY 06/24 IN USE

Possible misidentification of TWY D, RWY 12 AND TWY L.
After landing on RWY 06/24 do not vacate via RWY 12 unless explicitly instructed by ATC to do so.

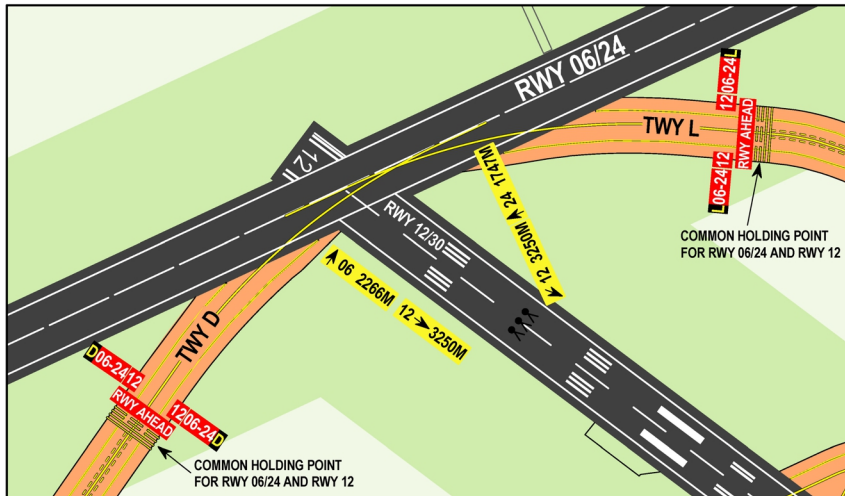**HS1****TWYs D and F cross the active RWY 12/30**

The Stop Bars on TWYs D and F are controlled automatically. Pilots must expect a short delay between the clearance to cross the active RWY and the consequent Stop Bar switch-off.

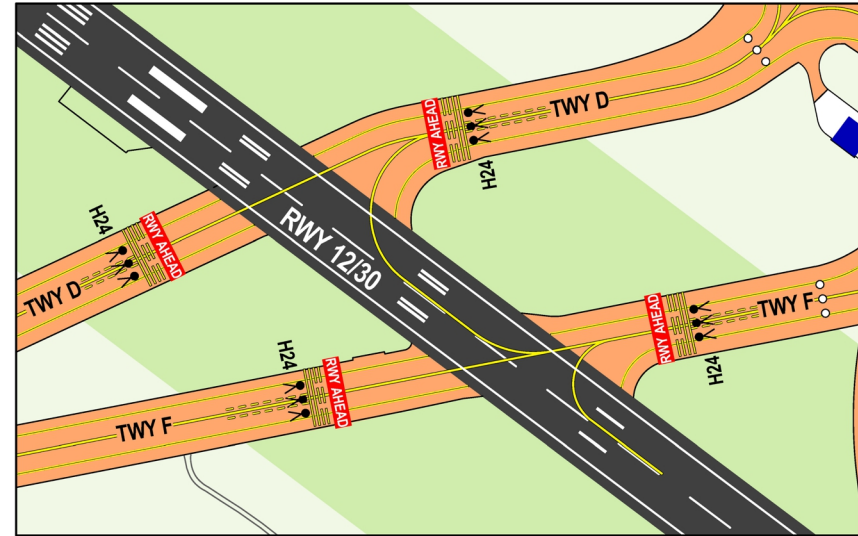**HS2**

Parking / Docking Chart - APRON SOUTH



Intentionally left blank