




Liberec RADIO
122,605

RWY	Magnetic direction	RWY dimensions	Strength	TORA	TODA	ASDA	LDA
15L	150°	1020 x 23	5700 kg / 0.5 MPa	1020	1080	1020	900
33R	330°	1020 x 23	5700 kg / 0.5 MPa	900	960	1020	900
15R	150°	1020 x 50	5700 kg / 0.5 MPa	1020	1080	1020	900
33L	330°	1020 x 50	5700 kg / 0.5 MPa	900	960	1020	900

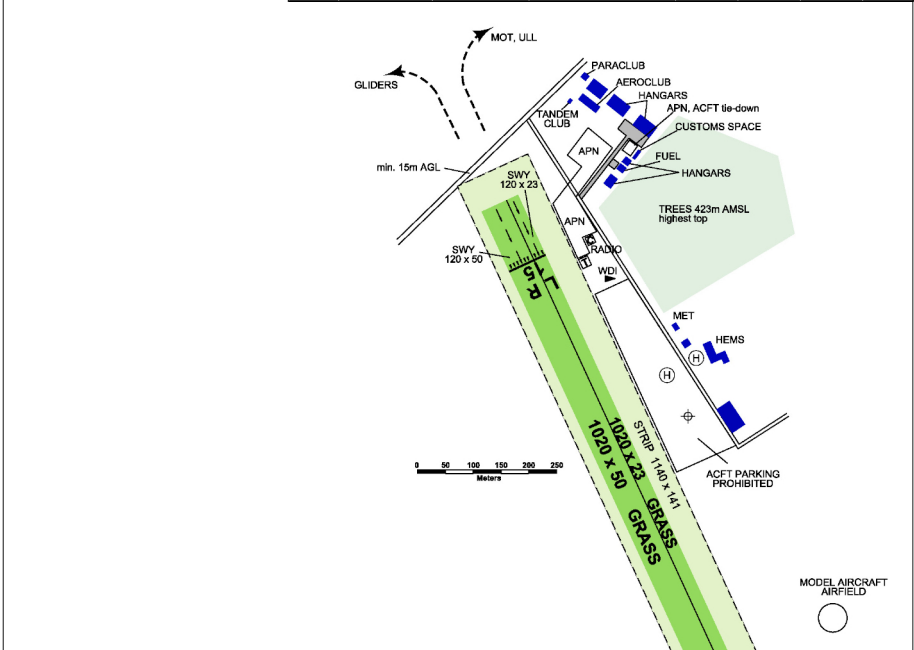



Statutární město Liberec
Nám. Dr. E. Beneše 1, 460 59 Liberec 1,
☎ +420 485 243 111

Aeroklub Liberec z.s. Ostašovská 569/65, 460 11
Liberec 11, ☎ +420 778 006 446
Tomáš Kulhavý (head of air traffic) ☎ +420 720 046 104,
tom.kulhavy@seznam.cz
Professional Meteorological Station ☎ +420 606 779 570

Customs and immigration clearance: After agreement with Aeroklub Liberec MIN 24 HR in advance on ☎ +420 720 046 104.	 HO (Aeroklub Liberec) otherwise O/R
Taxiing prohibited outside movement area marked by barrels.	 BA 95
Aircraft and helicopters are prohibited from parking on places marked on ADC due to disruption of HEMS approach path. It is also forbidden to park on unapproved space, these areas are outside marked movement areas of the aerodrome.	 NIL
	 O/R, limited
	 O/R, limited
	 hotels Liberec
	 NIL
	 bus 27, 600, 14, 16, taxi ☎ +420 602 410 760