


# TAXI ROUTES FOR CRITICAL AIRCRAFT TYPES

## NÁMĚŠŤ

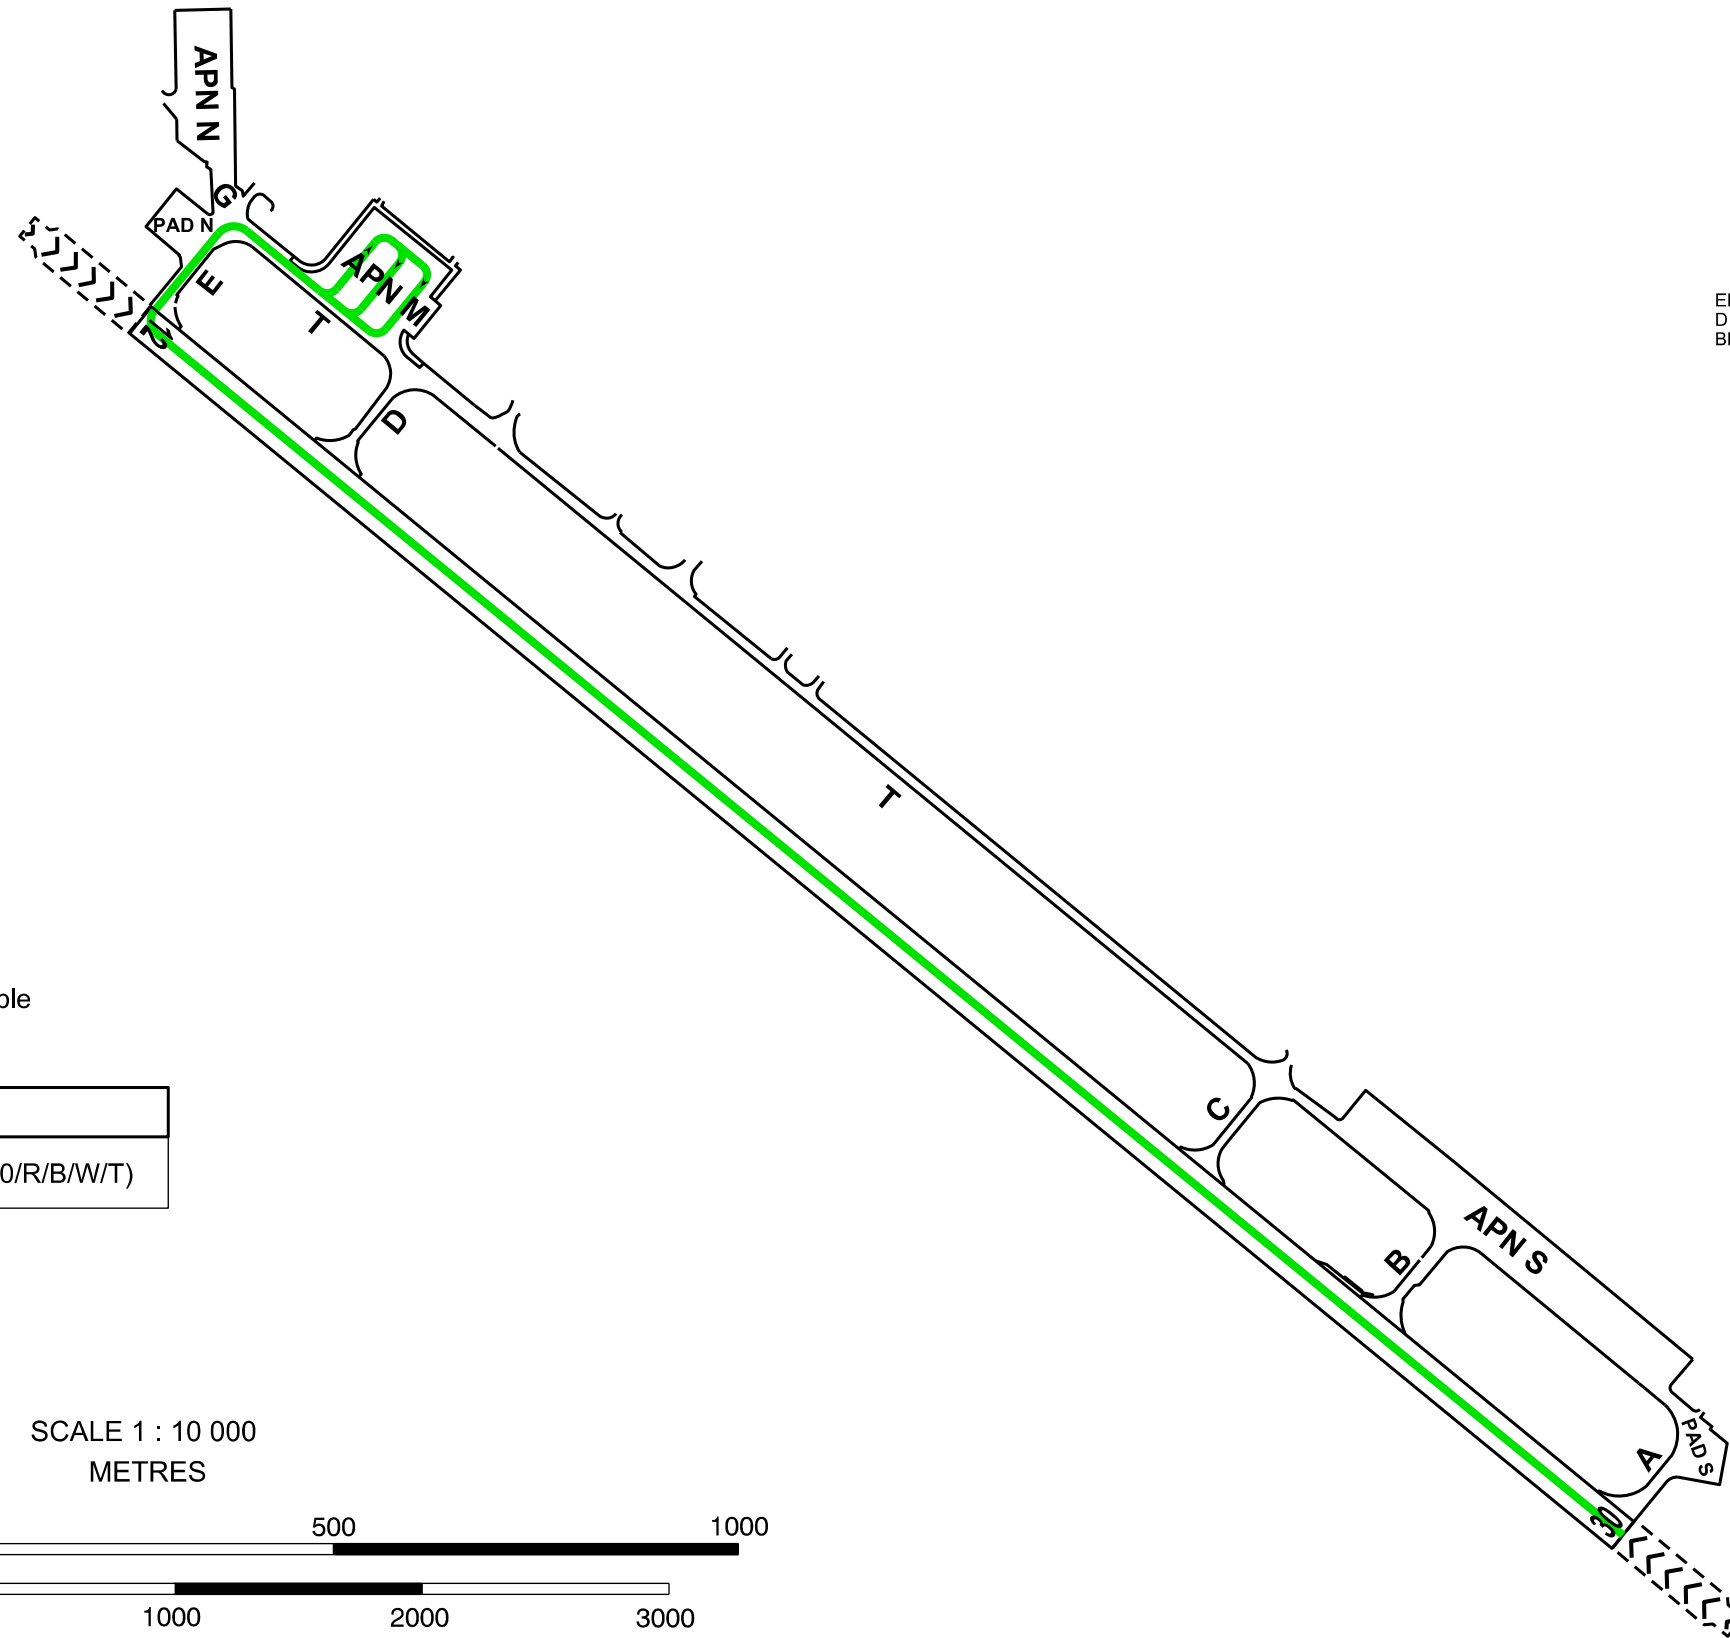


ELEVATIONS IN FEET / METRES  
 DIMENSIONS IN METRES  
 BEARINGS ARE MAGNETIC

Pilots are requested to  
 - use minimum thrust during taxiing  
 - taxi with outer engines off if applicable

LEGEND	
	Available taxi route (ACN 30/R/B/W/T)

SCALE 1 : 10 000  
 METRES

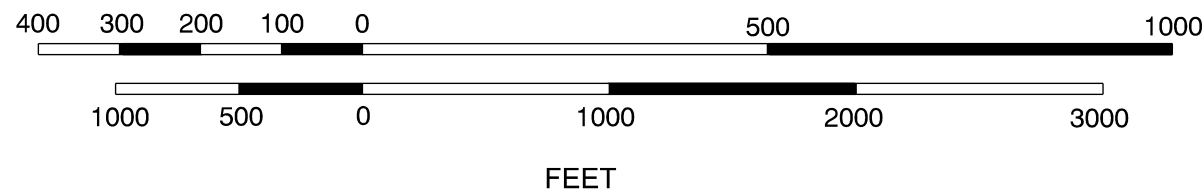

change: chart revision