



TAXI ROUTES FOR CRITICAL AIRCRAFT TYPES

NÁMĚŠŤ

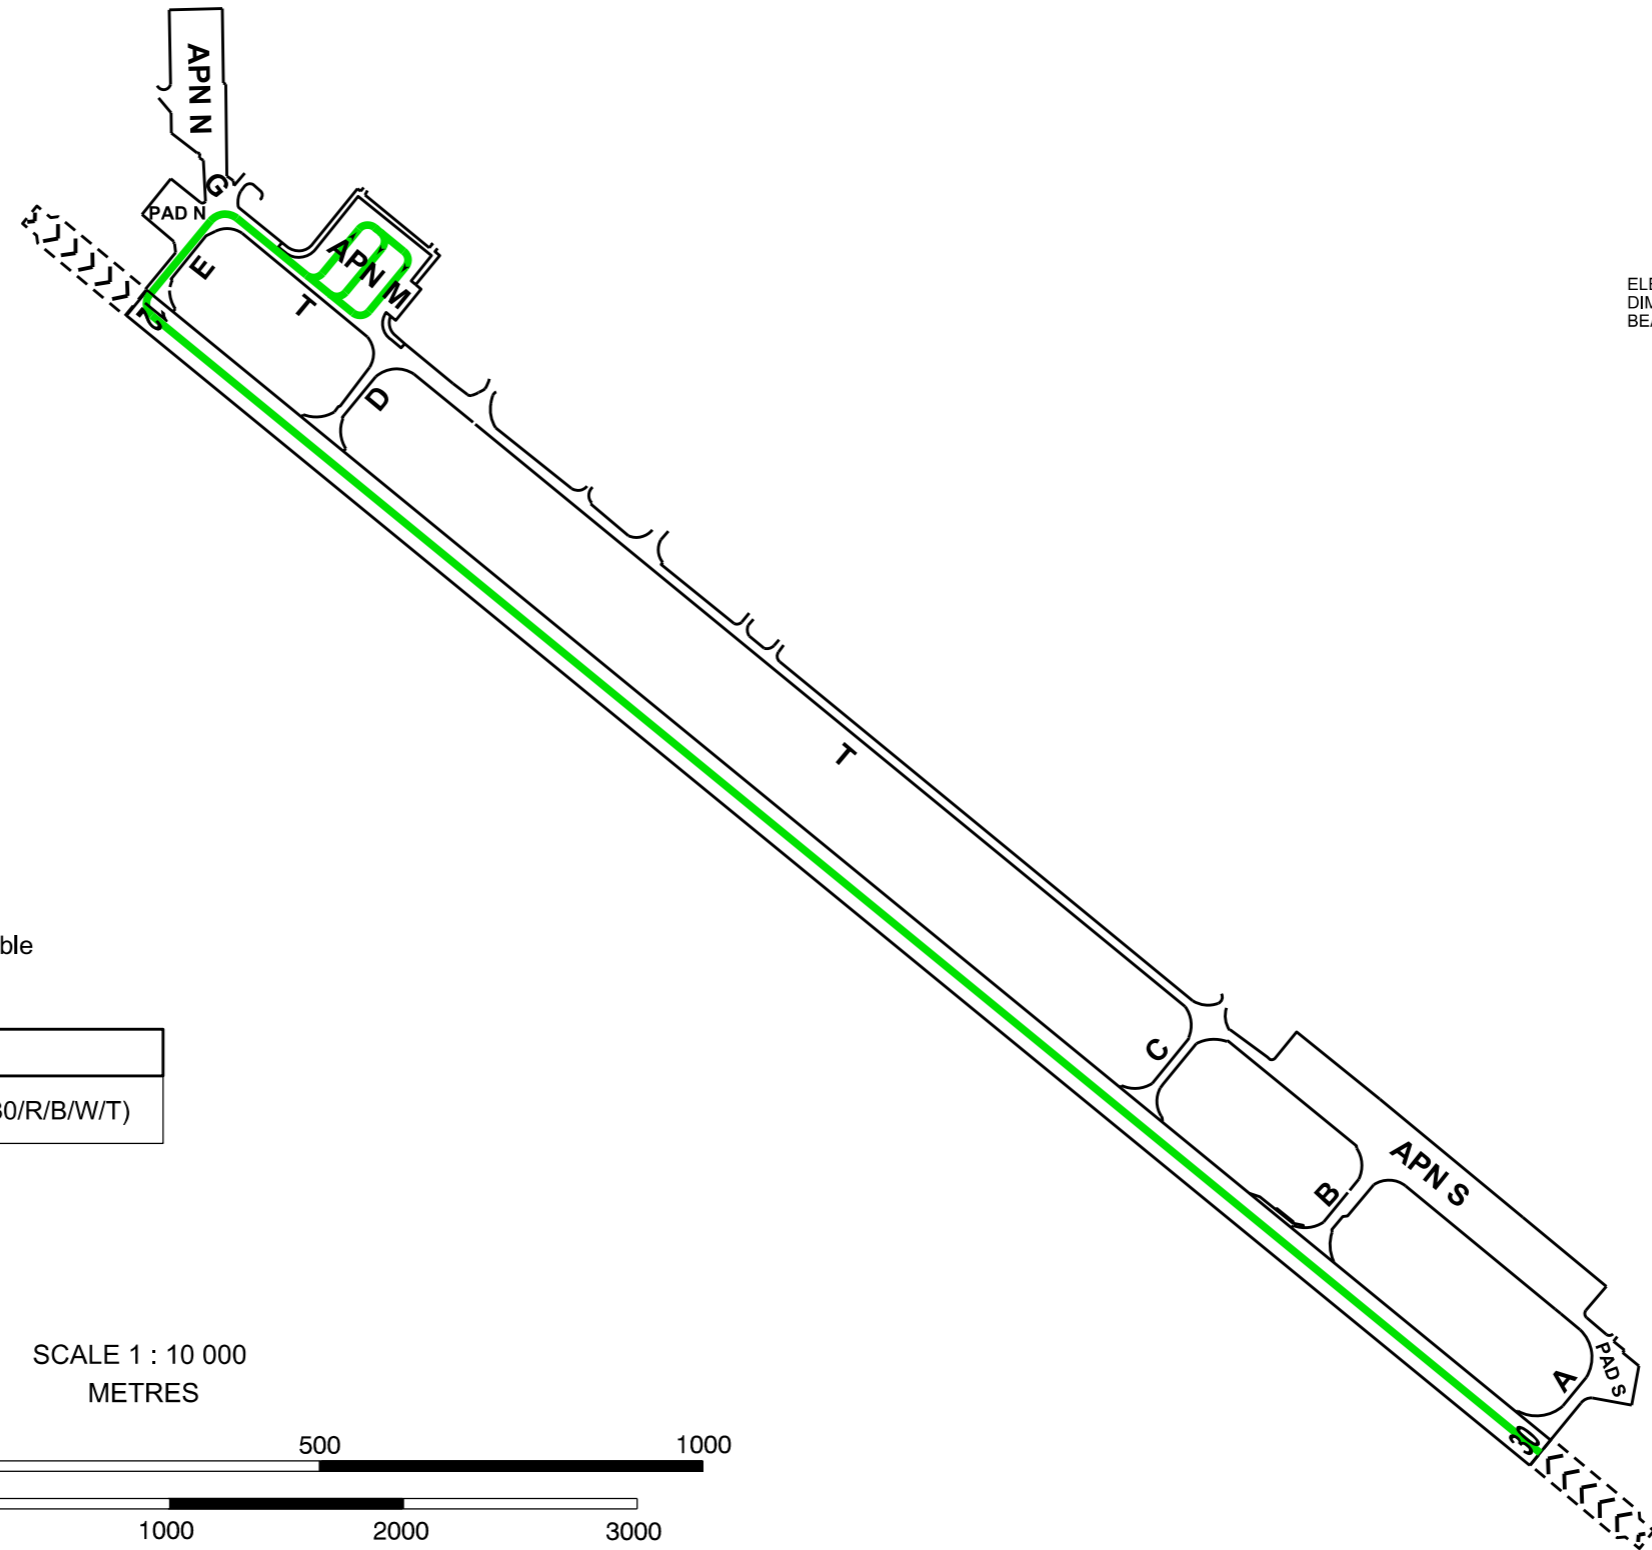


ELEVATIONS IN FEET / METRES
DIMENSIONS IN METRES
BEARINGS ARE MAGNETIC

Pilots are requested to
- use minimum thrust during taxiing
- taxi with outer engines off if applicable

| LEGEND | |
|---|---------------------------------------|
|  | Available taxi route (ACN 30/R/B/W/T) |

SCALE 1 : 10 000
METRES

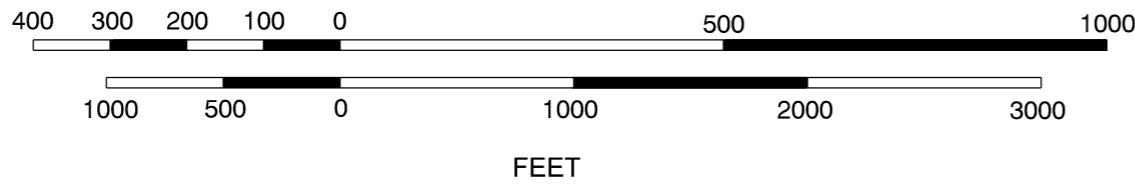

change: chart revision