



ARP: 49° 09' 05" N, 16° 41' 38" E
125° GEO - 7,5 km Brno railway station
ELEV: 778 ft / 237 m

 IFR, VFR

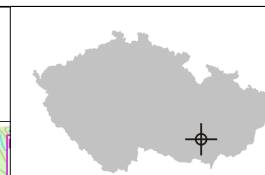


Tuřany ATIS
131,105
Tuřany VĚŽTOWER
119,605
PRAHA RADAR
127,350
124,050

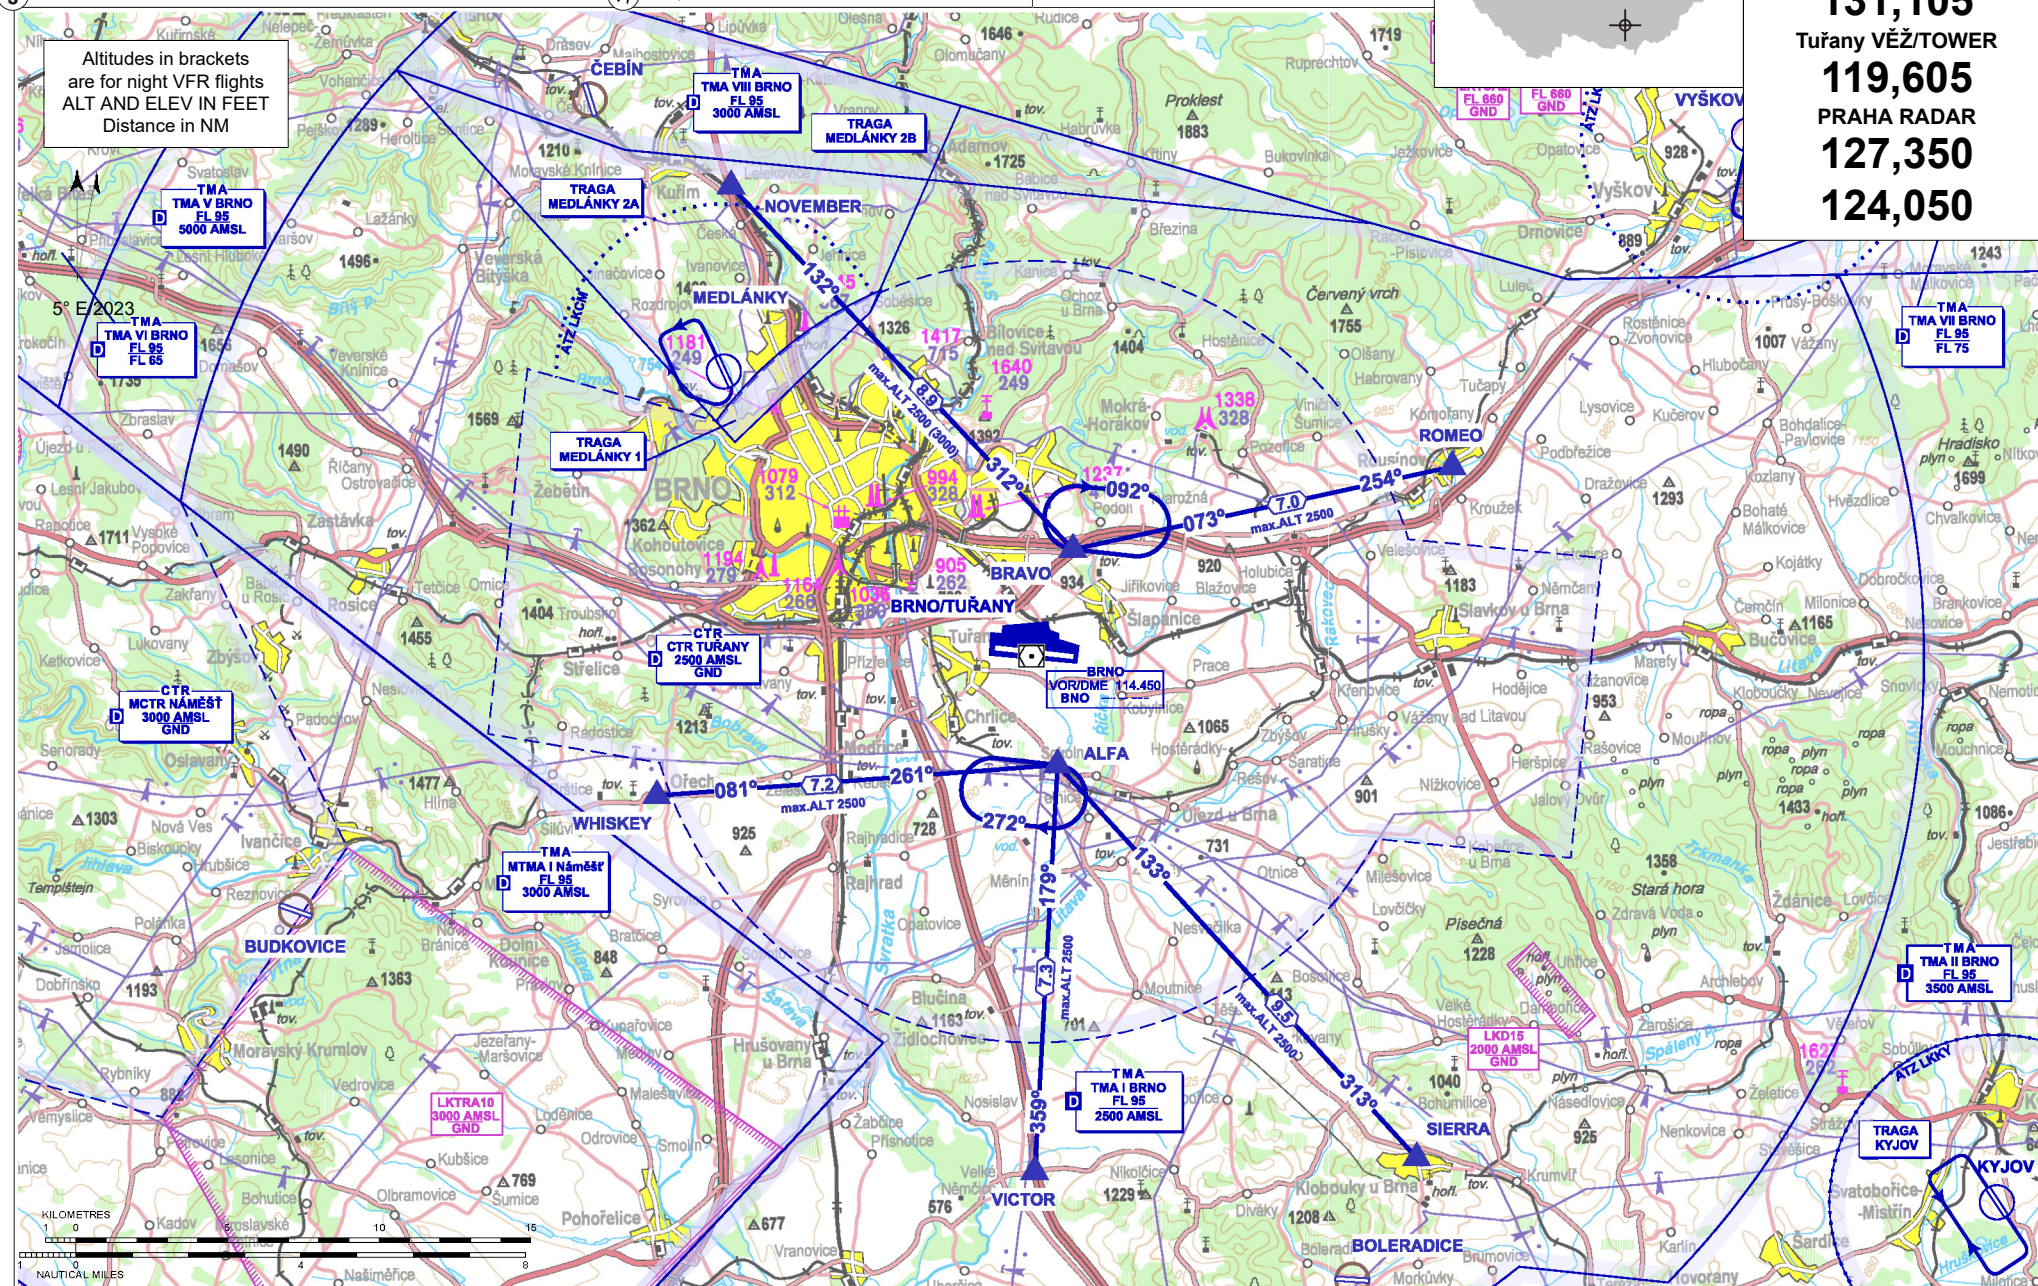

DESIGNATION	LOCATION	COORDINATES	
ALFA	Sokolnice (railway crossing)	49° 07' 03" N 016° 42' 12" E	Holding
BRAVO	Podolí (highway overpass)	49° 10' 54" N 016° 42' 45" E	Holding
NOVEMBER	Kuřim (railway crossing SE of town)	49° 17' 32" N 016° 33' 37" E	Entry / exit
ROMEO	Rousínov (church)	49° 12' 13" N 016° 53' 10" E	Entry / exit
SIERRA	Klobouky u Brna	48° 59' 52" N 016° 51' 44" E	Entry / exit
VICTOR	Velké Němčice intersection of the highway and minor road NE of the city	48° 59' 47" N 016° 41' 20" E	Entry / exit
WHISKEY	Ořechov (church)	49° 06' 39" N 016° 31' 15" E	Entry / exit

ARRIVAL ROUTES	WAYPOINT SEQUENCE
NOVEMBER 1	NOVEMBER - BRAVO
ROMEO 1	ROMEO - BRAVO
SIERRA 1	SIERRA - ALFA
WHISKEY 1	WHISKEY - ALFA
VICTOR 1	VICTOR - ALFA
DEPARTURE ROUTES	WAYPOINT SEQUENCE
NOVEMBER 1	BRAVO - NOVEMBER
VICTOR 1	BRAVO - VICTOR
SIERRA 1	ALFA - SIERRA
WHISKEY 1	ALFA - WHISKEY
ROMEO 1	ALFA - ROMEO


LKTB BRNO/Tuřany



Tuřany VĚŽ/TOWER

119,605

Tuřany GROUND

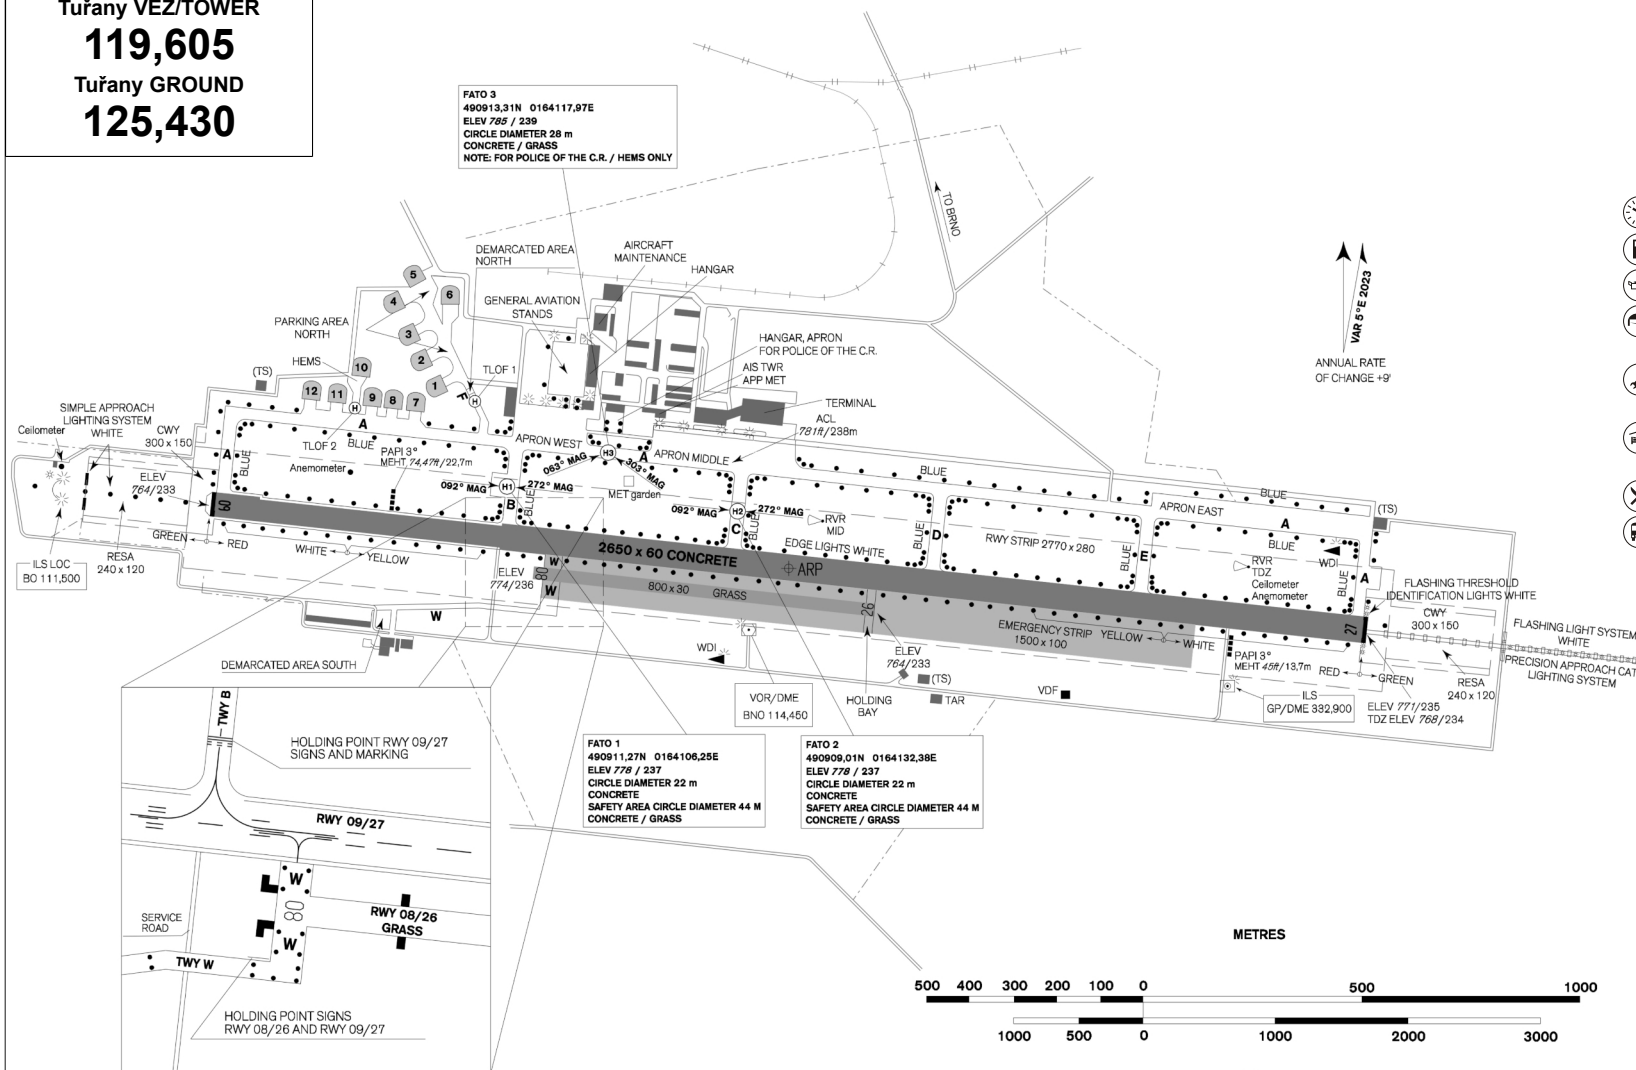125,430

RWY	Magnetic direction	RWY dimensions	Strength	TORA	TODA	ASDA	LDA
09	092°	2650 x 60	PCN 48/R/A/X/T	2650	2950	2650	2650
27	272°	2650 x 60	PCN 48/R/A/X/T	2650	2950	2650	2650
08	092°	800 x 30	5700 kg / 1,5 MPa	800	860	800	800
26	272°	800 x 30	5700 kg / 1,5 MPa	800	860	800	800

**LETISTE BRNO a.s.**

Letiště Brno - Tuřany 904/1, 627

00 Brno, ☎ +420 545 521 111,

☎ +420 545 216 346,

AFTN: LKTB DYX, SITA: BRQCZ7X

Handling agent at the airport Brno/Tuřany:

LETISTE BRNO a.s. (for all

flights) - ☎ +420 545 521 309,

☎ +420 545 521 310,

☎ +420 545 216 346,

handling@airport-brno.cz,

AFTN: LKTB DYX, SITA: BRQCZ7X

(FREQ: 131.805, call sign BRNO

HANDLING)



H24



Jet A1, AVGAS 100 LL



Not available



Limited for GA aircraft - on request at the aerodrome operator



Contact the airport operator for possibility of aircraft repairs.



Hotels in the city - reservations available through the aerodrome operator.



In the terminal building.



Public transport, taxi, bus (shall be ordered in advance).

Customs and immigration clearance: H24

Taxiing from aprons to RWY 08/26 is led along concrete TWYs, RWY 09/27 and grassy TWYs. RWY 08/26 and grassy TWYs are located in the emergency strip south of RWY 09/27.

Aircraft after landing on the RWY 08/26, unless cleared to taxi, have to vacate RWY to the nearest marked holding bay or TWY W. Holding bay and TWY W are located south of RWY 08/26. Pilots have to report "RWY vacated" to TWR.

During taxiing to APN from RWY 08/26 the pilots have to ask for clearance to cross RWY 09/27.

During taxiing to RWY 08/26 the pilots have to stop on marked holding positions and ask for a clearance to cross RWY 09/27.



Intentionally left blank