

LKLT Letňany

§ Public domestic aerodrome / Private international aerodrome (✕) VFR day



Letňany RADIO

120,335

Kbely TWR


120,880

ARP: 50° 07' 53" N, 14° 31' 32" E

7 km NE Praha - centrum

ELEV: 912 ft / 278 m

Circuit: 1900 ft / 580 m AMSL

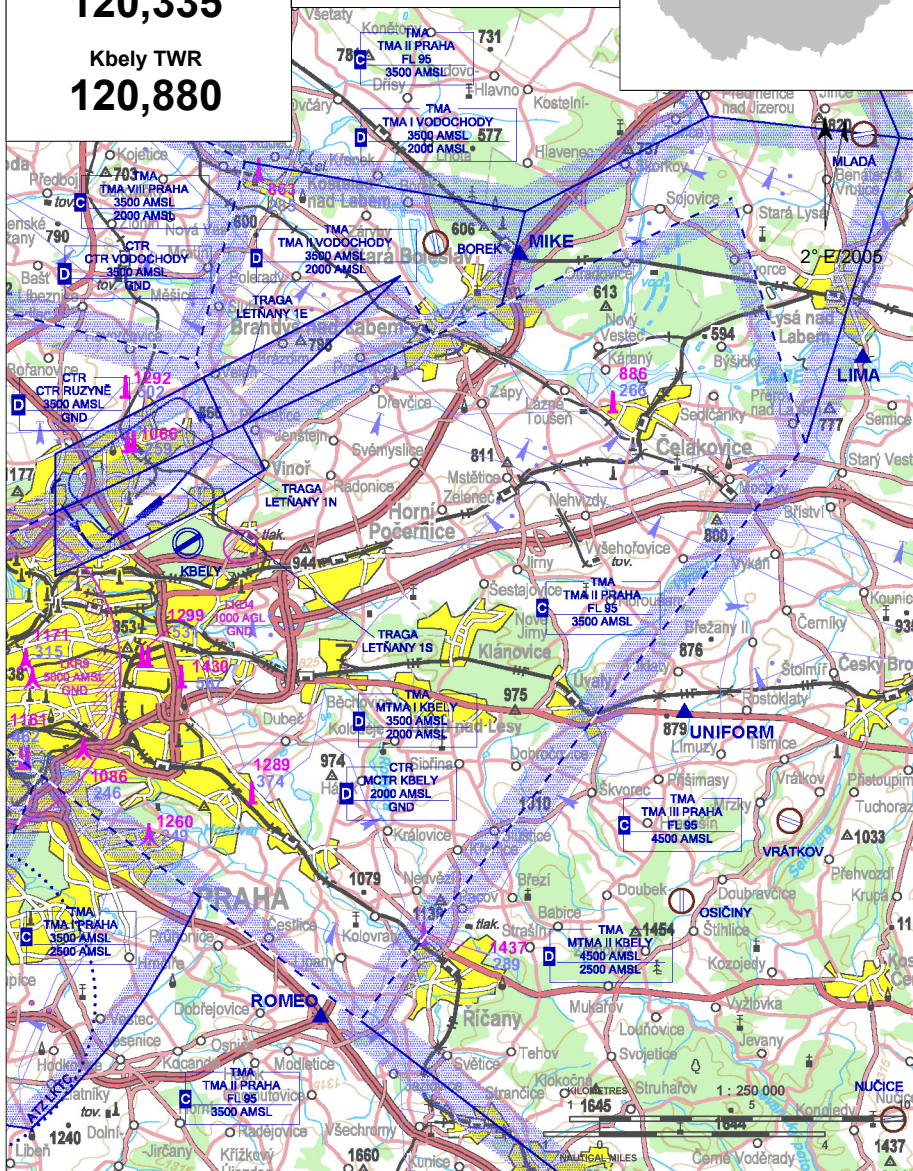

LKLT Letňany



Letňany RADIO
120,335

Kbely TWR
120,880

RWY	Magnetic direction	RWY dimensions	Strength	TORA	TODA	ASDA	LDA
05L	044°	860 x 23	5700 kg / 0.4 MPa	1000	1030	1030	860
23R	224°	860 x 23	5700 kg / 0.4 MPa	860	1000	1000	860
05R	046°	800 x 25	5700 kg / 0.4 MPa	920	950	920	800
23L	226°	800 x 25	5700 kg / 0.4 MPa	800	920	800	800



Letiště Praha Letňany, s.r.o.

Hůlkova 1075/35, 197 00 Praha 9,
info@letnany-airport.cz

Providing information to known traffic Letňany unit

☎ +420 286 581 340

Robert Skribuckij (director of the aerodrome)

skribuckij@letnany-airport.cz

Head of Providing information to known traffic Letňany unit

☎ +420 725 912 020, info@letnany-airport.cz

Handling ☎ +420 702 185 744

Customs and immigration clearance: O/R (in writing, e-mail, fax),
MON - FRI 24 HR in advance, otherwise 48 HR in advance. Application form available at the aerodrome operator or on the aerodrome website

The thresholds of RWYs 05L and 05R are shifted behind the road. The road must be overflowed during take-off and landing in minimum altitude 15 m from the lowest part of aeroplane or towed object.

Parallel operation on RWY 05L/23R or RWY 05R/23L is strictly forbidden.

Crossing of RWY 06/24 LKKB axis subject to MTWR Kbely approval.



01 MAY - 01 OCT
MON-SUN: 0700 - 1700 UTC
02 OCT - 30 APR
MON-SUN: 0800 - 1600 UTC
otherwise O/R HO
For further information see "Additional information."



AVGAS 100 LL, Natural BA 95 MOGAS, JET-A1, AKI93



TOTAL 100 D, Aeroshell 15W50, Aeroshell Sportplus 4



O/R



NIL



hotels in Prague



Refreshment at the AD



subway line C - Letňany, buses of public transport

