

LKZB Zbraslavice


S Public domestic aerodrome

X VFR day



Zbraslavice RADIO
126,630

ARP: 49° 48' 51" N, 15° 12' 06" E
2,2 km GEO 080 Zbraslavice
ELEV: 1618 ft / 493 m
Circuit: 2618 ft / 793 m

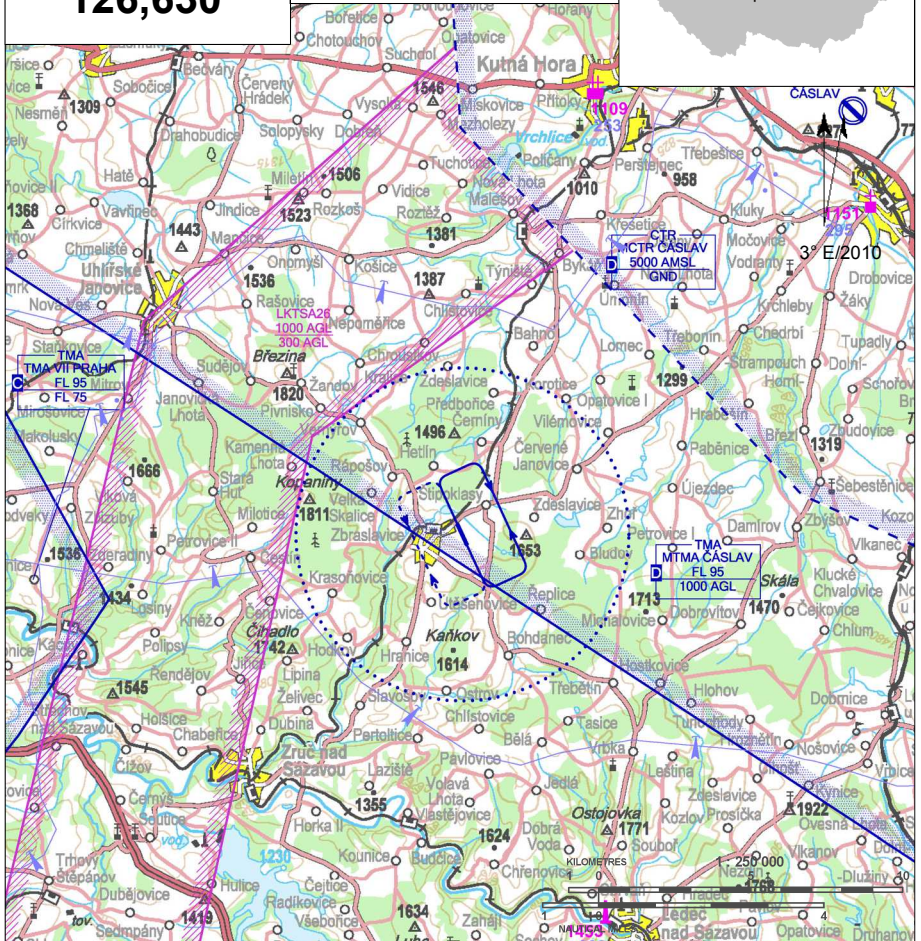

The aerodrome is located under MTMA Čáslav.

The road in the vicinity of THR RWY 15 shall be overflown during take-offs and landings at a minimum height 15 m from the lowest part of aircraft or a towed object.


Pilots-in-command are required to reduce flights over the town Zbraslavice and adjoining recreation estate (except take-offs and landings). Except areas of climbing and descending, villages located under traffic circuit of RWY 15/33 shall be overflown at minimum height 300 m/ 1000 ft AGL. The aeroplanes climbing after take-off from RWY 33, considering safe conduction of flight, shall avoid the village Hetlin.

LKZB Zbraslavice



Zbraslavice RADIO
126,630

RWY	Magnetic direction	RWY dimensions	Strength	TORA	TODA	ASDA	LDA
15	154°	780 x 150	5700 kg / 0.4 MPa	780	810	780	780
33	334°	780 x 150	5700 kg / 0.4 MPa	780	810	780	780

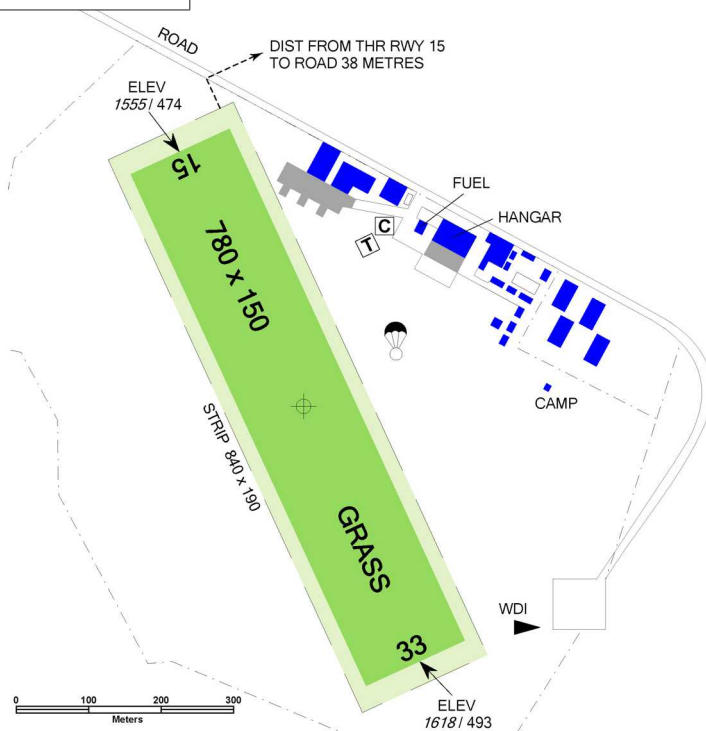

1 APR - 31 OCT
SAT, SUN, HOL 0600-1600
otherwise O/R



AVGAS 100LL, NATURAL BA 95



AEROSHELL 100/W100, SAE-15W 40



O/R, limited



Miroslav Manda ☎ +420 724 294 942 -
repairs and checks of Z126, Z326, Z226,
L40, L200, Z142, L13, L23



29 beds at the aerodrome - O/R, otherwise
hotel in the town Zbraslavice



snack bar at the AD with irregular op.
hours, otherwise restaurants in Zbraslavice



bus, train, rent car



Aeroklub Zbraslavice z.s.

letišťe 252, 285 21 Zbraslavice,

☎/☎ +420 327 591 286, ☎ +420 602 954 478

Martin Mezera - head of air traffic ☎ +420 602 954 478,
www.lkzb.cz, lkzb@lkzb.cz, vlp@lkzb.cz

Customs and immigration clearance: NIL



Air Navigation Services
of the Czech Republic